

S Model & Ice Beverage QuietQube_® Ice Machines

Technician's Handbook

This manual is updated as new information and models are released. Visit our website for the latest manual. www.manitowocice.com

America's #1 Selling Ice Machine

Part Number 80-1505-3 6/11

Safety Notices

As you work on Manitowoc equipment, be sure to pay close attention to the safety notices in this handbook. Disregarding the notices may lead to serious injury and/or damage to the equipment.

Throughout this handbook, you will see the following types of safety notices:

A Warning

Text in a Warning box alerts you to a potential personal injury situation. Be sure to read the Warning statement before proceeding, and work carefully.

⚠ Caution

Text in a Caution box alerts you to a situation in which you could damage the equipment. Be sure to read the Caution statement before proceeding, and work carefully.

Procedural Notices

As you work on Manitowoc equipment, be sure to read the procedural notices in this handbook. These notices supply helpful information which may assist you as you work.

Throughout this handbook, you will see the following types of procedural notices:

Important

Text in an Important box provides you with information that may help you perform a procedure more efficiently. Disregarding this information will not cause damage or injury, but it may slow you down as you work.

NOTE: Text set off as a Note provides you with simple, but useful, extra information about the procedure you are performing.

Read These Before Proceeding:

⚠ Caution

Proper installation, care and maintenance are essential for maximum performance and trouble-free operation of your Manitowoc equipment. If you encounter problems not covered by this handbook, do not proceed, contact Manitowoc Foodservice Group. We will be happy to provide assistance.

Important

Routine adjustments and maintenance procedures outlined in this handbook are not covered by the warranty.

Warning PERSONAL INJURY POTENTIAL

Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications.

We reserve the right to make product improvements at any time. Specifications and design are subject to change without notice.

Table of Contents

| General I | nformation |
|------------|--|
| | Model Numbers |
| | How to Read a Model Number14 |
| | Ice Cube Sizes |
| | Model/Serial Number Location16 |
| | Energy Efficient Ice Machine |
| | Serial Breaks |
| | Ice Machine Warranty Information17 |
| Installati | on |
| | Location of Ice Machine23 |
| | Ice Machine Head Section |
| | Clearance Requirements 24 |
| | Stacking Two Ice Machines on a |
| | Single Storage Bin25 |
| | Ice Deflector25 |
| | Removing the Front Panels 26 |
| | Location of CVD® Condensing Unit 27 |
| | Condensing Unit Clearance |
| | Requirements28 |
| | Bin Installation 29 |
| | S1470C/S1870C/S2070C/S2170C |
| | Installation on a Manitowoc Bin 31 |
| | Ice Machine on a Dispenser Installation 33 |
| | Ice Machine Head Section Water |
| | Supply and Drains |
| | Water Cooled Condenser Water Supply |
| | and Drains |
| | Electrical Requirements |
| | Refrigeration System Installation 41 |

| Operational Checks | 61 |
|--|-----|
| General | 61 |
| Water Level | 61 |
| Ice Thickness Check | 62 |
| Harvest Sequence Water Purge | |
| Electronic Bin Thermostat Instructions | |
| IB600C/IB680C/IB800C/IB1000C Only | |
| Positioning | 64 |
| Positioning | 04 |
| Component Identification | |
| Ice Machine Head Sections | 67 |
| CVD® Condensing Units | 71 |
| · · | |
| Maintenance | |
| General | |
| Cleaning / Sanitizing Procedure | 74 |
| Cleaning Procedure | 74 |
| Parts Removal for Cleaning/Sanitizing | 76 |
| Sanitizing Procedure | 83 |
| Procedure to Clean Heavily Scaled | |
| Ice Machines | 85 |
| General | 85 |
| Cleaning Procedure | 85 |
| Parts Removal for Cleaning/Sanitizing | |
| Sanitizing Procedure | |
| Additional Component Removal | 104 |
| Removal from Service/Winterization | 109 |
| General | |
| CVD1486 Water Cooled Condensing U | |
| ······ | |
| | 110 |
| Sequence of Operation | |
| Initial Start-Up or Start-Up After | |
| Automatic Shut-Off | 111 |
| Freeze Sequence | 113 |
| Harvest Sequence | |
| Automatic Shut-Off | |
| | |

| Troubleshooting |
|---|
| Safety Limits |
| Safety Limit Analysis |
| Safety Limit#1126 |
| Safety Limit #2127 |
| Safety Limit #3128 |
| Control Board Testing129 |
| Control Board Test Cycle129 |
| Troubleshooting By Symptom130 |
| Symptom #1 Ice Machine Will Not Run . 131 |
| Diagnosing an Ice Machine Head Section |
| that Will Not Run133 |
| Diagnosing a Condensing Unit |
| That Will Not Run134 |
| Compressor Electrical Diagnostics135 |
| Symptom #2 Low Production, Long Freeze |
| Cycle 138 |
| Symptom #2 - Refrigeration System Opera |
| tional Analysis Tables140 |
| Symptom #2 - Freeze Cycle Refrigeration |
| System Operational Analysis Table Proce- |
| dures |
| Symptom #3 Ice Will Not Harvest 166 |
| Ice Machine will Not Harvest Diagnostics |
| 166 |
| Harvest Problems |
| Symptom #3 Ice Will Not Harvest, Cubes Are |
| Not Melted Flowchart |
| Symptom #4 Ice Will not Harvest - Cubes Are |
| |

| Component Check Procedures | |
|--|-----|
| Electrical Components | 175 |
| Main Fuse | 175 |
| Bin Switch | 176 |
| Harvest Assist Air Pump | 179 |
| ICE/OFF/CLEAN Toggle Switch | |
| Ice Thickness Probe (Harvest Initiation) | |
| | 182 |
| Water Level Control Circuitry | 187 |
| Electronic Bin Thermostat Control | 193 |
| Compressor Electrical Diagnostics | 199 |
| Diagnosing Start Components | 201 |
| Refrigeration Components | 204 |
| Refrigerant Charge Verification | 204 |
| Suction Accumulator Operation | |
| Headmaster Control Valve | |
| Headmaster Valve Water-Cooled Cond | |
| ing Unit - CVD1476 | 212 |
| Water Regulating Valve CVD1476 | 214 |
| Fan Cycle Control | 215 |
| High Pressure Cutout (HPCO) Control | |
| Low Pressure Cutout (LPCO) Control | |
| Refrigerant Recovery/Evacuation | |
| Connections | |
| Recovery/Evacuation Procedures | |
| Charging Procedures | |
| System Contamination Cleanup | |
| Determining Severity of Contamination | |
| Cleanup Procedure | |
| Refrigerant Reuse Policy | 230 |

| IB0822DC/CVD885 Series Remote Air |
|---|
| Cooled Machines After Serial Number |
| 110682385 250 |
| IB0824YC/CVD885 Series Remote Air |
| Cooled Machines After Serial Number |
| 110682385 |
| SD1072C/SY1074C/CVD1085 Series Re- |
| mote Air Cooled Machines Before Serial |
| Number 110697654 252 |
| SD1072C/CVD1085 Series Remote Air |
| Cooled Machines After Serial Number |
| 110697654 |
| SY1074C/CVD1085 Series Remote Air |
| Cooled Machines After Serial Number |
| 110697654 |
| IB1022DC/IB1024YC/CVD1075/CVD1085/ |
| CVD1285 Series Remote Air Cooled |
| Machines Before Serial Number 110697294 |
| |
| IB1022DC/CVD1185 Series Remote Air |
| Cooled Machines After Serial Number |
| 110697294 256 |
| IB1024YC/CVD1185 Series Remote Air |
| Cooled Machines After Serial Number |
| 110697294 257 |
| SD1272C/SY1274C/CVD1285 Series Re- |
| mote Air Cooled Machines Before Serial |
| Number 110706336 258 |
| SD1272C/CVD1285 Series Remote Air |
| Cooled Machines After Serial Number |
| 110706336 |
| SY1274C/CVD1285 Series Remote Air |
| Cooled Machines After Serial Number |
| 110706336 260 |
| S1470C/CVD1485 Series Remote Air |
| Cooled 261 |
| S1470C/CVD1486 Remote Water Cooled |
| 262 |
| SD1872C/CVD1885 Series Remote Air |
| Cooled |

| | SY1874C/CVD1885 Series Remote Air |
|----------|---|
| | Cooled |
| | SD2072C/CVD2075 Series Remote Air |
| | Cooled |
| | SY2074C/CVD2075 Series Remote Air |
| | Cooled |
| | SD2172C/CVD2085 Series Remote Air |
| | Cooled |
| | SY2174C/CVD2085 Series Remote Air |
| | Cooled |
| | SD3072C/CVD3085 Series Remote Air |
| | Cooled |
| | SY3074C/CVD3085 Series Remote Air |
| | Cooled |
| Diegrama | |
| Diagrams | ing Diagrams |
| VVIII | Wiring Diagram Legend |
| | S600C/S850C/1000C/S1200C 272 |
| | \$600C/\$680C/\$850C/1000C/\$1200C272 \$600C/\$680C/\$850C/1000C/\$1200C 273 |
| | \$1470C/\$1870C/\$2070C/\$2170C274 |
| | \$3070C 115/60/1275 |
| | \$3070C 113/60/1 |
| | IB0600C/IB0800C/IB1000C with S Control |
| | Board and Electronic Bin Thermostat . 277 |
| | IB0600C/IB0680C/IB0800C/IB1000C |
| | with Air Assist/S Control Board/Electronic |
| | |
| | Bin Thermostat |
| | CVD1085/CVD1185/CVD1285/CVD1485/ |
| | CVD1065/CVD1165/CVD1265/CVD1465/ CVD1486/CVD1885/CVD2075/CVD3085 - |
| | |
| | 1 Phase |
| | |
| | CVD2085 with PTCR- 1 Phase 281 |
| | CVD675/CVD685/CVD885/CVD1075/ |
| | CVD1085/CVD1185/CVD1285/CVD1485/ |
| | CVD1486/CVD1885/CVD2075/CVD2085/ |
| | CVD3085 - 3 Phase |
| | CVD3085 380V/50hz/3ph283 |

| Electronic Control Board 284 |
|---------------------------------------|
| Single and Twin Evaporator Models 284 |
| Quad Evaporator Models 286 |
| Refrigeration Tubing Schematics 287 |
| S600C/S680C/S850C/S1000C/S1200C |
| |
| S600C/S680C/S850C/S1000C/S1200C |
| |
| Ice Beverage IB0600C/IB0680C/IB0800C/ |
| IB1000C |
| Ice Beverage IB0600C/IB0680C/IB0800C/ |
| IB1000C 290 |
| S1470C/S1870C/S2070C/S2170C 291 |
| S1470C/S1870C/S2070C/S2170C 292 |
| S1476C Water-Cooled Condenser 293 |
| S3070C Without Check Valve 294 |
| S3070C With Check Valve 295 |

General Information

MODEL NUMBERS


This manual covers the following models:

| Ice Machine Head Section | CVD Condensing Unit* |
|--|--|
| SD0672C SY0674C IB0624YC IB0622DC | CVD0675 |
| SD0682C SY0684C IB0684YC IB0682DC | CVD0685 |
| SD0872C SY0874C IB0824YC IB0822DC | CVD0885 |
| SD1072C SY1074C | CVD1085 |
| IB1024YC IB1022DC | CVD1185 CVD1285 CVD1085 CVD1075 |
| SD1272C SY1274C | CVD1285 |
| SD1472C SY1474C | CVD1485 CVD1486 |
| SD1872C SY1874C | CVD1885 |
| SD2072C SY2074C | CVD2075 |
| SD2172C SY2174C | CVD2085 |
| SD3072C SY3074C | CVD3085 |


^{*}For 3 phase electrical option: add the number "3" to end of model number (CVD10853).

HOW TO READ A MODEL NUMBER

Head Section

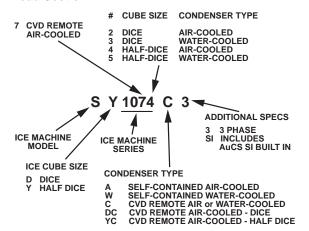

Condensing Unit

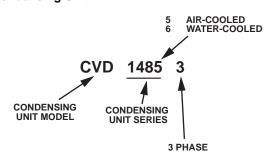

ICE CUBE SIZES





Dice Half Dice 7/8" x 7/8" x 7/8" 3/8" x 1-1/8" x 7/8" 2.22 x 2.22 x2.22 cm 0.95 x 2.86 x 2.22 cm

A Warning

Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by a person responsible for their safety.

A Warning

All Manitowoc ice machines require the ice storage system (bin, dispenser, etc.) to incorporate an ice deflector.

Prior to using a non-Manitowoc ice storage system with other Manitowoc ice machines, contact the manufacturer to assure their ice deflector is compatible with Manitowoc ice machines.

MODEL/SERIAL NUMBER LOCATION

These numbers are required when requesting information from your local Manitowoc Distributor, service representative, or Manitowoc Ice, Inc. The model and serial number are listed on the OWNER WARRANTY REGISTRATION CARD. They are also listed on the MODEL/SERIAL NUMBER DECAL affixed to the ice machine.

ENERGY EFFICIENT ICE MACHINE SERIAL BREAKS

Some specifications have changed since our release of Energy Efficient machines. The following machines have a serial break to indicate when they became Energy Efficient.

| Series Ice Machine | Serial Break for Energy Efficient Machines |
|-----------------------|---|
| S850C | 110682385 |
| S1000C | 110697654 |
| S1200C | 110706336 |
| IB800C | 110682385 |
| IB1000C | 110697294 |
| CVD885 | 110673885 |

ICE MACHINE WARRANTY INFORMATION Owner Warranty Registration Card

Warranty coverage begins the day the ice machine is installed.

Important

Complete and mail the OWNER WARRANTY REGISTRATION CARD as soon as possible to validate the installation date.

If the OWNER WARRANTY REGISTRATION CARD is not returned, Manitowoc will use the date of sale to the Manitowoc Distributor as the first day of warranty coverage for your new ice machine.

Commercial Warranty Coverage GENERAL

The following Warranty outline is provided for your convenience. For a detailed explanation, read the warranty bond shipped with each product.

Contact your local Manitowoc representative or Manitowoc Ice if you need further warranty information.

PARTS

- Manitowoc warrants the ice machine against defects in materials and workmanship, under normal use and service for three (3) years from the date of original installation.
- The evaporator and compressor are covered by an additional two (2) year (five years total) warranty beginning on the date of the original installation.

LABOR

- Labor required to repair or replace defective components is covered for three (3) years from the date of original installation.
- The evaporator is covered by an additional two (2) year (five years total) labor warranty beginning on the date of the original installation.

EXCLUSIONS

The following items are not included in the ice machine's warranty coverage:

- Normal maintenance, adjustments and cleaning as outlined in this manual.
- 2. Repairs due to unauthorized modifications to the ice machine or use of non-standard parts without prior written approval from Manitowoc Ice
- Damage caused by improper installation of the ice machine, electrical supply, water supply or drainage, or damage caused by floods, storms, or other acts of God.
- 4. Premium labor rates due to holidays, overtime, etc.; travel time; flat rate service call charges; mileage and miscellaneous tools and material charges not listed on the payment schedule. Additional labor charges resulting from the inaccessibility of equipment are also excluded.
- Parts or assemblies subjected to misuse, abuse, neglect or accidents.
- Damage or problems caused by installation, cleaning and/or maintenance procedures inconsistent with the technical instructions provided in this manual.

AUTHORIZED WARRANTY SERVICE

To comply with the provisions of the warranty, a refrigeration service company qualified and authorized by your Manitowoc Distributor, or a Contracted Service Representative must perform the warranty repair.

SERVICE CALLS

Normal maintenance, adjustments and cleaning as outlined in this manual are not covered by the warranty. If you have followed the procedures listed in this manual, and the ice machine still does not perform properly, call your Local Distributor or the Service Department at Manitowoc Ice.

RESIDENTIAL ICE MACHINE LIMITED WARRANTY WHAT DOES THIS LIMITED WARRANTY COVER?

Subject to the exclusions and limitations below, Manitowoc Ice ("Manitowoc") warrants to the original consumer that any new ice machine manufactured by Manitowoc (the "Product") shall be free of defects in material or workmanship for the warranty period outlined below under normal use and maintenance, and upon proper installation and start-up in accordance with the instruction manual supplied with the Product.

HOW LONG DOES THIS LIMITED WARRANTY LAST?

| Product Covered | Warranty Period |
|-----------------|----------------------------------|
| Ice Machine | Twelve months from the sale date |

WHO IS COVERED BY THIS LIMITED WARRANTY?

This limited warranty only applies to the original consumer of the Product and is not transferable.

WHAT ARE MANITOWOC ICE'S OBLIGATIONS UNDER THIS LIMITED WARRANTY?

If a defect arises and Manitowoc receives a valid warranty claim prior to the expiration of the warranty period. Manitowoc shall, at its option: (1) repair the Product at Manitowoc's cost, including standard straight time labor charges, (2) replace the Product with one that is new or at least as functionally equivalent as the original, or (3) refund the purchase price for the Product. Replacement parts are warranted for 90 days or the balance of the original warranty period, whichever is longer. The foregoing constitutes Manitowoc's sole obligation and the consumer's exclusive remedy for any breach of this limited warranty. Manitowoc's liability under this limited warranty is limited to the purchase price of Product. Additional expenses including, without limitation, service travel time, overtime or premium labor charges, accessing or removing the Product, or shipping are the responsibility of the consumer.

HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service or information regarding your Product, please contact us at:

MANITOWOC ICE 2110 So. 26th St.

P.O. Box 1720,

Manitowoc, WI 54221-1720

Telephone: 920-682-0161 Fax: 920-683-7585

www.manitowocice.com
WHAT IS NOT COVERED?

This limited warranty does not cover, and you are solely responsible for the costs of: (1) periodic or routine maintenance, (2) repair or replacement of the Product or parts due to normal wear and tear, (3) defects or damage to the Product or parts resulting from misuse, abuse, neglect, or accidents, (4) defects or damage to the Product or parts resulting from improper or unauthorized alterations, modifications, or changes; and (5) defects or damage to any Product that has not been installed and/or maintained in accordance with the instruction manual or technical instructions provided by Manitowoc. To the extent that warranty exclusions are not permitted under some state laws, these exclusions may not apply to you.

EXCEPT AS STATED IN THE FOLLOWING SENTENCE, THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY OF MANITOWOC WITH REGARD TO THE PRODUCT. ALL IMPLIED WARRANTIES ARE STRICTLY LIMITED TO THE DURATION OF THE LIMITED WARRANTY APPLICABLE TO THE PRODUCTS AS STATED ABOVE, INCLUDING BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL MANITOWOC OR ANY OF ITS AFFILIATES BE LIABLE TO THE CONSUMER OR ANY OTHER PERSON FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND (INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, REVENUE OR BUSINESS) ARISING FROM OR IN ANY MANNER CONNECTED WITH THE PRODUCT, ANY BREACH OF THIS LIMITED WARRANTY, OR ANY OTHER CAUSE WHATSOEVER, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER THEORY OF LIABILITY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

HOW STATE LAW APPLIES

This limited warranty gives you specific legal rights, and you may also have rights that vary from state to state or from one jurisdiction to another.

REGISTRATION CARD

To secure prompt and continuing warranty service, this warranty registration card must be completed and sent to Manitowoc within thirty (30) days from the sale date. Complete the registration card and send it to Manitowoc.

Installation

LOCATION OF ICE MACHINE

S600C/S680C/S850C/S1000C/S1200C/S1470C/ S1870C/S2070C/S2170C/S3070C

The location selected for the ice machine head section must meet the following criteria. If any of these criteria are not met, select another location.

- The location must be free of airborne and other contaminants.
- The air temperature must be at least 35°F (1.7°C), but must not exceed 110°F (43.4°C).
- The location must not be near heat-generating equipment, in direct sunlight and be protected from weather.
- The location must not obstruct airflow through or around the ice machine. Refer to ice machine head section clearance requirements.

IB0600C/IB0680C/IB0800C/IB1000C

- Ice/Beverage Ice Machines require the installation of a thermostat to maintain dispenser ice level.
 The thermostat ships with the ice machine.
- The ice machine head is installed with the electrical inlet, water supply inlet, refrigeration tubing and water drain entering from the back of the ice machine.
- The ice machine head section contains a service loop that must remain installed between the ice machine head section and line set. Sufficient tubing length must be available to allow 180° rotation of the ice machine.
- Maintain a 3" space between the back of the ice machine and the back of the dispenser to allow room for the refrigeration line set service loop.
- The water inlet and electrical connection must contain a service loop to allow future service and maintenance access.
- The drain line must contain a union or other suitable means of disconnection at the ice machine head section.

- The location must be free of airborne and other contaminants.
- The air temperature must be at least 35°F (1.6°C), but must not exceed 110°F (43.4°C).
- The location must not be near heat-generating equipment or in direct sunlight.
- The location must not obstruct airflow through or around the ice machine. Refer to ice machine head section clearance requirements.

ICE MACHINE HEAD SECTION CLEARANCE REQUIREMENTS

S600C/S680C/S850C/S1000C/S1200C/S1470C/ S1870C/S2070C/S2170C

Top 5" (12.7 cm) is recommended for efficient operation and removal of top cover/servicing.

Sides 5" (12.7 cm) is recommended for efficient operation and servicing. There is no minimum clearance required.

Back 3" (7.6 cm) required when routing electrical inlet, water inlet and refrigeration tubing out of the top of the unit.

5" (12.7 cm) required when routing all connections out the back.

IB0600CIB0680C/IB0680C/IB0800C/IB1000C

Top 2" (5.1 cm) required clearance for cleaning procedures and servicing.

Back 5" (12.7 cm) required when routing all connections out the back.

Sides 8" (20.3 cm) required for servicing.

S3070C

Top/Sides 8" (20.3 cm) recommended clearance for efficient operation and removal of top cover/servicing. There is no minimum clearance required.

Back 24" (61.0 cm) required when routing all connections out the back.

NOTE: 24" (61.0 cm) on all sides is recommended to allow access without moving the machine.

The ice machine head section must be protected if it will be subjected to temperatures below 32°F (0°C). Failure caused by exposure to freezing temperatures is not covered by the warranty. See "Removal from Service/Winterization" page 109.

STACKING TWO ICE MACHINES ON A SINGLE STORAGE BIN

S QuietQube ice machines cannot be stacked. However an adapter is available that allows two S QuietQube ice machines to be placed side by side on 60" Manitowoc F & B style bins.

ICE DEFLECTOR

An ice deflector is required for all ice machines installed on a bin.

A Warning


S1470C/S1870C/S2170C ice machines are not approved for use on Manitowoc B570 bins.

A Warning

30" large capacity B model bins must be attached to the wall with the bracket provided with the bin.

REMOVING THE FRONT PANELS

- 1. Disconnect power to ice machine.
- Loosen screws. Do not remove they are retained by o-rings to prevent loss.
- 3. To remove right front door lift up and remove.

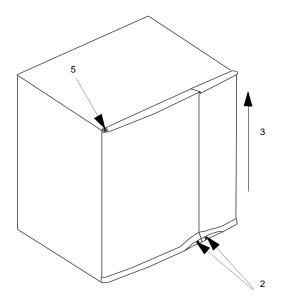

Door Removal

- 4. Open left front door to 45 degrees.
- Support with left hand, depress top pin, tilt top of door forward and lift out of bottom pin to remove.

LOCATION OF CVD® CONDENSING UNIT

The location selected for the CVD Condensing Unit must meet the following criteria. If any of these criteria are not met, select another location.

- CVD885/CVD1075/CVD1085/CVD1485/ CVD1885/CVD2085 Only - The air temperature must be at least -20°F (-28.9°C) but must not exceed 130°F (54.4°C).
- CVD675/CVD685/CVD1185/CVD2075/CVD3085
 Only The air temperature must be at least
 -20°F (-28.9°C) but must not exceed 120°F
 (48.9°C).
- CVD1486 Only- The air temperature must be at least 50°F (10°C) but must not exceed 110°F (43°C).
- The location must not allow exhaust fan heat and/ or grease to enter the condenser.
- The location must not obstruct airflow through or around the condensing unit. See below for clearance requirements.

CONDENSING UNIT CLEARANCE REQUIREMENTS

CVD675/CVD685/CVD885/CVD1075/CVD1085/ CVD1185/

CVD2075/CVD2085

Top/Sides - There is no minimum clearance required, although 6" (15.2 cm) is recommended for efficient operation and servicing only.

Front/Back - 48" (122 cm)

CVD1285/CVD1485/CVD1885

Top/Sides - There is no minimum clearance required, although 6" (15.2 cm) is recommended for efficient operation and servicing only.

Front - 24" (61 cm)

Back - 48" (122 cm)

CVD1486 ONLY

Top - 5" (12.7 cm) is required for efficient operation and servicing.

Front/Back/Sides - 12" (30.5 cm)

CVD3085

Top/Sides - There is no minimum clearance required, although 8" (20.3 cm) is recommended for efficient operation and servicing only.

Front/Back - 24" (122 cm)

NOTE: 24" (61.0 cm) on all sides is recommended to allow easy access.

BIN INSTALLATION

All ice machines installed on a bin require an ice deflector. Manitowoc bins have a built in deflector that requires no modifications when used with a forward facing evaporator. Ice machines with multiple evaporators require a deflector kit.

Bin adapters or custom bin tops are available to allow installation of a 30" ice machine on a 48" or 60" bin. Refer to ice machine price list for options (http://www.manitowocice.com/sales/price.asp).

A Warning

Manitowoc QuietQube ice machines require the ice storage bin to incorporate an ice deflector.

Prior to using a non-Manitowoc ice storage system with other Manitowoc ice machines, contact the manufacturer to assure their ice deflector is compatible with Manitowoc ice machines.


Leveling the Ice Storage Bin

- 1. Screw the leveling legs onto the bottom of the bin.
- 2. Screw the foot of each leg in as far as possible.

↑ Caution

The legs must be screwed in tightly to prevent them from bending.

- 3. Move the bin into its final position.
- Level the bin to assure that the bin door closes and seals properly. Use a level on top of the bin. Turn each foot as necessary to level the bin.

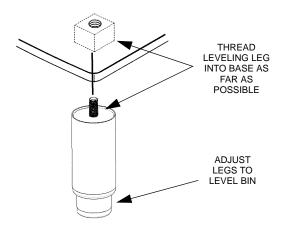


Leveling Leg and Foot

S1470C/S1870C/S2070C/S2170C INSTALLATION ON A MANITOWOC BIN

An ice deflector kit is required for installation. Order appropriate kit (30" or 48") for your bin.

- Step 1 Remove the stock ice deflector.
 - A. Remove the left and right side cover screws
 - B. Remove the cover to expose four screws, which secure the plastic deflector.
 - C. Remove fours screws and plastic deflector
 - D. Install polymer spacer on each side and secure with the four screws.
 - Reinstall cover and screws.

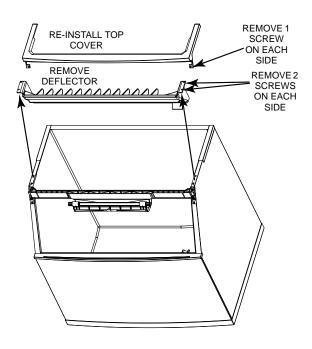


Step 2 Install front support and filler panels.

- A. Remove foam tape from front support location.
- B. Set front support in place and install foam tape.
- Position filler panels (align with front support), drill and secure.
- D. Install foam tape on front and back. Seal all foam tape edges.

Step 3 Install ice deflector.

- A. Locate center of ice machine drop zone (center is 11" from left edge of ice machine to left edge of bracket).
- B. Cut and remove foam tape on the front and the back of the bin where the deflector will be located.
- C. Remove any residual adhesive; areas must be clean and dry.
- Remove protective covering from double sided tape on bottom of deflector bracket.
- E. Install deflector bracket; Distribute equally to the front and back and locate pin to the rear.
- F. Apply foam tape over bracket and seal joints with silicone sealant.
- G. Refer to illustration and install deflector in mounting bracket.

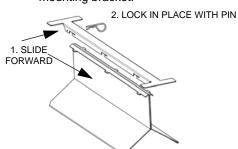

ICE MACHINE ON A DISPENSER INSTALLATION

No deflector is needed for machines that match the size of the dispenser (30" head section on a 30" dispenser) unless required by the dispenser manufacturer. Adapters are required when a smaller ice machine is going on a larger dispenser (22" machine on a 30" dispenser).

IB0600C/IB0680C/IB0800C/IB1000C

Securing the Ice Machine to the Dispenser

Important

Manitowoc Ice/Beverage Ice Machines require an adapter for mounting. Adapters are not included with the ice machine, dispenser or bin and must be ordered separately. When a non-Manitowoc adapter is used, verify the adapter is compatible with Manitowoc Ice/Beverage Ice Machines prior to installation.

The ice machine and adapter plate must be secured to the dispenser to prevent tipping.


- Two holes are located in the front bottom rail of the ice machine, to allow attachment to the adapter plate.
- The adapter cover must be secured to the dispenser to prevent ice from dislodging the cover during agitation.

A Warning


The ice machine and adapter plate must be secured to the dispenser to prevent tipping.

Typical Ice Beverage on a Dispenser

- 1. Install bin level thermostat bracket.
- Set adapter on dispenser. Position the adapter so that the front flange of the adapter will be up against the front lip of the dispenser. Adapter may have to be moved towards the back of the dispenser.
- 3. Using the slotted holes in the adapter as a template, drill four (4) 9/64" diameter holes at the bottom of the slots. Note: Do not drill deeper than 1/4" past the sheet metal. Use a drill stop!
- 4. Fasten the adaptor to dispenser using the four (4) #8 screws supplied with the adaptor kit.
- Set the ice machine on top of the adapter. Align holes in ice machine front angle with threaded bosses on the adapter.

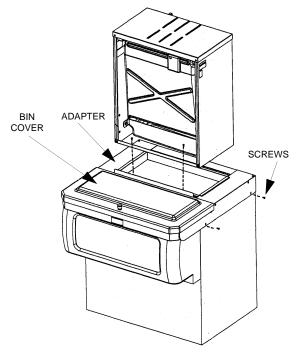

- 6. Secure the ice machine to the adaptor with two (2) #8-32 screws supplied with the kit.
- Set the bin cover on the adapter, move backwards until the cover hits the stop, and lower the plastic cover insuring that the latch locks.
- To remove the bin cover, twist the knob, lift up, and pull forward.

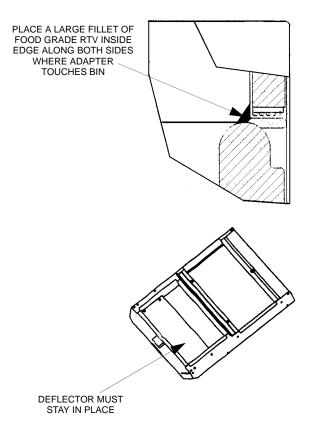

ICE MACHINE HEAD SECTION WATER SUPPLY AND DRAINS

Potable Water Supply

Local water conditions may require treatment of the water to inhibit scale formation, filter sediment, and remove chlorine odor and taste.

Important

If you are installing a Manitowoc water filter system, refer to the Installation Instructions supplied with the filter system for ice making water inlet connections.

Potable Water Inlet Lines

Follow these guidelines to install water inlet lines:

- Do not connect the ice machine to a hot water supply. Be sure all hot water restrictors installed for other equipment are working. (Check valves on sink faucets, dishwashers, etc.)
- If water pressure exceeds the maximum recommended pressure obtain a water pressure regulator from your Manitowoc Distributor.
- Maximum water pressure 80 psi (551.6 kPA)
- Install a water shut-off valve for ice making potable water.
- Insulate water inlet lines to prevent condensation.
- A 3' service loop or disconnect (union) must be installed at the ice machine head section.

Drain Connections

Follow these guidelines when installing drain lines to prevent drain water from flowing back into the ice machine and storage bin:

- Drain lines must have a 1.5 in. drop per 5 ft. of run (2.5 cm per meter), and must not create traps.
- The floor drain must be large enough to accommodate drainage from all drains.
- Run separate bin and ice machine drain lines. Insulate them to prevent condensation.
- Vent the bin and ice machine drain to the atmosphere. The ice machine drain requires an 18" vent.
- Drains must have a union or other suitable means to allow in place disconnection from the ice machine when servicing is required.
- S3070C requires base drain connection (1" FPT).

Cooling Tower Application (Water-Cooled Models)

A water cooling tower installation does not require modification of the ice machine. The water regulator valve for the condenser continues to control the refrigeration discharge pressure.

It is necessary to know the amount of heat rejection, and the pressure drop through the condenser and water valves (inlet and outlet) when using a cooling tower on an ice machine.

- Water entering the condenser must not exceed 90°F (32.2°C).
- Water flow through the condenser must not exceed 5 gallons (19 liters) per minute.
- Allow for a pressure drop of 7 psi (48 kPA) between the condenser water inlet and the outlet of the ice machine.
- Water exiting the condenser must not exceed 110°F (43.3°C).

Important

The Commonwealth of Massachusetts requires that all water-cooled models must be connected only to a closed loop, cooling tower system.

WATER COOLED CONDENSER WATER SUPPLY AND DRAINS

Water Cooled Condenser Lines

Follow these guidelines to install water lines:

- Contact your distributor if your water pressure is greater than 150 psig (1034 kPA). A special order condensing unit is available that allows water pressure up to 350 psig (2413 kPA).
- Install a shutoff valve (inlet and outlet on cooling tower or closed loop circuits) to allow isolation of the water system.
- Water entering the condenser must not exceed 90°F (32.2°C).
- Water flow through the condenser must not exceed 5 gallons (19 liters) per minute.
- Allow for a pressure drop of 8 psig (55 kPA) between the condenser water inlet and outlet.
- Water exiting the condenser must not exceed 110°F (43.3°C).
- Do not connect to the potable water filter system.

Condensing Unit Drain Connections

The condensing unit drain is provided to remove any condensate produced by the suction accumulator. Condensate amounts will vary depending on temperature and humidity.

- The condensing unit must be level front to back and side to side to allow the condensate to drain.
- Drain lines must have a 1.5-inch drop per 5 feet of run (2.5 cm per meter), and must not create traps.
- Drain termination must meet applicable costs.

ELECTRICAL REQUIREMENTS

Local or state electrical code, length of wire run or materials used, can increase the minimum wire or breaker size requirement. A qualified electrician must determine the wire and breaker size, although the minimum wire size must meet or exceed the specifications in these charts.

Head Sections

| Ice Machine Head Section | | | |
|--|---------------------------------------|----------------------------------|-------------------|
| | Voltage Phase Cycle | Max. Fuse/ Circuit Breaker | Total Amps |
| S0600C S0680C | 115/1/60 208-230/1/60 230/1/50 | 15 amp 15 amp 15 amp | 1.1 0.6 0.6 |
| S0850C | 115/1/60 230/1/50 | 15 amp 15 amp | 1.1 1.5 |
| IB0620C IB0680C IB0820C IB1020C | 115/1/60 230/1/50 | 15 amp 15 amp | 1.4 0.8 |
| S1000C S1200C | 115/1/60 230/1/50 | 15 amp 15 amp | 2.5 1.5 |
| \$1470C \$1870C \$2070C \$2170C | 115/1/60 208-230/1/60 230/1/50* | 15 amp 15 amp 15 amp | 1.1 0.6 0.6 |
| S3070C | 115/1/60 230/50/1 | 15 amp 10 amp | 2.0 2.0 |

*Not available on S2070C or S2170C models.
**All conductors must be solid copper wire.

Important

The QuietQube® Ice Machine Head Section and CVD® Condensing Unit are wired independently from each other.

Condensing Units

| CVD® Condensing Unit | | | |
|----------------------|--------------|------------|---------|
| | Voltage | Max. Fuse/ | Min. |
| | Phase | Circuit | Circuit |
| | Cycle | Breaker | Amps |
| CVD0675 | 208-230/1/60 | 15 amp | 9.6 |
| | 208-230/3/60 | 15 amp | 7.3 |
| | 230/1/50 | 15 amp | 9.0 |
| CVD0685 | 208-230/1/60 | 15 amp | 11.0 |
| | 208-230/3/60 | 15 amp | 7.5 |
| CVD0885 | 208-230/1/60 | 20 amp | 11.8 |
| | 208-230/3/60 | 15 amp | 9.1 |
| | 230/1/50 | 20 amp | 10.0 |
| CVD1075 | 208-230/1/60 | 25 amp | 15.6 |
| | 208-230/3/60 | 20 amp | 10.6 |
| | 230/1/50 | 25 amp | 13.8 |
| CVD1085 | 208-230/1/60 | 20 amp | 12.5 |
| | 208-230/3/60 | 15 amp | 9.4 |
| | 230/1/50 | 20 amp | 10.9 |
| CVD1185 | 208-230/1/60 | 25 amp | 15.7 |
| | 208-230/3/60 | 15 amp | 10.8 |
| | 230/1/50 | 20 amp | 11.2 |
| CVD1285 | 208-230/1/60 | 25 amp | 14.7 |
| | 208-230/3/60 | 20 amp | 10.6 |
| | 230/1/50 | 20 amp | 11.7 |
| CVD1485 | 208-230/1/60 | 20 amp | 20.0 |
| | 208-230/3/60 | 15 amp | 15.0 |
| | 230/1/50 | 30 amp | 20.0 |
| CVD1486 | 208-230/1/60 | 20 amp | 20.0 |
| | 208-230/3/60 | 15 amp | 15.0 |
| | 230/1/50 | 20 amp | 20.0 |
| CVD1885 | 208-230/1/60 | 40 amp | 25.0 |
| | 208-230/3/60 | 25 amp | 20.0 |
| | 230/1/50 | 30 amp | 20.0 |
| CVD2085* | 208-230/1/60 | 50 amp | 40.0 |
| | 208-230/3/60 | 40 amp | 30.0 |
| CVD3085* | 208-230/3/60 | 35 amp | 30.0 |
| | 460/3/50 | 15 amp | 15.0 |

^{*}CVD2085 & CVD3085 Only - Verify the direction of the rotation is correct on the 3ph scroll compressor. The ice machine will have high suction pressure, low discharge pressure and will be noticeably loud. Reverse two incoming power leads to reverse rotation.

REFRIGERATION SYSTEM INSTALLATION

| QuietQube® Ice Machine | Remote Single Circuit Condenser | Line Set* |
|---------------------------|---------------------------------------|-------------------------|
| S0600C IB0620C | CVD675 | |
| S0680C IB0680C | CVD685 | RC-21 RC-31 |
| S0850C IB0820C | CVD885 | RC-51 |
| S1000C IB1020C | CVD1085 | |
| S1200C | CVD1285 | |
| IB1020C | CVD1185 CVD1285 CVD1075 | RC-20 RC-30 RC-50 |
| S1470C | CVD1485 CVD1486 | |
| S1870C | CVD1885 | |
| S2070C | CVD2075 | |
| S2170C | CVD2085 | RC-23 RC-33 |
| | | RC-53 |
| S3070C | CVD3085 | RC-24 RC-34 |
| | | RC-54 |

| *Line Set | Suction Line | Liquid Line | Insulation Thickness |
|---------------|-------------------------------------|------------------------------------|-----------------------------|
| RC 21/31/51 | 5/8 in. (15.9 mm) | 3/8 in. (9.5 mm) | |
| RC 20/30/50** | 3/4 in. (19.1 mm) | 1/2 in. (12.7 mm) | Suction Line 1/2" (13mm) |
| RC 23/33/53 | 3/4 in. (19.1 mm) | 5/8 in. (15.9 mm) | Liquid Line |
| RC 24/34/54 | Two Lines - 3/4 in. (19.1 mm) | One Line - 5/8 in. (15.9 mm) | 1/4" (7mm) |

^{**}NOTE: The CVD2075 has a suction line fitting of 7/8" and a liquid line fitting of 5/8". Since the line set is sized differently, please use the provided bushings to properly connect the line set to the CVD condensing unit.

Important

Manitowoc remote systems are only approved and warranted as a complete new package. Warranty on the refrigeration system will be void if a new ice machine head section is connected to pre-existing (used) tubing or condensing units or vice versa.

Usage With Non-Manitowoc Condensing Units

Manitowoc CVD® Condensing Units are specifically designed for usage with a QuietQube® Ice Machine Head Section. Standard condensing units and Non-Manitowoc condensing units will not operate a QuietQube® Ice Machine Head Section.

Factory Equipment Refrigerant Amounts ICE MACHINE HEAD SECTION

Each ice machine head section ships from the factory with a R-404A refrigerant charge appropriate for the entire system operation. The serial tag on the ice machine indicates the refrigerant charge. The refrigerant charge is sufficient to operate the ice machine in ambient temperatures between -20°F to 130°F (-28.9°C to 54.4°C)*. With line set lengths of up to 100 feet (30.5 m).

*CVD685/CVD1185/CVD2085/CVD3085 =

-20°F to 120°F (-29°C to 49°C)

CVD1486 = 50° F to 110° F (10° C to 43° C)

↑ Caution

Never add more than nameplate charge to the refrigeration system for any application.

⚠ Caution

The 60-month compressor warranty (including the 36-month labor replacement warranty) will not apply if the Manitowoc Ice Machine and Manitowoc CVD® Condensing Unit are not installed according to specifications. This warranty also will not apply if the refrigeration system is modified with a condenser, heat reclaim device, or other parts or assemblies not manufactured by Manitowoc Ice.

A Warning

Potential Personal Injury Situation

The ice machine head section contains the refrigerant charge. Installation and brazing of the line sets must be performed by a properly trained and EPA certified refrigeration technician aware of the dangers of dealing with refrigerant charged equipment.

CVD® CONDENSING UNIT

Each condensing unit ships from the factory pressurized with 50/50 nitrogen helium mixture that must be removed during the installation process (approximately 20 psig).

REFRIGERATION LINE SETS/TRAP KIT

Refrigeration Rated Tubing and Trap Kits are shipped capped with atmospheric pressure.

A Warning

Installation of a QuietQube® Condensing Unit may require the use of special equipment for placement. Trained and qualified personnel are required for proper rigging and lifting.

Refrigeration Line Set Installation

Refrigeration line set installation consists of vertical and horizontal line set distances between the ice machine and the condensing unit. The following guidelines, drawings and calculation methods must be followed to assure proper oil return and CVD® Condensing Unit/ice Machine operation.

The refrigeration line set installer must be USA Government-Environmental Protection Agency (EPA) certified in proper refrigerant handling and servicing procedures.

A Warning

The ice machine head section contains refrigerant charge. The ice machine head section contains three (3) refrigeration valves that **must remain closed** until proper installation of the line sets is completed.

A Warning

Disconnect electrical power to the ice machine head section and CVD® condensing unit before proceeding.

VERIFY ICE MACHINE AND CVD® CONDENSING UNIT LOCATIONS ARE WITHIN GUIDELINES.

Prior to installation of the ice machine and CVD® Condensing Unit be sure that the distance between them is within the line set routing guidelines outlined in this manual.

Roof/Wall Penetration

If required, cut a 3-inch (76.2 mm) circular hole in the wall or roof for routing of refrigeration tubing. A qualified person must perform all roof penetrations.

ROUTE REFRIGERATION TUBING

Properly route refrigeration tubing between the ice machine head section and the CVD® condensing unit.

A. LINE SET LENGTH

♠ Caution

QuietQube® Ice Machines will not function with line sets greater than 100 ft. (30.5 m). Do not attempt to go beyond this distance and add refrigerant charge to compensate!

100 feet (30.5 m) Length: The maximum measured length the line set can be.

The receiver is designed to hold a charge sufficient to operate the ice machine in ambient temperatures between -20°F (-28.9°C) and 130°F (54.4°C)*, with line set lengths of up to 100 feet (30.5 m).


*CVD685/CVD1185/CVD2085/CVD3085 = -20°F to 120°F (-29°C to 49°C)

CVD1486 = 50°F to 110°F (10°C to 43°C)The maximum amount of lineset which can be exposed on the rooftop is 25% of the total length of the lineset.


Important

QuietQube® ice machines will not function with line sets greater than 100 feet (30.5 m). Do not attempt to go beyond this distance and add refrigerant charge to compensate!

B. Line Set Rise or Drop

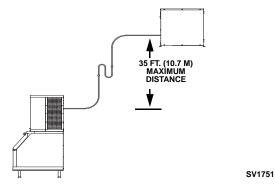

35 ft. (10.7 m) Rise: The maximum distance the CVD® Condensing Unit can be above the ice machine.

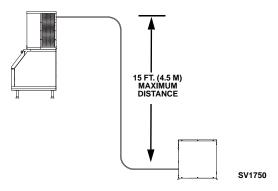

15 ft. (4.5 m) Drop: The maximum distance the CVD® Condensing Unit can be below the ice machine.


C. Suction Line Oil Traps

↑ Caution

Do not form unwanted traps in refrigeration lines. Never coil excess refrigeration tubing.

0 to 20 ft. (0 to 6.1 m) Rise: The ice machine head section has one oil trap built in which allows for a maximum condenser rise of 20 ft. (6.1 m) without additional traps in the suction line.

21 to 35 ft. (6.4 to 10.7 m) Rise: The suction line requires an additional oil trap ("S" type) to be installed. Install the trap as close as possible to midpoint between the ice machine head section and CVD® Condensing Unit. S-Trap Kits are available from Manitowoc (refer to chart).

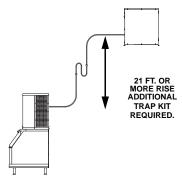

MANITOWOC S-TRAP KIT

| Model | S-Trap Kit Number | Tubing Size |
|---|-------------------------|-----------------------|
| \$600C IB600C \$680C IB680C \$850C IB800C \$1000C | K00172 | 5/8 inch (15.9 mm) |
| IB1000C S1200C S1470C S1870C S2070C S2170C S3070C* | K00166 | 3/4 inch (19.1 mm) |

^{*} Requires two S-Trap kits, one for each suction line.

SERVICE LOOP

- The supplied service loop (on Ice Beverage ice machines) is an installation requirement.
 Excess tubing length must be sufficient to allow 180° rotation of the ice machine.
- A service loop is not considered an oil trap.
- The service loop is not included when calculating length, rise or drop of the tubing run.
- Do not use hard rigid copper for the service loop.

♠ Caution

If a line set has a rise followed by a drop, another rise cannot be made. Likewise, if a line set has a drop followed by a rise, another drop cannot be made.

Step 4 Lengthening or Reducing Line Set Lengths When the line set requires shortening or lengthening, do so before connecting the line set to the ice machine head section or the CVD® Condensing Unit.

♠ Caution

Do not form unwanted traps in refrigeration lines. Never coil excess refrigeration tubing.

Step 5 Connecting the line set.

To prevent oxidation of the copper, purge line set and condensing unit with dry nitrogen while brazing.

A Warning

The ice machine head section contains refrigerant charge. The ice machine head section contains three (3) refrigeration valves that **must remain closed** until proper installation of the line sets is completed.

CONNECT THE LINE SET TO THE ICE MACHINE HEAD SECTION

The line set can be routed for entry through the top or rear of the ice machine head section.

- Top routing requires the cover to be trimmed.
- Rear routing requires the use of the supplied 90° elbows.

The line set shut-off valves at the back of the ice machine must remain closed and be protected from heat during the brazing process. Wrap the valves in a wet rag or other type of heat sink prior to brazing. Cool braze joint with water immediately after brazing to prevent heat migration to the valve.



CONNECT THE LINE SET TO THE CVD® CONDENSING UNIT


A Warning

The condensing unit ships from the factory pressurized with a 50/50 mixture of nitrogen/helium. Bleed off pressure from both suction and liquid line access ports prior to cutting into refrigeration lines.


The compressor oil rapidly absorbs moisture. **Be prepared** to complete line set installation and start your evacuation process in order to minimize the time the compressor is exposed to the atmosphere. (Maximum amount of time the system can be exposed to the atmosphere is 15 minutes.)


The line set can be routed for entry through the front or left side of the condensing unit.

- Remove knockout for side location.
- Insert supplied plastic bushings in knockout holes to prevent tubing from contacting sheet metal.
- Use the supplied 90° elbows to route tubing.
- Cut the tubing ends of the suction and liquid lines and braze line sets to the condensing unit.
- S3070C Only use the provided tee to connect the 2 suction lines from the head section to the suction line on the condensing unit.

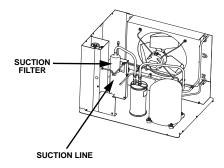

MINIMIZE THE TIME THE REFRIGERATION SYSTEM IS EXPOSED TO THE ATMOSPHERE (15 MINUTES MAXIMUM).

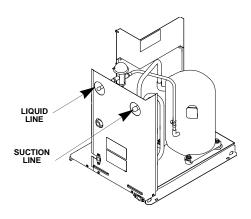

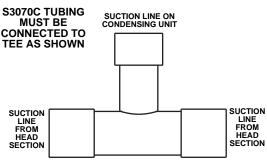

PRESSURE TEST AND EVACUATE THE LINE SET AND CVD CONDENSING UNIT

Schrader valve core removal tools that allow for removal and installation of the valve cores without removing manifold gauge set hoses are recommended to decrease the evacuation time.

Leave the line set shut-off valves closed (front seated).

All CVD condensing units manufactured after

December 2009 contain a check valve in the
compressor discharge line. The check valve
requires an additional connection on the condensing
unit during evacuation and recovery procedures.

Connections are required at five points:


Ice Machine Head Section

- 1. Receiver Service Valve
- 2. Low Side Access Valve
- 3. High Side Access Valve

CVD Condensing Unit

- 4. Compressor Discharge Access Valve
- 5. Suction Filter Access Valve


Connection of a manifold gauge set (or a hose with core depressors on both ends) between the suction filter access port and the compressor access valve (located between the compressor and discharge line check valve) is required.

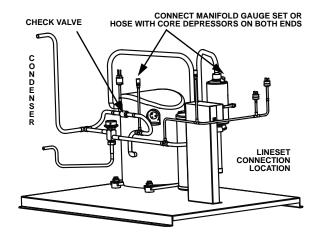


Pressure test the line sets and CVD® Condensing Unit with 150 psig of dry nitrogen. Add nitrogen at the line set shut-off valves located at the back of the ice machine head section or from the schrader valves located in the CVD® Condensing Unit. Complete the pressure test, verify no leaks are present and remove the nitrogen from the system before connecting the vacuum pump.

Connect a vacuum pump to both of the line set shut-off valves located at the back of the ice machine head section or from the schrader valves located in the CVD® Condensing Unit. Schrader valve core removal tools (that allow for putting the cores back in without removing vacuum pump hoses) will greatly decrease evacuation time.

 Evacuate to 500 microns (or less) at the CVD condensing unit.



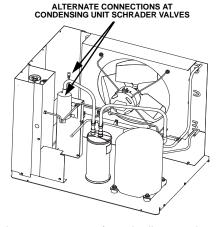

Isolate the vacuum pump from the line set shut-off valves and/or condensing unit access ports prior to proceeding.

OPEN REFRIGERATION SERVICE VALVES


The suction line, liquid line and receiver service valves are closed during shipment and installation.

Open the valves prior to starting the ice machine.


- A. Slowly backseat (open turn counterclockwise) the suction line shut-off valve.
- B. Slowly backseat (open turn counterclockwise) the liquid line shut-off valve.
- Slowly backseat (open-turn counterclockwise) the receiver service valve.


NOTE: You will not hear refrigerant flow when the valves are opened. Refrigerant will not flow until the toggle switch is placed in the ice position and the solenoid valve opens.

OPEN SUCTION AND LIQUID LINE SHUT OFF VALVES

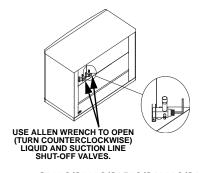


S600C/S680C/S850C/S1000C/S1200C

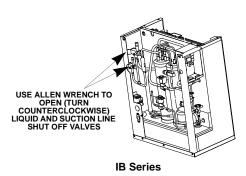

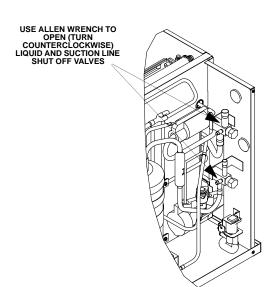

OPEN SUCTION AND LIQUID LINE SHUT OFF VALVES \$1470C/\$1870C/\$2070C/\$2170C

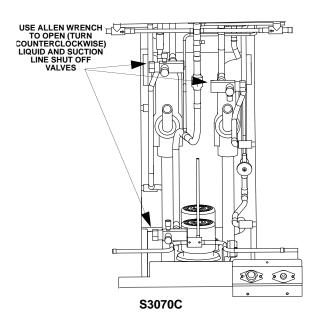


∴ Caution

After opening suction, discharge and receiver service valves, refrigerant pressure will not be detected until the toggle switch is placed in the ice position and the harvest valve energizes.

Important

All refrigeration valve caps must be reinstalled to prevent future refrigeration leaks.

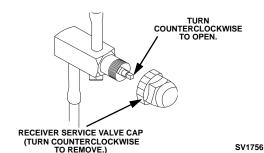

RECEIVER SERVICE VALVE

Verify O-rings in schrader valve caps are intact and reinstall on shut-off valves to prevent refrigerant leakage. Replace shut-off valve access caps and torque to the following specifications.

| Torque Values | | |
|---------------|----------------|--|
| Stem | 18-20 ft. lbs. | |
| Caps | 12-15 ft. lbs. | |
| Schrader Core | 1.5-3 in. lbs. | |

Replace cap on receiver service valve and tighten. There is a liquid line solenoid valve at the outlet of the receiver; refrigerant will not flow to the condensing unit until the ice machine head section is started. Connect power to both the ice machine head section and the CVD® Condensing Unit. Place the ice machine toggle switch into the ICE position; this will allow refrigerant to enter the line set and condensing unit.

LEAK CHECK THE REFRIGERATION SYSTEM

Leak check the new line set connections at the ice machine head section, condensing unit and S-trap as well as all factory joints throughout the entire system. Disconnect power to the CVD® Condensing Unit. Place the ICE/OFF/CLEAN toggle switch in the ICE position. This allows the low side and high side pressures to equalize. Place the ICE/OFF/CLEAN toggle switch in the OFF position. Connect power to the CVD® Condensing Unit and allow system to pump down.

INSULATION REQUIREMENTS

To prevent condensation, the entire suction line including the shut-off valve must be insulated. All insulation must be airtight and sealed at both ends.

The following insulation requirements prevent condensation at 90°F (32.2°C) ambient 90% Relative Humidity. If higher humidity is expected, increase insulation thickness.

The entire suction line set, including the suction service valve located on the back of the ice machine, requires:


| Suction Line | Liquid Line | Min. Insulation Thickness |
|-----------------------|-----------------------|---|
| 3/4 inch (19.1 mm) | 1/2 inch (12.7 mm) | 1/2"(13mm) |
| 5/8 inch (15.9 mm) | 3/8 inch (9.5 mm) | Suction Line 1/4" (7mm) Liquid Line |
| 3/4 inch (19.1 mm) | 5/8 inch (15.9 mm) | Liquid Line |

Important


To prevent condensation the entire suction line including the shut off valve must be insulated. All insulation must be airtight and sealed at both ends. The minimum requirements are for conditions at or below 90% humidity and 90°F (32.2°C) ambient. When higher humidity will be experienced, insulation wall thickness will need to be increased.

Suction Shut-off Valve Insulation


The preformed suction shut-off valve insulation is located in the plastic bag taped to the water curtain.

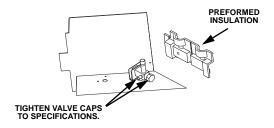

 A. Verify valve and schrader caps are tightened to specifications (see step 6).



 B. Place insulation over schrader valve cap and left side of valve. Position the tab between the mounting bracket and rear panel.



C. Fold insulation and hold against right hand side of valve while securing with electrical tape. Seal the line set insulation to the shutoff valve insulation with electrical tape.

Operational Checks

GENERAL

Your Manitowoc ice machine was factory-operated and adjusted before shipment. Normally, a newly installed ice machine does not require any adjustment.

To ensure proper operation, always perform these Operational Checks when starting the ice machine:

- · For the First Time
- After a Prolonged Out-of-Service Period
- After Cleaning and Sanitizing

Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.

WATER LEVEL

The water level sensor is set to maintain the proper water level above the water pump housing. The water level is not adjustable.

If the water level is incorrect, check the water level probe for damage (probe bent, etc.). Clean, repair or replace the probe as necessary.


ICE THICKNESS CHECK

After a harvest cycle, inspect the ice cubes in the ice storage bin. The ice thickness probe is factory-set to maintain the ice bridge thickness at 1/8" (3.2 mm).

NOTE: Make sure the water curtain is in place when performing this check. It prevents water from splashing out of the water trough.

- 1. Inspect the bridge connecting the cubes. It should be about 1/8" (3.2 mm) thick.
- 2. If adjustment is necessary, turn the ice thickness probe adjustment screw clockwise to increase bridge thickness, counterclockwise to decrease bridge thickness. Set at 1/4" gap between ice machine and evaporator as starting point, then adjust to achieve a 1/8" bridge thickness.

NOTE: Turning the adjustment 1/3 of a turn will change the ice thickness about 1/16" (1.5 mm).

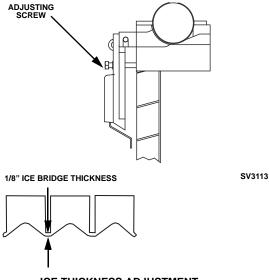

ICE THICKNESS ADJUSTMENT

Make sure the ice thickness probe wire and bracket do not restrict movement of the probe.

HARVEST SEQUENCE WATER PURGE

The Harvest sequence water purge adjustment may only be used when the ice machine is hooked up to special water systems, such as a reverse osmosis or de-ionized water treatment system.




Disconnect electric power to the ice machine at the electrical disconnect before proceeding.

Important

The Harvest sequence water purge is factory-set at 45 seconds. A shorter purge setting (with standard water supplies such as city water) is not recommended. This can increase water system cleaning and sanitizing requirements.


- The Harvest sequence water purge may be set to 0 or 45 seconds. Repositioning the jumper will set the harvest water purge to 0 seconds. This setting does not affect the SeCs or AuCS (cleaning) sequences.
- During the Harvest sequence water purge, the water fill valve energizes and de-energizes by time. The water purge must be at the factory setting of 45 seconds for the water fill valve to energize during the last 15 seconds of the water purge. If it is set to 0 seconds, the water fill valve will not energize during the water purge.

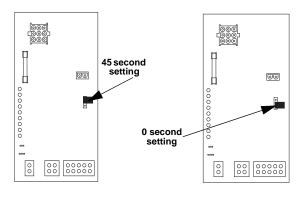


Electronic Bin Thermostat Instructions IB600C/IB680C/IB800C/IB1000C Only

POSITIONING

- Remove water trough.
- 2. Refer illustration below.
 - Loosen rear screw.
 - B. Remove front screw & rotate probe/bracket.
 - C. Re-install front screw & tighten.
 - D. Tighten rear screw.
- 3. Re-install water trough.
- Remove slack from sensor probe wire and verify wire does not contact or obstruct the water curtain or water level probe.
- 5. The control is preset and does not require programming. For control specifications refer to page page 193.

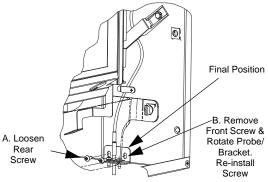

Bin Thermostat Location

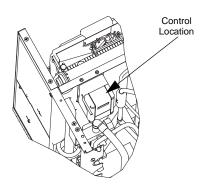


Control Location

This Page Intentionally Left Blank


This Page Intentionally Left Blank


Component Identification

ICE MACHINE HEAD SECTIONS S600C/S680C/S850C/S1000C/S1200C

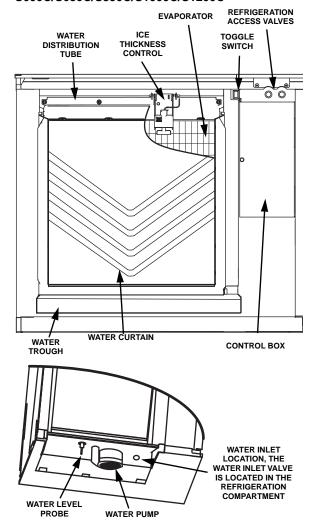



S1470C/S1870C/S2070C/S2170C

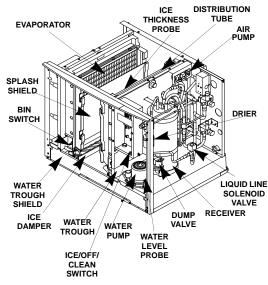

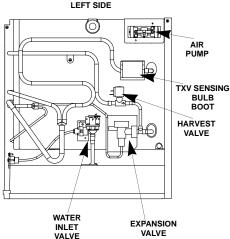


IB0600C/IB0680C/IB0800C/IB1000C

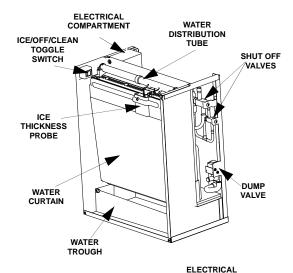

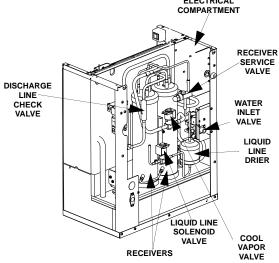


S3070C

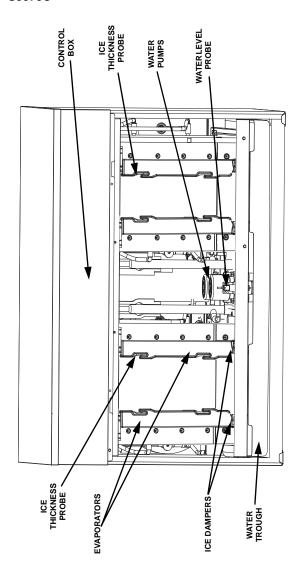


CVD® CONDENSING UNITS


CVD675/CVD685/CVD875/CVD885/CVD1075/CVD1085/ CVD1185/CVD1285/CVD1485

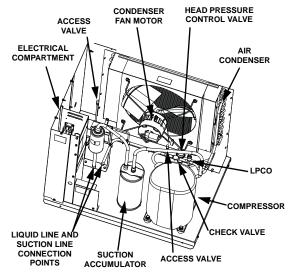

CVD1486

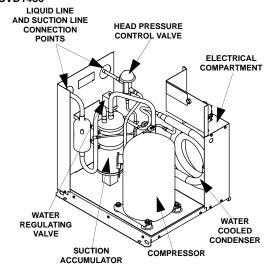

CVD1885/CVD2075/CVD2085/CVD3085

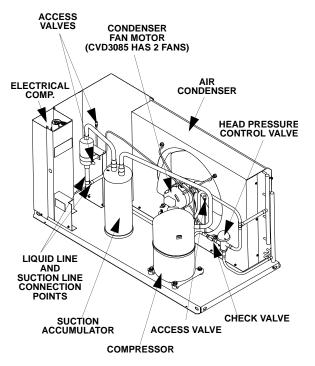

Maintenance

General

Clean and sanitize the ice machine every six months for efficient operation. If the ice machine requires more frequent cleaning and sanitizing, consult a water care professional to test the water quality and recommend appropriate water treatment. An extremely dirty ice machine must be taken apart for cleaning and sanitizing.

Manitowoc Ice Machine Cleaner and Sanitizer are the only products approved for use in Manitowoc ice machines.

This Manitowoc Ice Machine has two separate cleaning procedures.

Cleaning/Sanitizing Procedure

This procedure must be performed a minimum of once every six months.

- The ice machine and bin must be disassembled cleaned and sanitized
- All ice produced during the cleaning and sanitizing procedures must be discarded
- Removes mineral deposits from areas or surfaces that are in direct contact with water

Heavily Scaled Cleaning Procedure

Perform this procedure if you have some or all of these symptoms.

- An IB600C/IB680C/IB800C/IB1000C
- · Ice machine stops on Safety Shutdown
- Your water has a high concentration of minerals
- The ice machine has not been on a regular maintenance schedule.

Cleaning / Sanitizing Procedure

∴ Caution

Use only Manitowoc approved Ice Machine Cleaner and Sanitizer for this application (Manitowoc Cleaner part number 94-0546-3 and Manitowoc Sanitizer part number 94-0565-3). It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling. Read and understand all labels printed on bottles before use.

CLEANING PROCEDURE

♠ Caution

Do not mix Cleaner and Sanitizer solutions together. It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling.

A Warning

Wear rubber gloves and safety goggles (and/or face shield) when handling ice machine Cleaner or Sanitizer.

Ice machine cleaner is used to remove lime scale and mineral deposits. Ice machine sanitizer disinfects and removes algae and slime.

NOTE: IB Models must be cleaned using the procedure on page 91.

Step 1 Remove front door and top cover. This will allow easiest access for adding cleaning and sanitizing solutions.

Step 2 Set the toggle switch to the OFF position after ice falls from the evaporator at the end of a Harvest cycle. Or, set the switch to the OFF position and allow the ice to melt off the evaporator.

∴ Caution

Never use anything to force ice from the evaporator. Damage may result.

Step 3 Remove all ice from the bin.

Step 4 Place the toggle switch in the CLEAN position. The water will flow through the water dump valve and down the drain. Wait until the water trough refills and water flows over the evaporator, then add the proper amount of ice machine cleaner.

| Model | Amount of Cleaner |
|--|--------------------|
| \$0600C/\$0680C/\$0800C \$1000C/\$1200C | 5 ounces (150 ml) |
| \$1470C/\$1870C/ \$2070C/\$2170C | 9 ounces (270 ml) |
| S3070C | 16 ounces (475 ml) |

Step 5 Wait until the clean cycle is complete (approximately *35 minutes). then place the toggle switch in the OFF position and disconnect power to the ice machine (and dispenser when used).

NOTE: *S307C Only - 80 minutes.

A Warning

Disconnect the electric power to the ice machine at the electric service switch box.

Step 6 Remove parts for cleaning.

Please refer to the proper parts removal for your ice machine.

S600C/S680C/S850C/S1000C/S1200C - page 76. S1470C/S1870C/S2070C/S2170C - page 77. S3070C - page 80.

PARTS REMOVAL FOR CLEANING/ SANITIZING

S600C/S680C/S850C/S1000C/S1200C

A. Remove the water curtain

- Gently flex the curtain in the center and remove it from the right side.
- Slide the left pin out.


B. Remove the ice thickness probe

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.

C. Remove the water trough

- Depress tabs on right and left side of the water trough.
- Allow front of water trough to drop as you pull forward to disengage the rear pins.

NOTE: Proceed to page 82, Step 7.

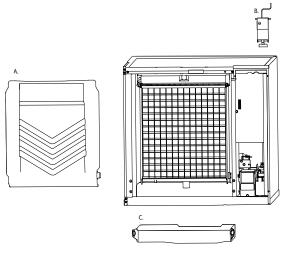

S1470C/S1870C/S2170C

A. Remove Splash Shields.

- Grasp the top center of splash shields.
- Lift up and then out.

B. Remove ice thickness probe.

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.


C. Remove the water trough shield.

- Grasp the water trough shield in the center and the left end.
- Flex the water trough shield in the center and pull the left end forward until clear of the side wall. Repeat for the right end.
- Pull water trough shield forward to remove.

D. Remove the water trough.

- Depress the two tabs on the top of the water trough.
- Turn left and right ice dampers down to clear water trough.
- Pull forward on the water trough to remove.

NOTE: Proceed to page 82, Step 7.

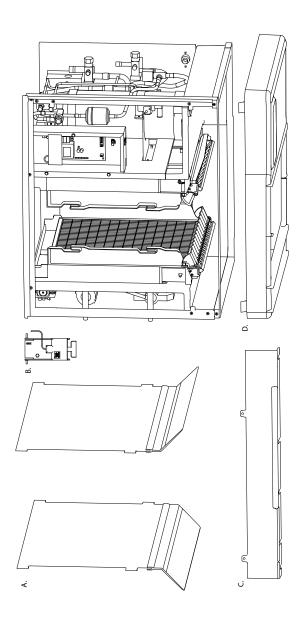

S3070C

A.Remove front evaporator shield.

- Remove four quarter turn connectors
- Remove splash shield

B.Remove Splash Shields.

NOTE: Each evaporator has a splash shield that must be removed - total of four splash shields.

- Grasp the top center of splash shields.
- Lift up and then out.

C. Remove ice thickness probe.

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.


D. Remove the water pump assembly.

- Disconnect the vinyl distribution tube from both water pumps.
- Disconnect the water pump and water level probe electrical connections.
- After the wires are disconnected remove the two thumbscrews and lift the water pump assembly out of the ice machine.

E. Remove the water trough.

Pull forward on the water trough to remove.

NOTE: Proceed to page 82, Step 7.

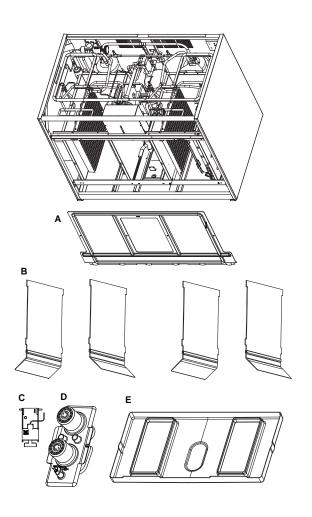

Step 7 Mix a solution of cleaner and warm water. Depending upon the amount of mineral buildup, a larger quantity of solution may be required. Use the ratio in the table below to mix enough solution to thoroughly clean all parts.

| Solution Type | Water | Mixed With |
|---------------|--------------|---------------------------|
| Cleaner | 1 gal. (4 l) | 16 oz (500 ml) cleaner |

Step 8 Use 1/2 of the cleaner/water mixture to clean all components. The cleaner solution will foam when it contacts lime scale and mineral deposits; once the foaming stops use a soft-bristle nylon brush, sponge or cloth (NOT a wire brush) to carefully clean the parts. Soak parts for 5 minutes (15 - 20 minutes for heavily scaled parts). Rinse all components with clean water.

Step 9 While components are soaking, use 1/2 of the cleaner/water solution to clean all food zone surfaces of the ice machine and bin (or dispenser). Use a nylon brush or cloth to thoroughly clean the following ice machine areas:

- Side walls
- Base (area above water trough)
- Evaporator plastic parts including top, bottom, and sides
- Bin or dispenser

Rinse all areas thoroughly with clean water.

SANITIZING PROCEDURE

Step 10 Mix a solution of sanitizer and warm water.

| Solution Type | Water | Mixed With |
|---------------|---------------|----------------------------|
| Sanitizer | 6 gal. (23 l) | 4 oz (120 ml) sanitizer |

Step 11 Use 1/2 of the sanitizer/water solution to sanitize all removed components. Use a spray bottle to liberally apply the solution to all surfaces of the removed parts or soak the removed parts in the sanitizer/water solution. Do not rinse parts after sanitizing.

Step 12 Use 1/2 of the sanitizer/water solution to sanitize all food zone surfaces of the ice machine and bin (or dispenser). Use a spray bottle to liberally apply the solution. When sanitizing, pay particular attention to the following areas:

- Side walls
- Base (area above water trough)
- Evaporator plastic parts including top, bottom and sides
- · Bin or dispenser

Do not rinse the sanitized areas.

Step 13 Replace all removed components.

Step 14 Wait 30 minutes.

Step 15 Reapply power to the ice machine and place the toggle switch in the CLEAN position.

Step 16 Wait until the water trough refills and water flows over the evaporator (approximately 3 minutes). Add the proper amount of Manitowoc Ice Machine Sanitizer to the water trough by pouring between the water curtain/splash shields and evaporator.

| Model | Amount of Sanitizer |
|--|---------------------|
| \$0600C/\$0680C/\$0800C \$1000C/\$1200C | 3 ounces (90 ml) |
| \$1470C/\$1870C/ \$2070C/\$2170C | 12 ounces (355 ml) |
| S3070C | 25 ounces (740 ml) |

Step 17 Move the toggle switch to the ICE position and replace the front panel. The ice machine will automatically start ice making after the sanitize cycle is complete (approximately 35 minutes, S3070C - 80 minutes).

Procedure to Clean Heavily Scaled Ice Machines

IB models and Ice machines that are heavily scaled or have not been cleaned on a regular basis will need to run this procedure.

GENERAL

Clean and sanitize the ice machine every six months for efficient operation. If the ice machine requires more frequent cleaning and sanitizing, consult a qualified service company to test the water quality and recommend appropriate water treatment. The ice machine must be taken apart for cleaning and sanitizing.

Use only Manitowoc approved Ice Machine Cleaner and Sanitizer for this application (Manitowoc Cleaner part number 94-0546-3 and Manitowoc Sanitizer part number 94-0565-3). It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling. Read and understand all labels printed on bottles before use.

CLEANING PROCEDURE

∴ Caution

Do not mix Cleaner and Sanitizer solutions together. It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling.

A Warning

Wear rubber gloves and safety goggles (and/or face shield) when handling ice machine Cleaner or Sanitizer.

Ice machine cleaner is used to remove lime scale and mineral deposits. Ice machine sanitizer disinfects and removes algae and slime.

Step 1 Remove front door and top cover. This will allow easiest access for adding cleaning and sanitizing solutions.

Step 2 Set the toggle switch to the OFF position after ice falls from the evaporator at the end of a Harvest cycle. Or, set the switch to the OFF position and allow the ice to melt off the evaporator.

♠ Caution

Never use anything to force ice from the evaporator. Damage may result.

Step 3 Remove all ice from the bin/dispenser.

Step 4 Place the toggle switch in the CLEAN position. The water will flow through the water dump valve and down the drain. Wait until the water trough refills and water flows over the evaporator, then add the proper amount of ice machine cleaner.

| Model | Amount of Cleaner |
|--|--------------------|
| \$0600C/\$0680C/\$0800C \$1000C/\$1200C | 5 ounces (150 ml) |
| IB620C/IB680C/ IB820C/IB1020C | 5 ounces (150 ml) |
| \$1470C/\$1870C/ \$2070C/\$2170C | 9 ounces (270 ml) |
| S3070C | 16 ounces (475 ml) |

Step 5 Wait until the clean cycle is complete (approximately *35 minutes) then place the toggle switch in the OFF position and disconnect power to the ice machine (and dispenser when used).

NOTE: *S3070C Only - 80 minutes.



Disconnect the electric power to the ice machine at the electric service switch box.

Step 6 Remove parts for cleaning.

Please refer to the proper parts removal for your ice machine.

S600C/S680C/S850C/S1000C/S1200C - page 88 IB620C/IB680C/IB820C/IB1020C - page 91 S1470C/S1870C/S2170C - page 95 S3070C - page 98

PARTS REMOVAL FOR CLEANING/SANITIZING S600C/S680C/S850C/S1000C/S1200C

A. Remove the water curtain

- Gently flex the curtain in the center and remove it from the right side.
- Slide the left pin out.

B. Remove the ice thickness probe

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.

C. Remove the water distribution tube

NOTE: Distribution tube thumbscrews are retained to prevent loss. Loosen thumbscrews but do not pull thumbscrews out of distribution tube.

- Loosen the two outer screws (do not remove screws completely they are retained to prevent loss) and pull forward on the distribution tube to release from slip joint.
- Disassemble distribution tube by loosening the two (2) middle thumbscrews and dividing the distribution tube into two pieces.

D. Remove the water trough

- Depress tabs on right and left side of the water trough.
- Allow front of water trough to drop as you pull forward to disengage the rear pins.

E. Remove the water level probe

- Pull the water level probe straight down to disengage.
- Lower the water level probe until the wiring connector is visible.
- Disconnect the wire lead from the water level probe.
- Remove the water level probe from the ice machine.


F. Remove the water pump.

- Grasp pump and pull straight down on pump assembly until water pump disengages and electrical connector is visible.
- Disconnect the electrical connector.
- Remove the water pump assembly from ice machine.
- Do not soak the water pump motor in cleaner or sanitizer solution.

G. Remove the evaporator tray or water diverter from the bottom of the evaporator.

- · Loosen thumbscrew on left side of tray.
- Allow left side of tray to drop as you pull the tray to the left side. Continue until the outlet tube disengages from the right side.

NOTE: Proceed to page 101, Step 7.

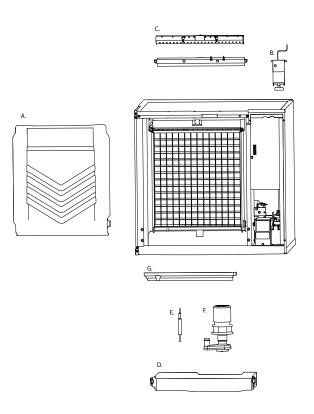

IB620C/IB680C/IB820C/IB1020C

A. Remove the splash shield

- Remove quarter turn connector from the right side of splash shield.
- Gently bow the center of the splash shield and lift up and forward to remove.

Important

Splash Shield must be reinstalled to prevent water leakage.

B. Remove the water curtain

- Gently flex the curtain in the center and remove it from the right side.
- Slide the left pin out.

C. Remove the ice thickness probe

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.

D. Remove the water level probe

 Loosen the screw that holds the water level probe in place. The probe can easily be cleaned at this point without complete removal. If complete removal is desired, remove the top cover, left and right side panels and control box cover. Disconnect the wire lead from the control board inside the electrical control box.

E. Remove the water trough

- Remove the quarter turn fasteners (turn counterclockwise) securing the trough in place.
- Pull forward on the water trough until the rear pins disengage from the water trough.
- Lift up and forward on the front of the water trough while allowing the rear of the water trough to drop.
- Remove the water trough from the ice machine.

F. Remove the water distribution tube

- Remove the clamp from the vinyl water hose on the right side of the distribution tube.
- Loosen the two thumbscrews which secure the distribution tube.
- Lift the right side of the distribution tube up, and then rotate it backward and to the right until the left side of the distribution tube disengages the thumbscrew.

∴ Caution

Do not force this removal. The locating tab must be clear before rotating the distribution tube back.

Pull the vinyl hose off the distribution tube.

Disassemble for cleaning:

- Twist both of the inner tube ends until the tabs line up with the keyways.
- Pull the inner tube ends outward.


G. Remove the water pump.

- Note position of water pump outlet, and then disconnect vinyl hose from the pump outlet.
- Rotate the thumbscrew that secures the pump to the bulkhead 1/4 turn clockwise.
- Rotate the water pump assembly 1/4 turn counterclockwise.
- Lower the pump assembly into the evaporator compartment.
- Disconnect the water pump power cord.
- Remove water pump assembly from ice machine.Do not soak the water pump motor in cleaner or sanitizer solution

H. Remove the bin thermostat probe

Loosen the 2 screws that holds the probe in place.
 The probe can easily be cleaned at this point without complete removal.

NOTE: Proceed to page 101, Step 7.

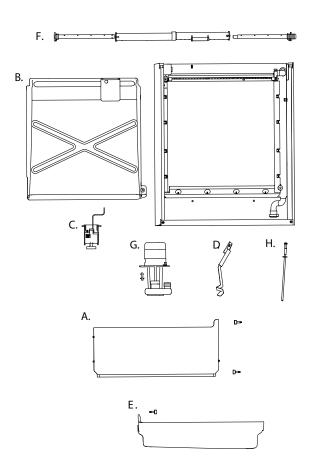

S1470C/S1870C/S2070C/S2170C

A. Remove Splash Shields.

- Grasp the top center of splash shields.
- Lift up and then out.

B. Remove ice thickness probe.

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.

C. Remove distribution tubes.

- Distribution tubes thumbscrews are retained to prevent loss. Loosen thumbscrews but do not pull thumbscrews out of distribution tube.
- Loosen the two outer screws and pull forward on the distribution tube to release from slip joint.
- Disassemble distribution tube by loosening the two (2) middle thumbscrews and dividing the distribution tube into two pieces.

D. Remove the water trough shield.

- Grasp the water trough shield in the center and the left end.
- Flex the water trough shield in the center and pull the left end forward until clear of the side wall.
 Repeat for the right end.
- · Pull water trough shield forward to remove.

E. Remove ice dampers.

- Grasp ice damper and apply pressure toward the back mounting bracket.
- Apply pressure to the front mounting bracket with thumb.
- Pull ice damper downward when the front ice damper pin disengages.


F. Remove the water pump assembly.

- Disconnect the vinyl distribution tube from the water pump.
- Disconnect the water pump and water level probe electrical connections.
- After the wires are disconnected squeeze the two tabs and lift the water pump assembly out of the ice machine.
- Do not immerse the water pump motor in cleaner or sanitizer solutions.

G. Remove the water trough.

- Depress the two tabs on the top of the water trough.
- Turn left and right ice dampers down to clear water trough.
- Pull forward on the water trough to remove.

NOTE: Proceed to page 101, Step 7.

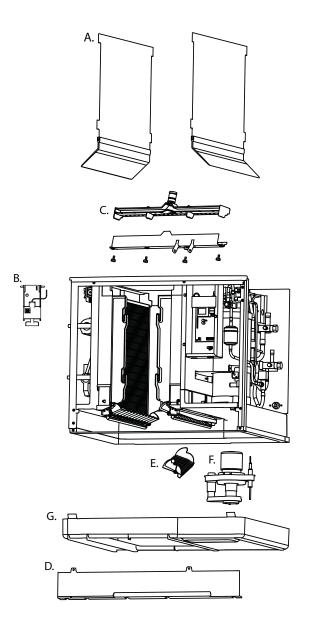

S3070C

A.Remove front evaporator shield.

- Remove four quarter turn connectors
- Remove splash shield

B.Remove left and right evaporator top covers.

- Remove two thumbscrews from the front of each evaporator top cover.
- Lift front of cover, pull forward to remove.

C.Remove Splash Shields.

NOTE: Each evaporator has a splash shield that must be removed - total of four splash shields.

- · Grasp the top center of splash shields.
- Lift up and then out.

D. Remove ice thickness probe.

- Compress the hinge pin on the top of the ice thickness probe.
- Pivot the ice thickness probe to disengage one pin then the other. The ice thickness probe can be cleaned at this point without complete removal. If complete removal is desired, disconnect the ice thickness control wiring from the control board.

E. Remove distribution tubes.

NOTE: Each evaporator has a distribution that must be removed - total of four distribution tubes.

- Distribution tube thumbscrews are retained to prevent loss. Loosen thumbscrews but do not pull thumbscrews out of distribution tube.
- Loosen the two outer screws and pull forward on the distribution tube to release from slip joint.
- Disassemble distribution tube by loosening the two (2) middle thumbscrews and dividing the distribution tube into two pieces.

F. Remove ice dampers.

NOTE: Each evaporator has an ice damper that must be removed - total of four ice dampers

- Grasp ice damper and apply pressure toward the back mounting bracket.
- Apply pressure to the front mounting bracket with thumb.
- Pull ice damper downward when the front ice damper pin disengages.


G. Remove the water pump assembly.

- Disconnect the vinyl distribution tube from both water pumps.
- Disconnect the water pump and water level probe electrical connections.
- After the wires are disconnected remove the two thumbscrews and lift the water pump assembly out of the ice machine.
- Remove the thumbscrews securing the water pumps (2 each pump) and remove water pumps.
 Do not immerse the water pump motor in cleaner or sanitizer solutions.
- Remove the water level probe from the assembly housing.

H. Remove the water trough.

• Pull forward on the water trough to remove.

NOTE: Proceed to page 101, Step 7.

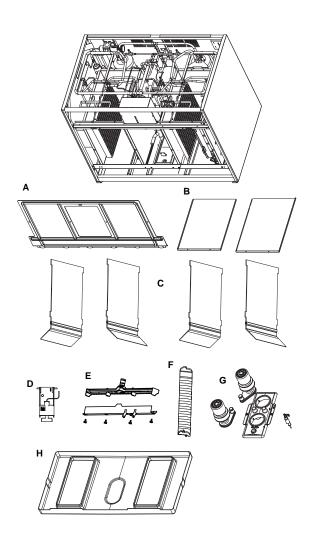

Step 7 Mix a solution of cleaner and warm water. Depending upon the amount of mineral buildup, a larger quantity of solution may be required. Use the ratio in the table below to mix enough solution to thoroughly clean all parts.

| Solution Type | Water | Mixed With |
|---------------|-------------|------------------------|
| Cleaner | 1 gal (4 l) | 16 oz (500 ml) cleaner |

Step 8 Use 1/2 of the cleaner/water mixture to clean all components. The cleaner solution will foam when it contacts lime scale and mineral deposits; once the foaming stops use a soft-bristle nylon brush, sponge or cloth (NOT a wire brush) to carefully clean the parts. Soak parts for 5 minutes (15 - 20 minutes for heavily scaled parts). Rinse all components with clean water.

Step 9 While components are soaking, use 1/2 of the cleaner/water solution to clean all food zone surfaces of the ice machine and bin (or dispenser). Use a nylon brush or cloth to thoroughly clean the following ice machine areas:

- Side walls
- Base (area above water trough)
- Evaporator plastic parts including top, bottom, and sides
- · Bin or dispenser

Rinse all areas thoroughly with clean water.

SANITIZING PROCEDURE

Step 10 Mix a solution of sanitizer and warm water.

| Solution Type | Water | Mixed With |
|---------------|---------------|----------------------------|
| Sanitizer | 6 gal. (23 l) | 4 oz (120 ml) sanitizer |

Step 11 Use 1/2 of the sanitizer/water solution to sanitize all removed components. Use a cloth or sponge to liberally apply the solution to all surfaces of the removed parts or soak the removed parts in the sanitizer/water solution. Do not rinse parts after sanitizing.

Step 12 Use 1/2 of the sanitizer/water solution to sanitize all food zone surfaces of the ice machine and bin (or dispenser). Use a cloth or sponge to liberally apply the solution. When sanitizing, pay particular attention to the following areas:

- Side walls
- Base (area above water trough)
- Evaporator plastic parts including top, bottom and sides
- Bin or dispenser

Do not rinse the sanitized areas.

Step 13 Replace all removed components.

Step 14 Reapply power to the ice machine and place the toggle switch in the CLEAN position.

Step 15 Wait about two minutes or until water starts to flow over the evaporator. Add the proper amount of Manitowoc Ice Machine Sanitizer to the water trough by pouring between the water curtain/splash shields and evaporator.

| Model | Amount of Sanitizer |
|--|---------------------|
| \$0600C/\$0680C/\$0800C \$1000C/\$1200C | 3 ounces (90 ml) |
| IB620C/IB680C/IB820C | 3 ounces (90 ml) |
| IB1020C | 3.5 ounces (104 ml) |
| \$1470C/\$1870C/ \$2070C/\$2170C | 12 ounces (355 ml) |
| S3070C | 25 ounces (740 ml) |

Step 16 The ice machine will stop after the sanitize cycle (approximately *35 minutes). Place the toggle switch in the OFF position and disconnect power to the ice machine.

*S3070C Only - 80 minutes.



Disconnect the electric power to the ice machine at the electric service switch box.

Step 17 Refer to step 6 and disassemble components. After dissembling proceed to step 18.

Step 18 Mix a solution of sanitizer and warm water.

| Solution Type | Water | Mixed With |
|------------------|---------------|-------------------------|
| Sanitizer | 6 gal. (23 l) | 4 oz (120 ml) sanitizer |

Step 19 Use 1/2 of the sanitizer/water solution to sanitize all removed components. Use a cloth or sponge to liberally apply the solution to all surfaces of the removed parts or soak the removed parts in the sanitizer/water solution. Do not rinse parts after sanitizing.

Step 20 Use 1/2 of the sanitizer/water solution to sanitize all food zone surfaces of the ice machine and bin (or dispenser). Use a cloth or sponge to liberally apply the solution. When sanitizing, pay particular attention to the following areas:

- Side walls
- Base (area above water trough)
- Evaporator plastic parts including top, bottom and sides
- Bin or dispenser

Do not rinse the sanitized areas.

Step 21 Install the removed parts, restore power and place the toggle switch in the ICE position.

ADDITIONAL COMPONENT REMOVAL

The following components may be removed for easier access in some installations or they may need to be removed and cleaned to correct an operational problem.

Water Dump Valve

The water dump valve normally does not require removal for cleaning. To determine if removal is necessary:

- 1. Locate the water dump valve and follow the vinyl tubing to the drain.
- 2. Set the toggle switch to ICE and start a Freeze cycle.
- Observe the drain outlet for leakage.
 - A. If the dump valve is leaking, remove, disassemble and clean it.
 - B. If the dump valve is not leaking, do not remove it. Instead, refer to cleaning and sanitizing procedure page 74.


Follow the procedure below to remove the dump valve.



Warning

Disconnect the electric power to the ice machine at the electric service switch box and turn off the water supply before proceeding.

- 4. Leaving the wires attached, press down and twist the coil 1/8 turn, then lift the coil assembly off the valve bodv.
- 5. Remove the nylon washer, plunger, and diaphragm.

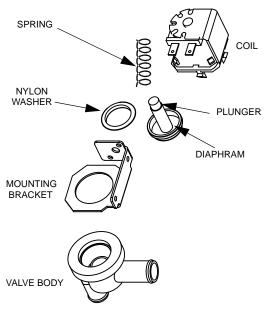

Dump Valve Disassembly

Water Inlet Valve

The water inlet valve normally does not require removal for cleaning. Follow the instructions below to determine if removal is necessary.

- Set the ICE/OFF/CLEAN switch to OFF. Locate the water inlet (in the water area of the ice machine). It directs water into the water trough.
- When the ice machine is off, the water inlet valve must completely stop water flow into the machine. Watch for water flow. If water flows, remove, disassemble and clean the valve.
- 3. When the ice machine is on, the water inlet valve must allow the proper water flow through it. Set the toggle switch to ON. Watch for water flow into the ice machine. If the water flow is slow or only trickles into the ice machine, remove, disassemble, and clean the valve.




Disconnect the electric power to the ice machine at the electric service switch box and turn off the water supply before proceeding.

Follow the procedure below to remove the water inlet valve.

- Remove the 1/4" hex head screws.
- 2. Remove, clean, and install the filter screen.

Drain Line Check Valve

The drain line check valve (not used on all models) should be inspected and cleaned, whenever the ice machine is cleaned. Water loss from the sump trough will indicate removal and cleaning are required.

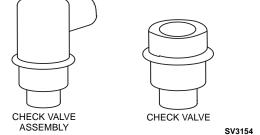

- 1. Remove check valve and tube assembly.
 - A. Tip assembly to right until tubing disengages.
 - B. Lift up on assembly to remove.
- 2. Remove insulation from check valve assembly.
- 3. Remove vinyl tubing from top of check valve.
- Soak in cleaner solution 10 minutes, and then flush with water to remove debris.

Evaporator Tray

- 1. Remove the water trough.
- 2. Directly below the evaporator, remove the thumbscrew on left side of tray.
- 3. Allow left side of tray to drop as you pull the tray to the left side. Continue until the outlet tube disengages from the right side.



Removal from Service/Winterization

GENERAL

Special precautions must be taken if the ice machine is to be removed from service for an extended period of time or exposed to ambient temperatures of 32°F (0°C) or below.

⚠ Caution

If water is allowed to remain in the ice machine in freezing temperatures, severe damage to some components could result. Damage of this nature is not covered by the warranty.

- Place the ice machine toggle switch in the OFF position.
- 2. Turn off the water supply.
- 3. Remove the water from the water trough.
- 4. Disconnect and drain the incoming ice-making water line at the rear of the ice machine.
- Blow compressed air in the drain openings in the rear of the ice machine until no more water comes out of the drain.
- Place the toggle switch in the ICE position, then wait 45 seconds for the water fill solenoid valve to energize. Blow compressed air through the incoming water supply in the rear of the ice machine until no more water comes out of the inlet water line.
- 7. Make sure water is not trapped in any of the water lines, drain lines, distribution tubes, etc.

CVD1486 WATER COOLED CONDENSING UNIT

Place the ice machine toggle switch into the OFF position.

- "Front seat" (shut off) the receiver service valve. Hang a tag on the switch as a reminder to open the valve before restarting.
- 2. Perform steps 1-6 on previous page.
- 3. Insert a large screwdriver between the bottom spring coils of the water regulating valve. Pry upward to open the valve.
- 4. Hold the valve open and blow compressed air through the condenser until no water remains.

Sequence of Operation

NOTE: The toggle switch must be in the ice position and the water curtain/ice dampers must be in place on the evaporator before the ice machine will start.

INITIAL START-UP OR START-UP AFTER AUTOMATIC SHUT-OFF

1. Water Purge

Before the compressor starts, the water pump and water dump solenoid are energized to purge the ice machine of old water. This feature ensures that the ice making cycle starts with fresh water.

Single and twin evaporator models energize the harvest valve(s) and air compressor (when used) during the water purge and they remain energized during refrigeration start-up.

CVD Condensing Unit:

When the refrigerant pressure is high enough to close the low-pressure control the contactor coil energizes and the compressor starts.

The compressor and fan cycling control* are supplied with power throughout the entire Freeze and Harvest Sequences. When the refrigerant pressure is high enough to close the fan cycling pressure control the condenser fan motor starts.

Energized Control Board Lights-

Single Evaporators = Left Bin (green)

Twin Evaporators = Left & Right Bin (green)

Quad Evaporators = All Curtain Switches (green), Dump Valve (red), Water Pump (red)

2. Refrigeration System Start-Up

Ice Machine Head Section: The liquid line solenoid valve and water inlet valve energize. Five seconds later single and twin evaporator models de-energize the harvest valve(s) and air compressor (when used).

CVD Condensing Unit:

When the refrigerant pressure is high enough to close the low-pressure control the contactor coil energizes and the compressor starts.

The compressor and fan cycling control* are supplied with power throughout the entire Freeze and Harvest Sequences. When the refrigerant pressure is high enough to close the fan cycling pressure control the condenser fan motor starts.

*The IB0680C & S0680C ice machines do not use a fan cycling control. The compressor and the condenser fan motor are wired through the contactor. Any time the contactor coil is energized, these components are supplied with power.

Energized Control Board Lights-

Single Evaporators = Left Bin (green)

Twin Evaporators = Left & Right Bin (green)

Quad Evaporators = All Curtain Switches (green), Water Solenoid (red), Liquid Solenoid (red)

FREEZE SEQUENCE

3. Pre chill

The compressor lowers the temperature of the evaporator(s) before the water pump(s) are energized. The water fill valve will remain energized until water contacts the water level probe.

Energized Control Board Lights-

Single Evaporators = Left Bin (green)

Twin Evaporators = Left & Right Bin (green)

Quad Evaporators = All Curtain Switches (green), Water Solenoid (red), Liquid Solenoid (red)

4. Freeze

The water pump(s) energizes and water flows over the evaporator. After water contacts the water level probe the water fill valve de-energizes. The water fill valve may cycle on and then off one more time.

The freeze cycle continues until the six minute freeze lock expires and enough ice has formed to allow water to contact the ice thickness probe. After approximately 10 seconds of continual water contact, the harvest sequence is initiated.

NOTE: Freeze lock is bypassed after moving the toggle switch from OFF to ICE position for the first cycle only.

Energized Control Board Lights-

Single Evaporators = Left Bin (green), water probe (green), Ice Probe (green *when water contacts the ice thickness probe*)

Twin Evaporators = Left & Right Bin (green), water probe (green), Ice Probe (green when water contacts the ice thickness probe)

Twin Evaporators = Left & Right Bin (green),

Quad Evaporators = All Curtain Switches (green), Water Level (green), Water Solenoid (red), Liquid Solenoid (red), Water Pump (red), Harvest (red when water contacts the ice thickness probe)

HARVEST SEQUENCE

5. Water Purge

The air compressor (when used) and the harvest valve(s) open at the beginning of the water purge to divert hot refrigerant gas into the evaporator.

The water pump continues to run, and the water dump valve energizes to purge the water in the water trough.

Single and twin evaporator models energize the water fill valve for the last 15 seconds of the water purge cycle.

CVD Condensing Unit:

When the refrigerant pressure is low enough to open the fan cycling pressure control the condenser fan motor stops.

* The IB0680C & S0680C ice machines do not use a fan cycle control, therefore the condenser fan motor will continue to run in the harvest cycle.

Energized Control Board Lights-

Single Evaporators = Left Bin (green), Harvest (red)
Twin Evaporators = Left & Right Bin (green), Harvest (red)

Quad Evaporators = All Curtain Switches (green), Liquid Solenoid (red), Dump Valve (red), Water Pump (red), Harvest (red), All Harvest Valves (red)

6. Harvest

The air compressor (when used) remains energized and the harvest valve(s) remains open. The refrigerant gas warms the evaporator causing the cubes to slide, as a sheet, off the evaporator and into the storage bin.

Energized Control Board Lights-

Single Evaporators = Left Bin (green), Harvest (red)
Twin Evaporators = Left & Right Bin (green), Harvest (red)

Quad Evaporators = All Curtain Switches (green), Liquid Solenoid (red), Harvest (red), All Harvest Valves (red)

Single evaporator models - The sliding sheet of cubes opens the water curtain and bin switch.

The momentary opening and re-closing of the bin switch will terminate the harvest sequence and return to the freeze sequence (Step 3 - 4.)

Twin & Quad evaporator models - The sliding sheet of cubes opens the ice damper and bin switch. The momentary opening and re-closing of the bin switch de-energizes the harvest valve for the evaporator. When all of the bin switches have opened and closed the ice machine will terminate the harvest sequence and return to the freeze sequence (Step 3 - 4.)

<u>Energized Control Board Lights (once ice drops)-</u> Single Evaporators = Left Bin (green *flashes once*)

Twin Evaporators = Left & Right Bin (green *flashes once*)

Quad Evaporators = All Curtain Switches (green flashes once), Liquid Solenoid (red)

Quad &Twin Evaporator Models Only 6A. Water Assist Harvest Feature

Typical duration of a Harvest sequence is less than 2.5 minutes. When the Harvest sequence time reaches 4 minutes, the following occurs:

4 minutes into a Harvest sequence: The water fill valve will energize to fill the trough with water until reaching the water level probe. 5 minutes into a Harvest sequence: The water pump will energize and flow water over the evaporators. The water fill valve remains on until water reaches the water level probe, the water pump remains on until all bin switches have been activated, or until the 7-minute Harvest sequence time limit is reached.

AUTOMATIC SHUT-OFF

7. Automatic Shut-Off

Ice Machine Section: Shuts off when:

- The storage bin is full at the end of a harvest sequence.
- The sheet of cubes fails to clear the water curtain and hold it open.
- Ice contacts the bin level thermostat probe (when used).
- Ice damper is held down.

After the water curtain or ice damper are held open for 30 seconds, the ice machine shuts off. The ice machine remains off for 3 minutes before it can automatically restart.

CVD Condensing Unit: The liquid line solenoid valve closes, allowing the refrigeration system to pump down. When the refrigerant pressure is low enough to open the fan cycling pressure control the condenser fan motor stops. When the refrigerant pressure is low enough to open the low pressure control, the contactor coil is de-energized and the compressor stops.

The ice machine remains off until enough ice has been removed from the storage bin to allow the ice to fall clear of the water curtain or ice damper. As the water curtain or ice damper swings back to the operating position, the bin switch re-closes and the ice machine restarts (steps 1 - 2), provided the 3 minute delay period is complete.

* All CVD0675 and early production CVD0685 condensing units were manufactured without a fan cycle control and will not energize and de-energize the fan motor. Current production CVD0685 are manufactured with a fan cycle control.

Energized Control Board Lights-

Single Evaporators = No Lights

Twin Evaporators = Depending on which water curtain is open, the closed bin light will be lit (green)

Quad Evaporators = Depending on which damper is open, the closed dampers will be lit (green)

| | Single & Twin Evaporator Energized Parts Chart | | | | | | | | |
|--|--|----------------------|-----------|---|------------------------|----------------------------------|---|---|--|
| Ice Making Sequence of Operation | Water Pump | Harvest Valve (s) | Air Pumps | Water Inlet Valve | Water Dump Valve | Liquid Line Solenoid Valve | Refrigeration Compressor & Condenser Fan Motor | Length of Time | |
| Start-Up - Initial or After Auto Shut Off | On | On | On | Off | On | Off | Off | 45 Seconds | |
| 1. Water Purge | | | | | | | | | |
| 2. Refrigeration System Start-up | Off | On | Off | On | Off | On | On | 5 Seconds | |
| Freeze Sequence 3. Pre chill | Off | Off | Off | On | Off | On | On | Initial Start-Up is 60 Seconds 30 Seconds thereafter | |
| 4. Freeze | On | Off | Off | Cycles Off then On/ Off, one more time | Off | On | On | Until 10 sec. water contact with ice thickness probe | |
| Harvest Sequence 5. Water Purge | On | On | On | 30 sec. Off, 15 sec. On | On | On | On | Factory-set at 45 Seconds | |

| Single & Twin Evaporator Energized Parts Chart (Continued) | | | | | | | | |
|--|---------------|----------------------|-----------|----------------------|------------------------|----------------------------------|---|---|
| Ice Making Sequence of Operation | Water Pump | Harvest Valve (s) | Air Pumps | Water Inlet Valve | Water Dump Valve | Liquid Line Solenoid Valve | Refrigeration Compressor & Condenser Fan Motor | Length of Time |
| 6. Harvest | Off | On | On | Off | Off | On | On | Bin switch activation |
| 7. Automatic Shut-Off | Off | Off | Off | Off | Off | Off | Off | Until all bin switches re-close & 3 min. delay expires |

| | Quad Evaporator Energized Parts Chart | | | | | | | |
|--|---------------------------------------|----------------------|-----------|---|------------------------|----------------------------------|---|--|
| Ice Making Sequence of Operation | Water Pump | Harvest Valve (s) | Air Pumps | Water Inlet Valve | Water Dump Valve | Liquid Line Solenoid Valve | Refrigeration Compressor & Condenser Fan Motor | Length of Time |
| Start-Up - Initial or After Auto Shut Off | On | Off | Off | Off | On | Off | Off | 45 Seconds |
| 1. Water Purge | | | | | | | | |
| Refrigeration System Start-up | Off | Off | Off | On | Off | On | On | 5 Seconds |
| Freeze Sequence 3. Pre chill | Off | Off | Off | On Outline Off | Off | On | On | 30 Seconds |
| 4. Freeze | On | Off | Off | Cycles Off then On/Off one more time | Off | On | On | Until 10 sec. water contact with ice thickness probe |
| Harvest Sequence 5. Water Purge | On | On | On | Off | On | On | On | 45 Seconds |

| Quad Evaporator Energized Parts Chart (Continued) | | | | | | | | |
|---|---------------|----------------------|-----------|----------------------|------------------------|----------------------------------|---|---|
| Ice Making Sequence of Operation | Water Pump | Harvest Valve (s) | Air Pumps | Water Inlet Valve | Water Dump Valve | Liquid Line Solenoid Valve | Refrigeration Compressor & Condenser Fan Motor | Length of Time |
| 6. Harvest | Off | On | On | Off | Off | On | On | Bin switch activation |
| 7. Automatic Shut-Off | Off | Off | Off | Off | Off | Off | Off | Until all bin switches re-close & 3 min. delay expires |

Safety Timers

The control board has the following non-adjustable safety timers:

- The ice machine is locked into the freeze cycle for 6 minutes before a harvest cycle can be initiated.
- The maximum freeze time is 60 minutes at which time the control board automatically initiates a harvest sequence (steps 5 & 6).
- The maximum harvest time is 3.5 minutes at which time the control board automatically ends the harvest cycle.
 When the bin switch is closed a freeze sequence initiates (steps 3 & 4). When the bin switch is open an automatic shutoff sequence initiates.
- The maximum water fill is 6 minutes.

Water Assist Harvest Feature

Twin & Quad Evaporators Only:

Typical duration of a Harvest sequence is less than 2.5 minutes. When the Harvest sequence time reaches 4 minutes, the following occurs:

4 minutes into a Harvest sequence: The water fill valve will energize to fill the trough with water.

5 minutes into a Harvest sequence: The water pump will energize and flow water over the evaporators.

The water fill valve and water pump remain on until all bin switches have been activated, or until the 7-minute Harvest sequence time limit is reached.

Warm Water Rinse Cycle

Single & Twin Evaporators Only:

Closing the back of the evaporator allows ice to build up on the rear of the evaporator and the plastic evaporator frame parts. After 200 freeze/harvest cycles have been complete the control board will initiate a warm water rinse.

After the 200th harvest cycle ends:

- The Clean and Harvest LED's energize to indicate the ice machine is in a warm water rinse.
- The compressor and harvest valve remain energized.
- The water pump energizes.
- The water inlet valve energizes until water contacts the water level probe.
- The compressor and harvest valve warm the water for 5 minutes, then de-energize.
- The water pump remains energized for an additional 5 minutes (10 minute total on time) then de-energizes.

The warm water rinse cycle can be terminated by moving the toggle switch to the OFF position, then back to ICE.

Troubleshooting

Safety Limits

In addition to standard safety controls, the control board has built in safety limit controls which protect the ice machine from major component failures.

Use the following procedures to determine if the control board contains a safety limit indication.

- 1. Move the toggle switch to OFF.
- 2. Move the toggle switch back to ICE.
- Watch the safety limit lights/harvest light on the control board. If a safety limit has been recorded, the corresponding light will flash once, twice or three times to indicate which safety limit stopped the ice machine.

Safety limits are stored and indicated by the control board after three cycles. The number of cycles required to stop the ice machine varies for each safety limit.

- Safety Limit 1 all models If the freeze time reaches 60 minutes, the control board automatically initiates a harvest cycle. If 6 consecutive 60-minute freeze cycles occur, the ice machine stops
- Safety Limit 2 single & twin evaporator models

 If the harvest time reaches 3.5 minutes, the control board automatically returns the ice machine to the freeze cycle. If three 500 consecutive 3.5 minute harvest cycles occur, the ice machine stops.
- Safety Limit 2 quad evaporator models If the harvest time reaches 7 minutes, the control board automatically returns the ice machine to the freeze cycle. If 500 consecutive 7 minute harvest cycles occur, the ice machine stops.
- Safety Limit 3 quad evaporator models If the low refrigerant pressure control opens, the ice machine shuts off and starts a 5 minute delay period. If 3 consecutive low pressure events occur the ice machine stops and flashes the harvest light.

Quad Evaporator Machines Only

When a safety limit condition causes the ice machine to stop, the harvest light on the control board continually flashes on and off. Use the following procedures to determine which safety limit has stopped the ice machine.

- 1. Move the toggle switch to OFF.
- 2. Move the toggle switch back to ICE.
- Watch the harvest light. It will flash one or two times, corresponding to safety limits 1 and 2, to indicate which safety limit stopped the ice machine.

After safety limit indication, the ice machine will restart and run until a safety limit is exceeded again.

When a safety limit condition is exceeded for 3 consecutive cycles the control board enters the limit to memory and the ice machine continues to run. Use the following procedure to determine if the control board contains a safety limit indication.

- 1. Move the toggle switch to OFF.
- Move the toggle switch back to ICE.
- Watch the harvest light. It will flash one or two times, corresponding to safety limits 1 and 2, to indicate which safety limit stopped the ice machine.

When a safety limit condition is exceeded (6 consecutive cycles for safety limit #1 or 500 cycles for safety limit #2) the ice machine stops, and the harvest light on the control board flashes on and off. Use the following procedure to determine which safety limit has stopped the ice machine.

- 1. Move the toggle switch to OFF.
- Move the toggle switch back to ICE.
- Watch the harvest light. It will flash one or two times, corresponding to safety limits 1 and 2, to indicate which safety limit stopped the ice machine.

After safety limit indication, the ice machine will restart and run until a safety limit is exceeded again.

SAFETY LIMIT ANALYSIS

According to the refrigeration industry, a high percentage of compressors fail as a result of external causes. These can include: flooding or starving expansion valves, dirty condensers, water loss to the ice machine, etc. The safety limits protect the ice machine (primarily the compressor) from external failures by stopping ice machine operation before major component damage occurs.

The safety limit system is similar to a high pressure cut-out control. It stops the ice machine, but does not tell what is wrong. The service technician must analyze the system to determine what caused the high pressure cut-out, or a particular safety limit, to stop the ice machine.

The safety limits are designed to stop the ice machine prior to major component failures, most often a minor problem or something external to the ice machine. This may be difficult to diagnose, as many external problems occur intermittently.

Example: An ice machine stops intermittently on safety limit #1 (long freeze times). The problem could be a low ambient temperature at night, a water pressure drop, the water is turned off one night a week, etc.

Refrigeration and electrical component failures will cause a safety limit trip. Eliminate all electrical components and external causes first. If it appears that the refrigeration system is causing the problem, use Manitowoc's Freeze Cycle Refrigeration System Operational Analysis Table, along with detailed charts, checklists, and other references to determine the cause.

The following checklists are designed to assist the service technician in analysis. However, because there are many possible external problems, do not limit your diagnosis to only the items listed.

SAFETY LIMIT#1

Freeze time exceeds 60 minutes for 6 consecutive freeze cycles

Possible Cause Checklist

Improper Installation

 Refer to "Installation/Visual Inspection Checklist" page 151.

Water System

- Dirty/defective water level probe
- Low water pressure (20 psig min.)
- High water pressure (80 psig max.)
- High water temperature (90°F/32.2°C max.)
- Clogged water distribution tube
- Dirty/defective water fill valve
- Dirty/defective water dump valve
- Defective water pump
- Loss of water from sump area

Electrical System

- Low incoming voltage
- Ice thickness probe out of adjustment
- Harvest cycle not initiated electrically
- Contactor not energizing
- Compressor electrically non-operational
- Defective fan cycling control
- Defective fan motor

Miscellaneous

- Non-Manitowoc components
- Improper refrigerant charge
- Defective head pressure control
- Defective harvest valve
- Defective compressor
- TXV starving or flooding (check bulb mounting)
- Non-condensable in refrigeration system
- Plugged or restricted high side refrigerant lines or component
- Restricted air flow/dirty condenser fins
- High inlet air temperature
- Condenser discharge air recirculation

SAFETY LIMIT #2

<u>Single & Twin Models</u> - Harvest time exceeds 3.5 minutes for 500 consecutive harvest cycles

Quad Models - Harvest time exceeds 7 minutes for 500 consecutive harvest cycles

Possible Cause Checklist

Improper Installation

 Refer to "Installation/Visual Inspection Checklist" page 151

Water System

- Water area (evaporator) dirty
- Dirty/defective water dump valve
- Vent tube not installed on water outlet drain
- Water freezing behind evaporator
- Plastic extrusions and gaskets not securely mounted to the evaporator
- Low water pressure (20 psig min.)
- Loss of water from sump area
- · Clogged water distribution tube
- Dirty/defective water fill valve
- Defective water pump

Electrical System

- · Ice thickness probe out of adjustment
- Ice thickness probe dirty
- Bin switch closed/defective
- Premature harvest

Refrigeration System

- Non-Manitowoc components
- Improper refrigerant charge
- Defective head pressure control valve
- Defective harvest valve
- TXV flooding (check bulb mounting)
- · Defective fan cycling control
- CVD1486 Only Water inlet valve is incorrectly adjusted or will not close during harvest cycle.

SAFETY LIMIT #3

Water System

- Water supply to machine is being interrupted
- Water leaking down the drain during freeze (dump valve)
- Water tracking into bin
- Uneven water flow over evaporator
- Water pump not pumping

Electrical System

- · Water level probe prematurely satisfied
- · Water inlet valve failure
- Water pump failure

Refrigeration System

- Low on Refrigerant
- Starving TXV

Control Board Testing

All replacement S Model control boards and ice machines with serial numbers larger than 110924847 have a control board that includes a diagnostic test cycle. The control board can be identified by the blue printed circuit board and a push button switch on the bottom left corner labeled "service mode"

CONTROL BOARD TEST CYCLE

- 1. Place the toggle switch in the ice position.
- 2. Press and hold the test button for 5 seconds.
- 3. The control board memory is cleared.
 - A. All safety limits are cleared
 - B. Resets to factory default settings
 - C. Calibration is cleared for ice thickness & water level probe.
- The control board relays close at 1 second intervals and energize the corresponding control board light.
- The relays remain closed and the lights remain energized for 3.5 minutes to allow time to test voltage at components.
- 6. After 3.5 minutes the ice machine automatically exits the test cycle.
- An ice making cycle will automatically start (unless the toggle switch is moved to OFF).
- 8. Water level and ice thickness probe calibration are processed and stored in control board memory during the <u>second</u> ice making cycle.

NOTE: The test cycle can be terminated at anytime by moving the toggle switch from ICE to OFF, or by disconnecting and reapplying line voltage to the ice machine.

Troubleshooting By Symptom

The troubleshooting procedures follow flow charts. There are four symptoms, the symptom that you are experiencing will determine which flow chart to use. The flow chart asks yes and no questions to determine the problem. The flow chart will direct you to a procedure to correct the problem.

Symptom #1

Ice Machine Stops Running Toggle Switch is in the ICE position or

Has a History of Shutting Down

 Refer to Ice Machine Stops Running Flow Chart (page 131)

Symptom #2

Ice Machine has a Long Freeze Cycle. Ice Formation is Thick

Thin Ice Fill on Top or Bottom of Evaporator or

Low Production

Safety Limit #1 (possible)

 Refer to Freeze Cycle Refrigeration System Operational Analysis Table (page 138)

Symptom #3

Ice Machine Will Not Harvest - Freeze Cycle is Normal and Ice Cubes are Not Melted After Harvest

Safety Limit #2 (possible)

 Refer to Refrigeration Harvest Flow Chart (page 165)


Symptom #4


Ice Machine Will Not Harvest - Freeze Cycle is Normal and Ice Cubes are Melted After Harvest

 Refer to Ice Melt out Flow Chart (page 172)

Symptom #1 Ice Machine Will Not Run

Ice Machine stops running or has history of shutting down

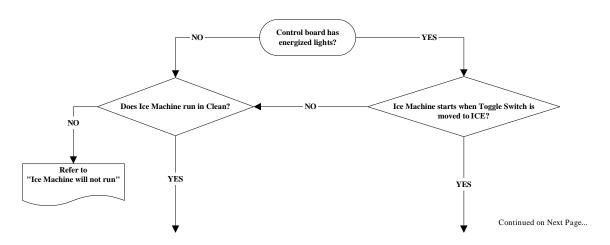

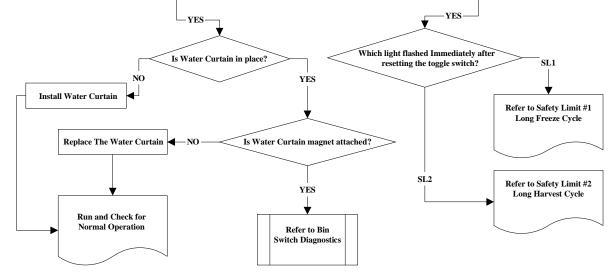

Part Number 80-1505-3 6/11

DIAGNOSING AN ICE MACHINE HEAD SECTION THAT WILL NOT RUN

A Warning

High (line) voltage is applied to the control board (terminals #55 and #56) at all times. Removing control board fuse or moving the toggle switch to OFF will not remove the power supplied to the control board.

- Verify primary voltage is supplied to ice machine and the fuse/circuit breaker is closed.
- Verify control board fuse is okay. If the bin switch or water level probe light functions, the fuse is okay.
- Verify all bin switches function properly. A defective bin switch can falsely indicate a full bin of ice.
- Verify ICE/OFF/CLEAN toggle switch functions properly. A defective toggle switch may keep the ice machine in the OFF mode.
- Verify low DC voltage is properly grounded. Loose DC wire connections may intermittently stop the ice machine.
- Replace the control board. Be sure steps 1-6 were followed thoroughly. Intermittent problems are not usually related to the control board.

DIAGNOSING A CONDENSING UNIT THAT WILL NOT RUN

If the ice machine water pump is not energized, refer to "Diagnosing an Ice Machine Head Section that Will Not Run page 133."

- Verify primary voltage is supplied to ice machine condensing unit and the fuse/circuit breaker is closed.
- Verify the high-pressure cutout and low-pressure cutouts are closed. The HPCO and LPCO are closed if primary line voltage is present at the contactor coil terminals.
- 3. Verify line voltage is present at the contactor coil.
- 4. Verify the contactor contacts are closed and line voltage is present across all lines.
- 5. Refer to compressor diagnostics page 135.

COMPRESSOR ELECTRICAL DIAGNOSTICS

The compressor does not start or will trip repeatedly on overload.

Check Resistance (Ohm) Values

NOTE: Compressor windings can have very low ohm values. Use a properly calibrated meter.

Perform the resistance test after the compressor cools. The compressor dome should be cool enough to touch (below 120°F/49°C) to assure that the overload is closed and the resistance readings will be accurate.

Single Phase Compressors

- Disconnect power then remove the wires from the compressor terminals.
- The resistance values between C and S and between C and R, when added together, should equal the resistance value between S and R.
- If the overload is open, there will be a resistance reading between S and R, and open readings between C and S and between C and R. Allow the compressor to cool, then check the readings again.

Three Phase Compressors

- Disconnect power and remove the wires from the compressor terminals.
- The resistance values between L1 and L2, between L2 and L3, and between L3 and L1 should all be equal.
- If the overload is open, there will be open readings between L1 and L2, between L2 and L3, and between L3 and L1. Allow the compressor to cool, then check the readings again.

Check Motor Windings to Ground

Check continuity between all three terminals and the compressor shell or copper refrigeration line. Scrape metal surface to get good contact. If continuity is present, the compressor windings are grounded and the compressor should be replaced.

Compressor Drawing Locked Rotor

To determine if the compressor is seized, check the amp draw while the compressor is trying to start.

The two likely causes of this are a defective starting component and a mechanically seized compressor.

To determine which you have:

- Install high and low side gauges.
- Try to start the compressor.
- · Watch the pressures closely.
- If the pressures do not move, the compressor is seized. Replace the compressor.

If the pressures move, the compressor is turning slowly and is not seized. Check the capacitors and relay.

Compressor Drawing High Amps

The continuous amperage draw on start-up should not be near the maximum fuse size indicated on the serial tag.

The wiring must be correctly sized to minimize voltage drop at compressor start-up. The voltage when the compressor is trying to start must be within ±10% of the nameplate voltage.

DIAGNOSING CAPACITORS

- If the compressor attempts to start, or hums and trips the overload protector, check the starting components before replacing the compressor.
- Visual evidence of capacitor failure can include a bulged terminal end or a ruptured membrane. Do not assume a capacitor is good if no visual evidence is present.
- A good test is to install a known good substitute capacitor.
- Use a capacitor tester when checking a suspect capacitor. Clip the bleed resistor off the capacitor terminals before testing.

Symptom #2 Low Production, Long Freeze Cycle

Ice Machine has a Long Freeze Cycle.
Ice Formation is Thick

or

Thin Ice Fill on Top or Bottom of Evaporator

Low Production

How to Use the Freeze Cycle Refrigeration System Operational Analysis Table

GENERAL

These tables must be used with charts, checklists and other references to eliminate refrigeration components not listed on the tables and external items and problems which can cause good refrigeration components to appear defective.

The tables list five different defects that may affect the ice machine's operation.

NOTE: A low-on-charge ice machine and a starving expansion valve have very similar characteristics and are listed under the same column.

NOTE: Before starting, see "Before Beginning Service" page 149 for a few questions to ask when talking to the ice machine owner.

PROCEDURE

Step 1 Complete the "Operation Analysis" column.

Read down the left "Operational Analysis" column. Perform all procedures and check all information listed. Each item in this column has supporting reference material to help analyze each step.

While analyzing each item separately, you may find an "external problem" causing a good refrigerant component to appear bad. Correct problems as they are found. If the operational problem is found, it is not necessary to complete the remaining procedures.

Step 2 Enter check marks ($\sqrt{}$).

Each time the actual findings of an item in the "Operational Analysis" column matches the published findings on the table, enter a check mark.

Example: Freeze cycle suction pressure is determined to be low. Enter a check mark in the "low" column.

Step 3 Add the check marks listed under each of the four columns. Note the column number with the highest total and proceed to "Final Analysis."

NOTE: If two columns have matching high numbers, a procedure was not performed properly, supporting material was not analyzed correctly or the problem component is not covered by the analysis table.

SYMPTOM #2 - REFRIGERATION SYSTEM OPERATIONAL ANALYSIS TABLES

S QuietQube Models Single Expansion Valve

| Operational Analysis | 1 | 2 | 3 | 4 | | | |
|----------------------------------|---|--|---|---|--|--|--|
| Ice Production | Published 24 hour ice production Calculated (actual) ice production NOTE: The ice machine is operating properly if the ice fill patterns is normal and ice production is within 10% of charted capacity. | | | | | | |
| Installation and Water System | All installation and water related problems must be corrected before proceeding with chart. | | | | | | |
| Ice Formation Pattern | Ice formation is extremely thin on outlet of evaporator -or- No ice formation on the entire evaporator | lce formation normal -or- lce formation is extremely thin on outlet of evaporator -or- No ice formation on entire evaporator | lce formation normal -or- lce formation is extremely thin on inlet of evaporator -or- No ice formation on entire evaporator | Ice formation normal -or- No ice formation on entire evaporator | | | |

S QuietQube Models Single Expansion Valve

| Operational Analysis | 1 | 2 | 3 | 4 | | |
|--|---|--|--|--|--|--|
| Safety Limits Refer to "Analyzing Safety Limits" page 125 to eliminate all non-refrigeration problems. | Stops on safety limit: 1 or 2 | Stops on safety limit: 1 or 2 | Stops on safety limit: 1 or 2 | Stops on safety limit: | | |
| Freeze Cycle Discharge Pressure 1 minute Middle End into cycle | If discharge pressure is High or Low refer to freeze cycle high or low discharge pressure problem checklist page 157 & page 158 to eliminate problems and/or components not listed on this table before proceeding. | | | | | |
| Freeze Cycle Suction Pressure | If suction pressure is High or Low refer to freeze cycle high or low suction pressure problem checklist page 160 & page 161 to eliminate problems and/or components not listed on this table before proceeding. | | | | | |
| 1 minute Middle End | Suction pressure is High | Suction pressure is Low or Normal | Suction pressure is Normal or High | Suction pressure is High | | |
| Harvest Valve | Audible refrigerant flow through left or right valve in Freeze cycle | No audible refrigerant flow through left or right valve in Freeze cycle | No audible refrigerant flow through left or right valve in Freeze cycle | No audible refrigerant flow through left or right valve in Freeze cycle | | |

Part Number 80-1505-3 6/11

S QuietQube Models Single Expansion Valve

| | | • | | |
|---|--|---|--|---|
| Operational Analysis | 1 | 2 | 3 | 4 |
| Attach a temperature probe on the suction line with-in 6" of the shut-off valve outlet. Record the low event at the end of the freeze cycle | Suction line temp. at the suction shut-off valve is greater than 10°F (-12.2°C) at the end of the freeze cycle | Suction line temp. at the suction shut-off valve is greater than 10°F (-12.2°C) at the end of the freeze cycle | Suction line temp. at the suction shut-off valve is less than 10°F (-12.2°C) at the end of the freeze cycle | Suction line temp. at the suction shut-off valve is greater than 10°F (-12.2°C) at the end of the freeze cycle |
| Final Analysis Enter total number of boxes checked in each column. | Harvest Valve Leaking | Low On Charge -Or- TXV Starving | Refrigerant Overcharge -Or- TXV Flooding | Compressor |

Twin Expansion Valve - \$1470C/\$1870C/\$2070C/\$2170C

| | Thin Expansion fairs of 1100/010100/021100 | | | | | | | |
|------------------------------------|---|--|---|---|--|--|--|--|
| Operational Analysis | 1 | 2 | 3 | 4 | | | | |
| Ice Production | Published 24-hour ice production Calculated (actual) 24-hour ice production NOTE: The ice machine is operating properly if the ice fill pattern is normal and ice production is within 10% of charted capacity. | | | | | | | |
| Installation and Water System | All installation and water- | related problems must be o | corrected before proceeding | g with chart. | | | | |
| Ice Formation Pattern Left Right | lce formation is extremely thin on outlet of one evaporator or- No ice formation on top of one evaporator | Ice formation is normal -or- Ice formation is extremely thin on outlet of one or both evaporators -or- No ice formation on one or both evaporators | Ice formation is normal -or- Ice formation is extremely thin on the inlet of one evaporator -or- No ice formation on one evaporator | Ice formation is normal -or- No ice formation on both evaporators | | | | |

Twin Expansion Valve - \$1470C/\$1870C/\$2070C/\$2170C

| Operational Analysis | 1 | 2 | 3 | 4 | | |
|--|--|--------------------------------------|---------------------------------------|-----------------------------|--|--|
| Safety Limits Refer to "Analyzing Safety Limits" page 125 to eliminate all non-refrigeration problems. | Stops on safety limit: 1 or 2 | Stops on safety limit: 1 or 2 | Stops on safety limit: 1 or 2 | Stops on safety limit: | | |
| Freeze Cycle Discharge Pressure 1 minute Middle End | If discharge pressure is High or Low, refer to Freeze cycle high or low discharge pressure problem checklist page 157 & page 158 to eliminate problems and/or components not liste this table before proceeding. | | | | | |
| Freeze Cycle Suction Pressure | If suction pressure is High or Low, refer to Freeze cycle high or low suction pressure problem check page 160 & page 161 to eliminate problems and/or components not listed on this table before proceeding. | | | | | |
| 1 minute Middle End | Suction pressure is High | Suction pressure is Low or Normal | Suction pressure is High or Normal | Suction pressure is High | | |

Twin Expansion Valve - S1470C/S1870C/S2070C/S2170C

| Operational Analysis | 1 | 2 | 3 | 4 |
|---|--|--|---|--|
| Harvest Valve | Audible refrigerant flow through left or right valve in Freeze cycle | No audible refrigerant flow through left or right valve in Freeze cycle | No audible refrigerant flow through left or right valve in Freeze cycle | No audible refrigerant flow through left or right valve in Freeze cycle |
| Suction Line Temperature Attach a temperature probe on the suction line within 6 in. of the shut-off valve outlet. Record the low event at the end of the Freeze cycle. | Suction line temperature at the suction shut-off valve is greater than 10°F (-12.2°C) at the end of the Freeze cycle | Suction line temperature at the suction shut-off valve is greater than 10°F (-12.2°C) at the end of the Freeze cycle | Suction line temperature at the suction shut-off valve is less than 10°F (-12.2°C) at the end of the Freeze cycle | Suction line temperature at the suction shut-off valve is greater than 10°F (-12.2°C) at the end of the Freeze cycle |
| Final Analysis Enter total number of boxes checked in each column. | Harvest Valve Leaking | Low on charge -or- TXV starving | Refrigerant Overcharge -or- TXV flooding | Compressor |

Part Number 80-1505-3 6/11

Quad Expansion Valve - \$3070C

| Operational Analysis | 1 | 2 | 3 | 4 | |
|---|------------------------------------|---|-----------------------------|--|--|
| Ice Production | Air-Temperature Entering Condenser | | | | |
| Installation and Water System | All installation and water | related problems must be o | corrected before proceeding | g with chart. | |
| Ice Formation Pattern Evaporators are numbered left to right viewed from the front of the ice machine Evaporator #1 Evaporator #2 Evaporator #3 Evaporator #4 | Ice formation is normal | Ice formation is extremely thin on outlet of 1 or more evaporators -or- No ice formation on entire evaporator | Ice formation normal | Ice formation normal or No ice formation on entire evaporator | |

Quad Expansion Valve - \$3070C

| Quad Expansion valve - 35070C | | | | | |
|--|---|--------------------------------------|---------------------------------------|-----------------------------|--|
| Operational Analysis | 1 | 2 | 3 | 4 | |
| Safety Limits | | | | | |
| Refer to "Analyzing Safety Limits" page 125 to eliminate all non refrigeration problems | Stops on Safety Limit: 2 | Stops on Safety Limit: 1 or 2 | Stops on Safety Limit: | Stops on Safety Limit: | |
| Freeze Cycle Discharge Pressure 1 minute Middle End | If discharge pressure is High or Low refer to freeze cycle high or low discharge pressure problem checklist page 157 & page 158 to eliminate problems and/or components not listed on this table before proceeding. | | | | |
| Freeze Cycle Suction Pressure If suction pressure is High or Low refer to free: page 160 & page 161 to eliminate problem pi | | | | | |
| 1 minute Middle End | Suction pressure is Normal or High | Suction pressure is Low or Normal | Suction pressure is Normal or High | Suction pressure is High | |

Quad Expansion Valve - \$3070C

| Operational Analysis | 1 | 2 | 3 | 4 |
|--|--|--|---|---|
| Evaporator Outlet Temperature Comparison Attach and insulate temperature probes between evaporator outlet and 90° elbow | Evaporator outlet temperatures are within 10°F of each other | Evaporator outlet temperatures are NOT within 10°F of each other or Within 10°F of each other and above 32°F | Evaporator outlet temperatures are NOT within 10°F of each other | Evaporator outlet temperatures are within 10°F of each other |
| Harvest Valve A leaking harvest valve gives an audible indication before ice fill pattern or machine performance is affected | Audible flow of refrigerant through any harvest valve during the freeze cycle | No Audible flow of refrigerant through any harvest valve during the freeze cycle | No Audible flow of refrigerant through any harvest valve during the freeze cycle | No Audible flow of refrigerant through any harvest valve during the freeze cycle |
| Final Analysis Enter total number of boxes checked in each column. | Harvest Valve Leaking | Low On Charge -Or- TXV Starving | Refrigerant Overcharge or TXV Flooding | Compressor |

SYMPTOM #2 - FREEZE CYCLE REFRIGERATION SYSTEM OPERATIONAL ANALYSIS TABLE PROCEDURES

The following is the procedures for completing each step of the Symptom #2 - Freeze Cycle Refrigeration System Operational Analysis Tables. Each procedure must be performed exactly for the table to work correctly.

Before Beginning Service

Ice machines may experience operational problems only during certain times of the day or night. A machine may function properly while it is being serviced, but malfunctions later. Information provided by the user can help the technician start in the right direction, and may be a determining factor in the final diagnosis.

Ask these questions before beginning service:

- When does the ice machine malfunction? (night, day, all the time, only during the Freeze cycle, etc.)
- When do you notice low ice production? (one day a week, every day, on weekends, etc.)
- Can you describe exactly what the ice machine seems to be doing?
- Has anyone been working on the ice machine?
- During "store shutdown," is the circuit breaker, water supply or air temperature altered?
- Is there any reason why incoming water pressure might rise or drop substantially?

Ice Production Check

The amount of ice a machine produces directly relates to the operating water and air temperatures. This means a condensing unit with a 70°F (21.2°C) outdoor ambient temperature and 50°F (10.0°C) water produces more ice than the same model condensing unit with a 90°F (32.2°C) outdoor ambient temperature and 70°F (21.2°C) water.

| 1. | Determine the ice machine operating conditions: |
|----|---|
| | Air temp entering condenser:° |
| | Air temp around ice machine:° |
| | Water temp entering sump trough:° |
| 2 | Pefer to the appropriate 24-Hour Ice Production |

- Refer to the appropriate 24-Hour Ice Production Chart.
 Use the operating conditions determined in step 1 to find
 published 24-hour ice production:
- Times are in minutes.
 Example: 1 min. 15 sec. converts to 1.25 min.
 (15 seconds ÷ 60 seconds = .25 minutes)
- Weights are in pounds.
 Example: 2 lb. 6 oz. converts to 2.375 lb.
 (6 oz. ÷ 16 oz. = .375 lb.)
 - Perform an ice production check using the formula below.

| 1. | Freeze Time | + | Harvest Time | = | Total Cycle Time |
|----|-------------------------------|---|---------------------|---|------------------------------|
| 2. | 1440 Minutes in 24 Hrs. | ÷ | Total Cycle Time | = | Cycles per Day |
| 3. | Weight of One Harvest | × | Cycles per Day | = | Actual 24-Hour Production |

Weighing the ice is the only 100% accurate check. However, if the ice pattern is normal and the 1/8 in, thickness is maintained, the ice slab weights listed with

1/8 in. thickness is maintained, the ice slab weights listed with the 24-Hour Ice Production Charts may be used.

- Compare the results of step 3 with step 2. Ice production is normal when these numbers match closely. If they match closely, determine if:
- Another ice machine is required.
- More storage capacity is required.
- Relocating the existing equipment to lower the load conditions is required.

Installation/Visual Inspection Checklist Inadequate Clearances

· Check all clearances on sides, back and top.

Ice machine is not level

Level the ice machine

Condenser is dirty

Clean the condenser

Water filtration is plugged (if used)

Install a new water filter

Water drains are not run separately and/or are not vented

 Run and vent drains according to the Installation Manual

Line set is improperly installed

· Reinstall according to the Installation Manual

Water System Checklist

A water-related problem often causes the same symptoms as a refrigeration system component malfunction.

Water system problems must be identified and eliminated prior to replacing refrigeration components.

Water area (evaporator) is dirty

Clean as needed

Water inlet pressure not between 20 and 80 psig (1-5 Bar, 138-552 kPa).

 Install water regulator valve or increase water pressure

Incoming water temperature is not between 40°F (4.4°C) and 90°F (32.2°C)

 If too hot, check the hot water line check valves in other store equipment

Water filtration is plugged (if used)

Install a new water filter

Water dump valve leaking during the Freeze cycle

Clean/replace dump valve as needed

Vent tube is not installed on water outlet drain

See Installation Instructions

Hoses, fittings, etc., are leaking water

Repair/replace as needed

Water fill valve or float is stuck open or closed

Clean/replace as needed

Water is spraying out of the sump trough area

Stop the water spray

Uneven water flow across the evaporator

Clean the ice machine

Water is freezing behind the evaporator

Correct the water flow

Plastic extrusions and gaskets are not secured to the evaporator

Remount/replace as needed

Ice Formation Pattern

Evaporator ice formation pattern analysis is helpful in ice machine diagnostics.

Analyzing the ice formation pattern alone cannot diagnose an ice machine malfunction. However, when this analysis is used along with Manitowoc's Symptom #2 - Refrigeration System Operational Analysis Table, it can help diagnose an ice machine malfunction.


Any number of problems can cause improper ice formation.

Important

Keep the water curtain in place while checking the ice formation pattern to ensure no water is lost.

Evaporator Tubing Routing

Routing of the tubing on the back of the evaporator determines the ice fill pattern failure mode. The evaporator outlet tubing does not exit directly at the top of the evaporator, but exits several inches below the top of the evaporator. Extremely Thin at the Evaporator Outlet will first be visible several inches below the top of the evaporator. Extremely Thin at Evaporator Inlet will first be visible at the bottom of the evaporator.

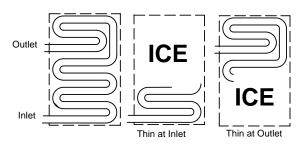


ICE FORMATION PATTERN IB MODELS

Tubing routing for Ice Beverage evaporators is different. The evaporator outlet is moved lower on the evaporator.

- IB600 and IB800 evaporators outlets exit roughly 1/2 way down the evaporator. Extremely Thin at the Evaporator Outlet will first be visible near the middle of the evaporator
- IB1000 evaporator outlet is roughly 3/4 of the way down the evaporator. Extremely Thin at the Evaporator Outlet will first be visible near the bottom and then the right side of the evaporator.

Extremely Thin at the Evaporator Inlet remains the same as the other models and will first be visible several inches above the bottom of the evaporator.

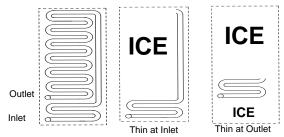

Ice Formation Patterns

1. Normal Ice Formation

Ice forms across the entire evaporator surface.

At the beginning of the Freeze cycle, it may appear that more ice is forming at the evaporator inlet, than on the evaporator outlet. At the end of the Freeze cycle, ice formation at the outlet will be close to, or just a bit thinner than, ice formation at the inlet. The dimples in the cubes at the outlet of the evaporator may be more pronounced than those at the inlet. This is normal.

It is normal for ice thickness to vary up to 1/16" across the surface of the evaporator. The ice bridge thickness at the ice thickness control probe should be at least 1/8". The ice thickness probe must be set to maintain the ice bridge thickness at approximately 1/8 in. If ice forms uniformly across the evaporator surface, but does not reach 1/8 in. in the proper amount of time, this is still considered normal ice fill pattern.

2. Extremely Thin at Evaporator Outlet

There is no ice, or a considerable lack of ice formation, at the evaporator outlet.

Examples: No ice at all at the outlet half of the evaporator, but ice forms on the inlet half of the evaporator. Or, the ice at the outlet of the evaporator reaches 1/8 in. to initiate a harvest, but the inlet of the evaporator already has 1/2 in. to 1 in. of ice formation.

3. Extremely Thin at Evaporator Inlet

There is no ice, or a considerable lack of ice formation on the evaporator inlet. Examples: The ice at the outlet of the evaporator reaches 1/8 in. to initiate a harvest, but there is no ice formation at all on the inlet of the evaporator.

4. No Ice Formation

The ice machine operates for an extended period, but there is no ice formation at all on the evaporator.

Analyzing Discharge Pressure

| 1. Determine the ice machin | ne operating conditions: |
|--|--------------------------|
| Air temp. entering conder | nser |
| Air temp. around ice mac | hine |
| Water temp. entering sum | np trough |
| Refer to Cycle Times/24-l Refrigeration Pressure Cl being checked. | |
| Use the operating condition to find the published norm | |
| Freeze Cycle | |
| Harvest Cycle | |
| 3. Perform an actual discha- | rge pressure check. |
| | Freeze Cycle psig |
| 1 Minute into | |
| Freeze Cycle | |
| Middle of Freeze Cycle | |
| End of Freeze Cycle | |

4. Compare the actual discharge pressure (step 3) with the published discharge pressure (step 2).

The discharge pressure is normal when the actual pressure falls within the published pressure range for the ice machine's operating conditions. It is normal for the discharge pressure to be higher at the beginning of the Freeze cycle (when load is greatest), then drop throughout the Freeze cycle.

Discharge Pressure High Checklist

Improper Installation

 Refer to "Installation/Visual Inspection Checklist" page 151

Condenser Restriction

- High inlet air temperature
- · Condenser discharge air recirculation
- Dirty condenser fins
- Defective fan cycling control
- Defective fan motor

Improper Refrigerant Charge

- Overcharged
- · Non-condensable in system
- · Wrong type of refrigerant

Other

- Non-Manitowoc components in system
- High side refrigerant lines/component restricted (before mid-condenser)
- · Defective head pressure control valve
- Water Inlet Valve is incorrectly adjusted (CVD1486 only)

NOTE: Do not limit your diagnosis to only the items listed in the checklists.

Freeze Cycle Discharge Pressure Low Checklist Improper Installation

 Refer to "Installation/Visual Inspection Checklist" page 151

Improper Refrigerant Charge

- Undercharged
- Wrong type of refrigerant

Other

- Non-Manitowoc components in system
- High side refrigerant lines/component restricted (before mid-condenser)
- · Defective head pressure control valve
- Defective fan cycle control
- Water regulating valve incorrectly set (CVD1486 only)

NOTE: Do not limit your diagnosis to only the items listed in the checklists.

Analyzing Suction Pressure

The suction pressure gradually drops throughout the Freeze cycle. The actual suction pressure (and drop rate) changes as the air and water temperature entering the ice machine changes. These variables also determine the Freeze cycle times.

To analyze and identify the proper suction pressure drop throughout the Freeze cycle, compare the published suction pressure to the published Freeze cycle time.

NOTE: Analyze discharge pressure before analyzing suction pressure. High or low discharge pressure may be causing high or low suction pressure.

Procedure

Step

- 1.Determine the ice machine operating conditions.
 *Temperature of air entering the condenser. Look up and determine the published suction pressure.
- 2.Perform an actual suction pressure check at the beginning, middle and end of the Freeze cycle. *Freeze cycle begins when the water pump starts
- 3.Compare the actual Freeze cycle suction pressure (step 2) to the published Freeze cycle pressure. Determine if the suction pressure is high, low or normal.

Suction Pressure High Checklist

Improper Installation

 Refer to "Installation/Visual Inspection Checklist" page 151

Discharge Pressure

 Discharge pressure is too high and is affecting suction pressure – refer to "Freeze Cycle Discharge Pressure High Checklist" page 157

Improper Refrigerant Charge

- Overcharged
- Wrong type of refrigerant
- Non-condensable in system

Other

- Non-Manitowoc components in system
- Harvest valve leaking
- TXV flooding (check bulb mounting)
- · Defective compressor

NOTE: Do not limit your diagnosis to only the items listed in the checklists.

Suction Pressure Low Checklist

Improper Installation

 Refer to "Installation/Visual Inspection Checklist" page 151

Discharge Pressure

 Discharge pressure is too low and is affecting suction pressure – refer to "Freeze Cycle Discharge Pressure Low Checklist" page 156

Improper Refrigerant Charge

- Undercharged
- Wrong type of refrigerant

Other

- Non-Manitowoc components in system
- Improper water supply over evaporator refer to "Water System Checklist" page 152
- Loss of heat transfer from tubing on back side of evaporator
- Restricted/plugged liquid line drier
- Restricted/plugged tubing in suction side of refrigeration system
- TXV starving

NOTE: Do not limit your diagnosis to only the items listed in the checklists.

Harvest Valve

The harvest valve is an electrically operated valve that opens when energized, and closes when deenergized.

NORMAL OPERATION

The valve is de-energized (closed) during the Freeze cycle and energized (open) during the Harvest cycle. The valve is positioned between the receiver and the evaporator and performs two functions:

 Prevents refrigerant from entering the evaporator during the Freeze cycle.

The harvest valve is not used during the Freeze cycle. The harvest valve is de-energized (closed) preventing refrigerant flow from the receiver into the evaporator.

2. Allows refrigerant vapor to enter the evaporator in the Harvest cycle.

During the Harvest cycle, the harvest valve is energized (open), allowing refrigerant gas from the top of the receiver to flow into the evaporator. The refrigerant changes state (from a vapor to a liquid) and gives up latent heat. This heat is absorbed by the evaporator and allows release of the ice slab. In general, Harvest cycle suction pressure rises, then stabilizes in the range of 65-125 psig (448-861 kPa).

Exact pressures vary according to ambient temperature and ice machine model. Harvest pressures can be found in the "Cycle Time/24-Hour Ice Production/ Refrigerant Pressure Charts" in this book.

HARVEST VALVE ANALYSIS

The valve can fail in two positions:

- Valve will not open in the Harvest cycle.
- · Valve remains open during the Freeze cycle.

Valve will not open in the Harvest cycle

Although the circuit board has initiated a Harvest cycle, suction and discharge pressures remain unchanged from the Freeze cycle. The ice machine will remain in the Harvest cycle for 3.5 minutes (7 minutes Quad Evaporators), then initiate a new Freeze cycle. After three consecutive Harvest cycles of 3.5 minutes (7 minutes Quad Evaporators) the ice machine will stop on a safety limit #2.

Valve remains open in the Freeze cycle

Symptoms of a harvest valve remaining partially open during the Freeze cycle can be similar to symptoms of an expansion valve, float valve or compressor problem. Symptoms are dependent on the amount of leakage in the Freeze cycle.

A small amount of leakage will cause increased freeze times and an ice fill pattern that is normal.

As the amount of leakage increases, the length of the Freeze cycle increases and the amount of ice on the bottom of the evaporator decreases.

A small amount of leakage will cause an audible indication as the vapor passes through the valve. As the size of the leak increases, the audible indication becomes more apparent.

Refer to the Parts Manual on our website (http://www.manitowocice.com/service/partsmanuals.asp) for proper valve application. If replacement is necessary, use only "original" Manitowoc replacement parts.

Analyzing Freeze Cycle Suction Line Temperature

Suction line temperature cannot diagnose an ice machine. However, comparing this temperature during the freeze cycle, along with using Manitowoc's Symptom #2 - Refrigeration System Operational Analysis Table, can help diagnose an ice machine malfunction.

The actual temperature of the suction line varies by model, and will change throughout the freeze cycle. This makes documenting the "normal" suction line temperature difficult. The key to the diagnosis is observing the compressor suction line temperature during the last three minutes of the freeze cycle.

- Use a quality temperature meter, capable of taking temperature readings on curved copper lines.
- Attach the temperature meter thermocouple to the copper suction line within 6" of the shut-off valves.

Important

Do not simply insert the sensing device under the insulation. It must be attached to and reading the actual temperature of the copper line.

- Monitor the suction line temperature during the last three minutes of the freeze cycle and record the low event.
- Use this with other information gathered on the Refrigeration Component Analysis Chart to determine the ice machine malfunction.
- Verify refrigerant amount is correct by weight when recovering refrigerant and replacing a TXV. Grossly overcharged QuietQube® ice machine in ambient temperatures below 70°F will have a suction line temperature below 10°F.

Final Analysis

The column with the highest number of check marks identifies the refrigeration problem.

COLUMN 1 - HARVEST VALVE LEAKING

A leaking harvest valve must be replaced.

COLUMN 2 - LOW CHARGE OR TXV STARVING

Normally, a starving expansion valve only affects the freeze cycle pressures, not the harvest cycle pressures. A low refrigerant charge normally affects both pressures. Verify the ice machine is not low on charge before replacing an expansion valve.

- Do not add charge to remotes. The symptoms of a remote low on charge will result in a safety limit #1 or #2 in cool ambient temperatures. Low on charge symptoms would be a hot liquid line with normal or below normal head pressure.
- Find the refrigerant leak. The ice machine must operate with the nameplate charge. If the leak cannot be found, proper refrigerant procedures must still be followed Change the liquid line drier. Then, evacuate and weigh in the proper charge.

COLUMN 3 - REFRIGERANT OVERCHARGE OR TXV FLOODING

A loose or improperly mounted expansion valve bulb causes the expansion valve to flood. Check bulb mounting, insulation, etc., before changing the valve. Verify refrigerant amount is correct by weighing recovered refrigerant before replacing a TXV. On Quad evaporator machines, the service technician is able to tell which TXV is flooding by comparing the evaporator outlets. Change only the flooding expansion valve.

COLUMN 4 - COMPRESSOR

Replace the compressor and start components. To receive warranty credit, the compressor ports must be soldered closed to prevent oil leakage in transit.

NOTE: This table must be used with charts, checklists and other references to eliminate refrigeration components not listed on the table and external items and problems, which can cause good refrigeration components to appear defective.

Symptom #3 Ice Will Not Harvest


ICE MACHINE WILL NOT HARVEST DIAGNOSTICS

 
Ice release issues fall into two main categories mechanical or refrigeration. The first step in solving an ice release issue is to determine which condition exists. At the end of the harvest cycle place the toggle switch in the OFF position, then remove and inspect the sheet of ice.

- If the cubes are well defined and show no signs of melting a refrigeration problem is indicated.
- If the cubes are deformed and melted away (sharks teeth) a mechanical problem is indicated.
 Something on the evaporator is causing the harvest problem.
- Always clean the evaporator before diagnosing the refrigeration system.
- The water curtain must swing freely open and closed and the bin switch must function properly.

Continued on next page ...

HARVEST PROBLEMS

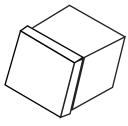



Normal Ice Cube

Melted Out Ice Cube


Definition of a harvest problem; At the end of a 3.5 minute harvest cycle the slab of ice is still contacting the evaporator. The slab of ice may or may not be removable by hand.


Harvest problems can be split into two categorizes.


- Melted sheet of cubes at the end of the harvest cycle. Ice can be removed rather easily by hand. The back of the cubes are misshapen and melted. This indicates something is on the evaporator preventing the ice slab from releasing. A manual cleaning procedure must always be performed when this problem is encountered.
- Normal sheet of cubes at the end of the harvest cycle. Ice is difficult to remove from the evaporator by hand. Once removed the back of the cubes are square and show no signs of melting. This indicates a refrigeration problem. The source of the problem could be in the freeze or harvest cycle. Use the appropriate flow chart (in Troubleshooting) to determine the cause of the problem.


Symptom #3 Ice Will Not Harvest, Cubes Are Not Melted Flowchart

Ice Machine Will Not Harvest Freeze Cycle is Normal and Ice Cubes Are Not Melted After Harvest

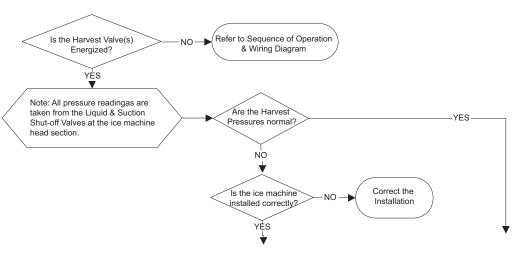

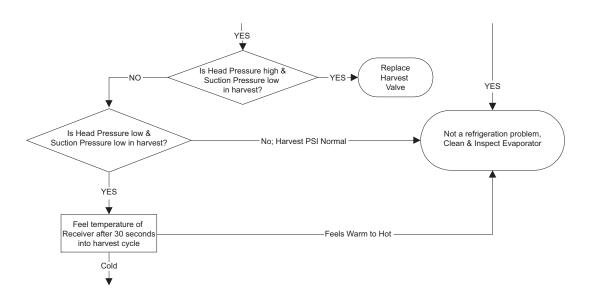


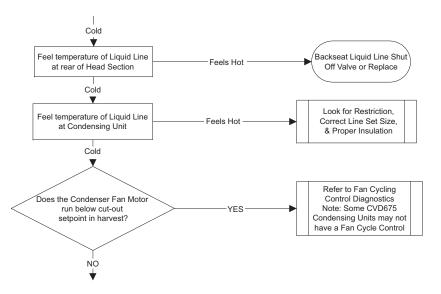


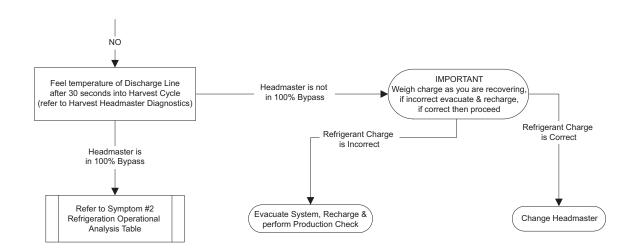

Symptom #4 Ice Will not Harvest - Cubes Are Melted Flowchart

Ice Machine Will Not Harvest - Freeze Cycle Is Normal and Ice Cubes Are Melted After Harvest

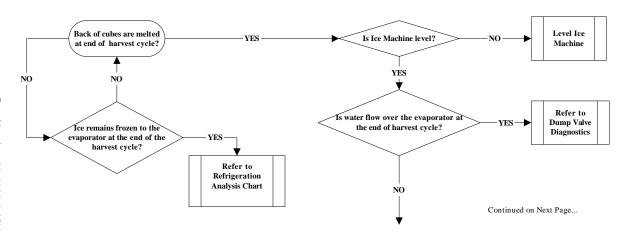

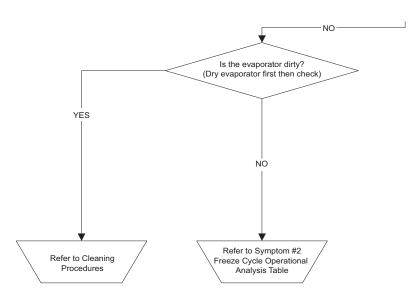

This Page Intentionally Left Blank

Component Check Procedures

Electrical Components

MAIN FUSE

FUNCTION

The control board fuse stops ice machine operation if electrical components fail, causing high amp draw.

SPECIFICATIONS

The main fuse is 250 Volt, 7 amp.



High (line) voltage is applied to the control board (terminals #55 and #56) at all times. Removing the control board fuse or moving the toggle switch to OFF will not remove the power supplied to the control board.

CHECK PROCEDURE

1. If the bin switch light is on with the water curtain closed, the fuse is good.

A Warning

Disconnect electrical power to the entire ice machine before proceeding.

2. Remove the fuse. Check the resistance across the fuse with an ohmmeter.

| Reading | Result |
|------------|--------------|
| Open (OL) | Replace fuse |
| Closed (O) | Fuse is good |

BIN SWITCH

FUNCTION

Movement of the water curtain/ice dampers control bin switch operation. The bin switch has two main functions:

- Terminating the Harvest cycle and returning the ice machine to the Freeze cycle. This occurs when the bin switch is opened and closed again within 30 seconds during the Harvest cycle.
- 2. Automatic ice machine shut-off.

 If the storage bin is full at the end of a Harvest cycle, the sheet of cubes fails to clear the water curtain/ice dampers and holds it open. After the water curtain/ice dampers are held open for 30 seconds, the ice machine shuts off. The ice machine remains off until enough ice is removed from the storage bin to allow the sheet of cubes to drop clear of the water curtain/ice dampers. As the water curtain/ice dampers swing back to the operating position, the bin switch closes and the ice machine restarts, provide the 3-minute delay has expired.

Important

The water curtain/ice dampers must be ON (bin switch closed) to start ice making.

SPECIFICATIONS

The bin switch is a magnetically operated reed switch. The magnet is attached to the lower right corner of the water curtain/ice dampers. The switch is attached to the right bulkhead wall.

The bin switch is connected to a varying D.C. voltage circuit. (Voltage does not remain constant.)

NOTE: Because of a wide variation in D.C. voltage, it is not recommended that a voltmeter be used to check bin switch operation.

SYMPTOMS

Bin Switch Fails Open

 The ice machine will not start with the toggle switch in the ice position, but runs normally with the toggle switch in the clean position.

Bin Switch Fails Closed

 Safety limit 2 is recorded in the control board memory and the harvest cycle continues after the ice opens and closes the water curtain/ice dampers (harvest cycle is 3.5 minutes for single & twin evaporators and 7 minutes for quad evaporator models).

DIAGNOSTIC AIDS:

- Always use the water curtain/ice dampers magnet to cycle the switch (a larger or smaller magnet will affect switch operation).
- Readings are affected by your test lead connection and VOM battery strength. Verify you have solid connections and a correctly functioning VOM before testing bin switch.
- Open the curtain/ice dampers for 3 seconds, then close the curtain/ice dampers for 3 seconds. This will allow your VOM display to settle.
- With the bin switch closed your meter reading should be 0 (0 to 10 is acceptable). With the curtain/ice dampers open the reading must be infinity (OL).

CONTINUITY TEST

- Disconnect the bin switch wires to isolate the bin switch from the control board.
- Connect an ohmmeter to the disconnected bin switch wires.
- Cycle the bin switch open and closed 25 times by opening and closing the water curtain/ice dampers. Watch for consistent readings each time the bin switch is cycled open and closed (bin switch failure could be erratic).

Water Curtain/Ice Damper Removal Notes

The water curtain must be on (bin switch closed) to start ice making. While a Freeze cycle is in progress, the water curtain can be removed and installed at any time without interfering with the electrical control sequence.

If the ice machine goes into Harvest sequence while the water curtain is removed, one of the following will happen:

- Water curtain remains off:
 When the Harvest cycle time reaches 3.5 minutes
 and the bin switch is not closed, the ice machine
 stops as though the bin were full.
- Water curtain is put back on:
 If the bin switch closes prior to reaching the 3.5-minute point, the ice machine immediately returns to another Freeze sequence pre chill.

HARVEST ASSIST AIR PUMP

FUNCTION

The air pump breaks the vacuum between the sheet of ice and the evaporator which results in shorter harvest cycles.

<u>SPECIFICATIONS</u>

115 Volt or 230 Volt - matches the ice machine voltage.

CHECK PROCEDURE

- 1. Verify when the air pump should be running in the sequence of operation.
- If the compressor is not running when it should be check voltage at the control board.
- If there is no voltage present at the control board, replace the control board.
- If there is voltage present at the control board check for voltage at the air pump connector.
- 5. If there is no voltage present at the air pump connector replace wire.
- If there is voltage at the air pump connector, use a volt ohm meter to verify there is no continuity through the motor windings then replace motor.

ICE/OFF/CLEAN TOGGLE SWITCH

FUNCTION

The switch is used to place the ice machine in ICE, OFF or CLEAN mode of operation.

SPECIFICATIONS

Single-pole, double-throw switch. The switch is connected into a varying low D.C. voltage circuit.

CHECK PROCEDURE

NOTE: Because of a wide variation in D.C. voltage, it is not recommended that a voltmeter be used to check toggle switch operation.

- 1. Inspect the toggle switch for correct wiring.
- Isolate the toggle switch by disconnecting the Molex connector.
- Check across the toggle switch terminals. Note where the wire numbers are connected to the switch terminals, or refer to the wiring diagram to take proper readings.

| Switch Setting | Terminals | Ohm Reading |
|-------------------|-----------|-------------|
| | 1-6 | Open |
| ICE | 1-2 | Closed |
| | 2-6 | Open |
| | 1-6 | Closed |
| CLEAN | 1-2 | Open |
| | 2-6 | Open |
| | 1-6 | Open |
| OFF | 1-2 | Open |
| | 2-6 | Open |

Replace the toggle switch if ohm readings do not match all three switch settings.

IB Model Ice Machines Before Serial Number 050400000

FUNCTION

The switch is used to place the ice machine in ICE, OFF or CLEAN mode of operation.

SPECIFICATIONS

Double-pole, double-throw switch. The switch is connected into a varying low D.C. voltage circuit.

CHECK PROCEDURE

NOTE: Because of a wide variation in D.C. voltage, it is not recommended that a voltmeter be used to check toggle switch operation.

- 1. Inspect the toggle switch for correct wiring.
- Isolate the toggle switch by disconnecting all wires from the switch, or by disconnecting the Molex connector and removing wire #69 from the toggle switch.
- Check across the toggle switch terminals using a calibrated ohmmeter. Note where the wire numbers are connected to the switch terminals, or refer to the wiring diagram to take proper readings.

| Switch Setting | Terminals | Ohm Reading |
|-------------------|-----------|-------------|
| | 66-62 | Open |
| ICE | 67-68 | Closed |
| | 67-69 | Open |
| | 66-62 | Closed |
| CLEAN | 67-68 | Open |
| | 67-69 | Closed |
| | 66-62 | Open |
| OFF | 67-68 | Open |
| | 67-69 | Open |

Replace the toggle switch if ohm readings do not match all three switch settings.

ICE THICKNESS PROBE (HARVEST INITIATION) HOW THE PROBE WORKS

Manitowoc's electronic sensing circuit does not rely on refrigerant pressure, evaporator temperature, water levels or timers to produce consistent ice formation.

As ice forms on the evaporator, water (not ice) contacts the ice thickness probe. After the water completes this circuit across the probe continuously for 10 seconds, a Harvest cycle is initiated.

ICE PROBE LIGHT

This light's primary function is to be on as water contacts the ice thickness probe during the freeze cycle, and remain on throughout the entire harvest cycle. The light will flicker as water splashes on the probe.

FREEZE TIME LOCK-IN FEATURE

The ice machine control system incorporates a freeze time lock-in feature. This prevents the ice machine from short cycling in and out of harvest.

The control board locks the ice machine in the freeze cycle for six minutes. If water contacts the ice thickness probe during these six minutes, the harvest light will come on (to indicate that water is in contact with the probe), but the ice machine will stay in the freeze cycle. After the six minutes are up, a harvest cycle is initiated. This is important to remember when performing diagnostic procedures on the ice thickness control circuitry.

To allow the service technician to initiate a harvest cycle without delay, this feature is not used on the first cycle after moving the toggle switch OFF and back to ICE.

MAXIMUM FREEZE TIME

The control system includes a built-in safety which will automatically cycle the ice machine into harvest after 60 minutes in the freeze cycle.

ICE THICKNESS CHECK


The ice thickness probe is factory-set to maintain the ice bridge thickness at 1/8 in. (.32 cm).

NOTE: Make sure the water curtain is in place when performing this check. It prevents water from splashing out of the water trough.

- 1. Inspect the bridge connecting the cubes. It should be about 1/8 in. (.32 cm) thick.
- 2. If adjustment is necessary, turn the ice thickness probe adjustment screw clockwise to increase bridge thickness or counterclockwise to decrease bridge thickness. Set a 1/4" gap between the ice thickness probe and evaporator as a starting point. Then adjust to achieve 1/8" ice thickness.

NOTE: The starting point before final adjustment is approximately a 1/4 in. gap.

Make sure the ice thickness probe wire and the bracket do not restrict movement of the probe

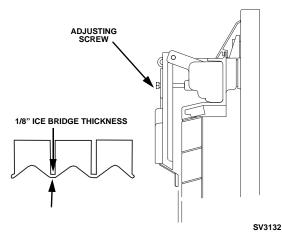

ICE THICKNESS ADJUSTMENT

Cleaning the Ice Thickness Probe

Clean the ice thickness probe using the following procedure.

- Mix a solution of Manitowoc ice machine cleaner and water (2 ounces of cleaner to 16 ounces of water) in a container.
- Soak ice thickness probe in container of cleaner/ water solution while disassembling and cleaning water circuit components (soak ice thickness probe for 10 minutes or longer).
- 3. Clean all ice thickness probe surfaces including all plastic parts (do not use abrasives). Verify the ice thickness probe cavity is clean. Thoroughly rinse ice thickness probe (including cavity) with clean water, then dry completely. Incomplete rinsing and drying of the ice thickness probe can cause premature harvest.
- 4. Reinstall ice thickness probe, then sanitize all ice machine and bin/dispenser interior surfaces.

Diagnosing Ice Thickness Control Circuitry PROBLEM: ICE MACHINE DOES NOT CYCLE INTO HARVEST WHEN WATER CONTACTS THE ICE THICKNESS CONTROL PROBE

Step 1 Bypass the freeze time lock-in feature by moving the ICE/OFF/CLEAN switch to OFF and back to ICE.

Step 2 Wait until water starts to flow over the evaporator (freeze cycle).

Step 3 Disconnect the ice thickness control from the control board, then connect a jumper wire from the control board to any cabinet ground and monitor the ice probe light.

Ice Probe Light On

 The ice probe light comes on, and 10 seconds later, the ice machine cycles from Freeze to Harvest.

The ice thickness probe is causing the malfunction.

 The ice probe light comes on, but the ice machine stays in the Freeze sequence.

The control board is causing the malfunction.

Ice Probe Light Off

• The ice probe light does not come on.

The control board is causing the malfunction.

If you suspect a defective probe check for continuity from the ice thickness probe to the connector.

- With continuity DO NOT change the probe.
- · Without continuity, the probe is defective.

PROBLEM: ICE MACHINE CYCLES INTO HARVEST BEFORE WATER CONTACT WITH THE ICE THICKNESS PROBE

Step 1 Bypass the freeze time lock-in feature by moving the ICE/OFF/CLEAN switch to OFF and back to ICE.

Step 2 Disconnect the ice thickness probe from the control board

Step 3 Wait until water starts to flow over the evaporator, then monitor the ice probe light:

Ice Probe Light Off

 The ice probe light stays off, and the ice machine remains in the Freeze sequence.

The ice thickness probe is causing the malfunction. Verify that the ice thickness probe is adjusted correctly and clean.

Ice Probe Light On

 The ice probe light comes on, and 10 seconds later, the ice machine cycles from Freeze to Harvest.

The control board is causing the malfunction.

WATER LEVEL CONTROL CIRCUITRY

The water level probe circuit can be monitored by watching the water level light. The water level light is on when water contacts the probe, and off when no water is in contact with the probe. The water level light functions any time power is applied to the ice machine, regardless of toggle switch position.

FREEZE CYCLE WATER LEVEL SETTING

During the Freeze cycle, the water level probe is set to maintain the proper water level above the water pump housing. The water level is not adjustable. If the water level is incorrect, check the water level probe position. Reposition or replace the probe as necessary.

WATER INLET VALVE SAFETY SHUT-OFF

In the event of a water level probe failure, this feature limits the water inlet valve to a 6-minute on time. Regardless of the water level probe input, the control board automatically shuts off the water inlet valve if it remains on for 12 continuous minutes. This is important to remember when performing diagnostic procedures on the water level control circuitry.

FREEZE CYCLE CIRCUITRY

Manitowoc's electronic sensing circuit does not rely on float switches or timers to maintain consistent water level control. During the Freeze cycle, the water inlet valve energizes and de-energizes in conjunction with the water level probe located in the water trough.

During the first 45 seconds of the Freeze cycle: The water inlet valve is ON when there is no water in contact with the water level probe.

- The water inlet valve turns OFF after water contacts the water level probe for 3 continuous seconds.
- The water inlet valve will cycle ON and OFF as many times as needed to fill the water trough.


After 45 seconds into the Freeze cycle:

The water inlet valve will cycle ON, and then OFF one more time to refill the water trough. The water inlet valve is now OFF for the duration of the Freeze sequence.

HARVEST CYCLE CIRCUITRY

The water level probe does not control the water inlet valve during the harvest cycle. During the harvest cycle water purge, the water inlet valve energizes and de-energizes strictly by time. The harvest water purge jumper may be set at 45 seconds (top and center terminals) or 0 seconds (center and bottom terminals). Set the harvest water purge to 0 seconds when reverse osmosis or deionized water is used. Use the factory setting of 45 seconds for all other types of water.

HARVEST WATER PURGE ADJUSTMENT

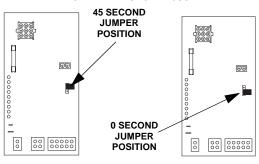

Diagnosing Water Level Control Circuitry PROBLEM: WATER TROUGH OVERFILLING DURING THE FREEZE CYCLE

Step 1 Start a new Freeze sequence by moving the ICE/OFF/CLEAN toggle switch to OFF and then back to ICE.(if water flows with the switch off, check the water inlet valve).

Important

This restart must be done prior to performing diagnostic procedures. This assures the ice machine is not in a Freeze cycle water inlet valve safety shutoff mode. You must complete the entire diagnostic procedure within 6 minutes of starting.

Step 2 Wait until the Freeze cycle starts (the Freeze cycle starts when the water pump energizes).

Step 3 Disconnect the water level probe from the control board, then connect a jumper from the control board terminal and any cabinet ground, then refer to chart on next page.

Important

For the test to work properly you must wait until the Freeze cycle starts, prior to disconnecting the water level probe. If you restart the test, you must reconnect the water level probe, restart the ice machine (step 1), and then disconnect the water level probe after the compressor starts.

WATER TROUGH OVERFILLING CONTINUED

| Step 3. Jumper Wire Connected from Control Board Terminal to Ground | | | |
|--|------------------------------------|--|---|
| Is Water Flowing into the Water Trough? | The Water Level Light Is: | The Water Inlet Valve Solenoid Coil Is: | Cause |
| No | On | De-energized | The water level probe is causing the problem. Ohm, then clean or replace the water level probe. |
| Yes | Off | Energized | The control board is causing the problem. |
| Yes | On | De-energized | The water fill valve is causing the problem. |

Problem: Water Will Not Run into the Sump Trough During the Freeze Cycle

Step 1 Verify water is supplied to the ice machine. Start a new Freeze sequence by moving the ICE/OFF/CLEAN toggle switch to OFF, then back to ICE.

Step 2 Wait until the freeze cycle starts (approximately 45 seconds, the freeze cycle starts when the compressor energizes).

Important

This restart must be done prior to performing diagnostic procedures. This assures the ice machine is not in a freeze cycle water inlet valve safety shutoff mode. You must complete the entire diagnostics within 6 minutes of starting.

Step 3 Disconnect the water level probe from the water level probe terminal on the control board.

Important

For the test to work properly you must wait until the Freeze cycle starts, prior to disconnecting the water level probe. If you restart the test, you must reconnect the water level probe, restart the ice machine (step 1), and then disconnect the water level probe after the compressor starts.

| Step 3. Disconnect Probe from Control Board | | | ntrol Board |
|---|------------------------------------|--|---|
| Is Water Flowing into the Water Trough? | The Water Level Light Is: | The Water Inlet Valve Solenoid Coil Is: | Cause |
| Yes | Off | Energized | The water level probe is causing the problem. Clean or replace the water level probe. |
| No | Off | Energized | The water inlet valve is causing the problem. |
| No | On or Off | De-energized | The control board is causing the problem. |

ELECTRONIC BIN THERMOSTAT CONTROL

The temperature control opens the bin switch circuit when ice contacts the sensor. When ice no longer contacts the sensor, the circuit closes and the ice machine starts.

SPECIFICATIONS

Setpoint Range: -30 to 212°F (-34 - 100°C)

CONTROL SETTINGS


Verify control is set properly before proceeding.


| Display | Function | Preset Settings |
|---------|---------------------------|-----------------|
| SP | Set Point | 40 |
| DIF | Differential | 1 |
| ASD | Anti-Short Cycle Delay | 1 |
| OFS | Temperature Offset | 0 |
| SF | Sensor Failure Mode | 1 |

POSITIONING THE TOUCH PAD JUMPERS

P5 Jumper

The P5 jumper position determines if the touch pad is locked or unlocked. The control is factory locked; to unlock move the jumper from one pin to two pins.

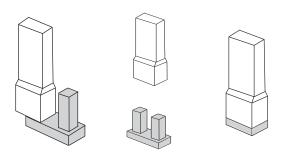


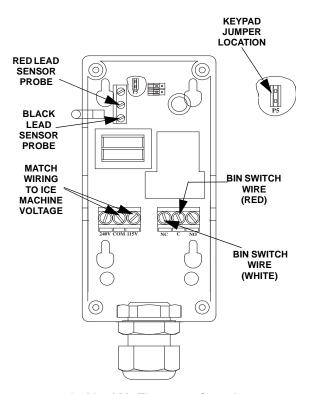

Inside of Bin Thermostat Control

P4 Jumper

 The P4 jumper labeled Jump 1 is used to set the control for heating or cooling mode. Jump 2 is used to establish Setpoint at either cut-in or cutout.



SETTING CONTROL SETPOINT VALUE

To view and adjust setpoint, follow these steps:

- 1. Press MENU until the display flashes SP.
- 2. Press MENU again to display the existing setpoint value.
- 3. Press Up or Down (arrows) to change the setpoint value.
- 4. Press MENU again to save the new value. The display returns to the sensed temperature.

NOTE: If no setup entry is made for 30 seconds, the control reverts to the normal temperature display.

Important

If MENU is not pressed after changing the setpoint value, the control reverts to the previously programmed setpoint value.

DIFFERENTIAL, ANTI-SHORT CYCLE DELAY, TEMPERATURE OFFSET, OR SENSOR FAILURE OPERATION

To set or verify the Differential, Anti-Short Cycle Delay, Temperature Offset or Sensor Failure Operation use the following method.

Factory Preset Temperature Control Code Settings as follows:

- 1. Press and hold MENU until the display changes to flashing SP.
- Press up and down (arrows) repeatedly until the desired function is displayed.
- Press MENU to display the function's current value.
- 4. Press up and down (arrows) until the desired value is displayed.
- 5. Press MENU to save the new value. The display returns to the sensor temperature.

NOTE: If no setup entry is made for 30 seconds, the control reverts to the temperature display.

NOTE: Any saved control settings are non-volatile and remain in the control's memory during power interruptions.

CHECK PROCEDURE

A Warning

Line voltage is present inside control. Contact with line voltage can cause serious injury or death.

If the control system does not function properly, verify that the control is wired and set up properly. If the problem persists use the following procedures to determine the cause of the problem.

- 1. Check the proper voltage to the control.
 - Remove the cover, loosen the four cover screws.
 - Use an AC voltmeter to check the voltage between the common and 120V or 240V terminals.
 - C. The voltage must be between102 and 132 volts for 120V applications, 177 and 264 volts for 208/230V applications.
 - If the voltage reading is not within the required range, check the power source and input power wires for problems.

2. Fault Codes

If the LCD displays an alarm or fault code (SF or EE):

| Fault Code | Definition | Solution |
|---------------------------------------|--|---|
| SF flashing alternately with OP | Open temperature sensor or sensor wiring | See Step 3. Cycle power to reset control. |
| SF flashing alternately with SH | Shorted temperature sensor or sensor wiring | See Step 3. Cycle power to reset control. |
| EE | Program failure | Reset the control by pressing MENU. If problem persists, replace the control. |

3. Check for proper operation.

NOTE: Perform Steps 1 and 2 before performing this step.

- A. Disconnect the load from the output relay terminals.
- B. Reconnect the sensor leads and supply power to the control.
- C. Replace the cover.
- D. Check the control settings for proper values.
- E. Press and hold MENU until SP appears.
- F. Press up and down (arrows) to change the setpoint temperature above and below the sensor temperature until the relay energizes and de-energizes.
- G. If the output relay does not perform as indicated replace the control.
- H. If proper operation of the control is verified, reconnect the load.

This Page Intentionally Left Blank

COMPRESSOR ELECTRICAL DIAGNOSTICS

The compressor does not start or will trip repeatedly on overload.

Check Resistance (Ohm) Values

NOTE: Compressor windings can have very low ohm values. Use a properly calibrated meter.

Perform the resistance test after the compressor cools. The compressor dome should be cool enough to touch (below 120°F/49°C) to assure that the overload is closed and the resistance readings will be accurate.

SINGLE PHASE COMPRESSORS

- Disconnect power then remove the wires from the compressor terminals.
- The resistance values between C and S and between C and R, when added together, should equal the resistance value between S and R.
- If the overload is open, there will be a resistance reading between S and R, and open readings between C and S and between C and R. Allow the compressor to cool, then check the readings again.

THREE PHASE COMPRESSORS

- Disconnect power and remove the wires from the compressor terminals.
- The resistance values between L1 and L2, between L2 and L3, and between L3 and L1 should all be equal.
- If the overload is open, there will be open readings between L1 and L2, between L2 and L3, and between L3 and L1. Allow the compressor to cool, then check the readings again.

CHECK MOTOR WINDINGS TO GROUND

Check continuity between all three terminals and the compressor shell or copper refrigeration line. Scrape metal surface to get good contact. If continuity is present, the compressor windings are grounded and the compressor should be replaced.

COMPRESSOR DRAWING LOCKED ROTOR

To determine if the compressor is seized, check the amp draw while the compressor is trying to start.

The two likely causes of this are a defective starting component and a mechanically seized compressor.

To determine which you have:

- 1. Install high and low side gauges.
- 2. Try to start the compressor.
- 3. Watch the pressures closely.
 - A. If the pressures do not move, the compressor is seized. Replace the compressor.
 - B. If the pressures move, the compressor is turning slowly and is not seized. Check the capacitors and relay.

COMPRESSOR DRAWING HIGH AMPS

The continuous amperage draw on start-up should not be near the maximum fuse size indicated on the serial tag.

DIAGNOSING START COMPONENTS

If the compressor attempts to start, or hums and trips the overload protector, check the start components before replacing the compressor.

Capacitor

Visual evidence of capacitor failure can include a bulged terminal end or a ruptured membrane. Do not assume a capacitor is good if no visual evidence is present. A good test is to install a known good substitute capacitor. Use a capacitor tester when checking a suspect capacitor. Clip the bleed resistor off the capacitor terminals before testing.

Relay

The relay has a set of contacts that connect and disconnect the start capacitor from the compressor start winding. The contacts on the relay are normally closed (start capacitor in series with the start winding). The relay senses the voltage generated by the start winding and opens the contacts as the compressor motor starts. The contacts remain open until the compressor is de-energized.

Relay Operation Check

- 1. Disconnect wires from relay terminals.
- Verify the contacts are closed.
 Measure the resistance between terminals 1 and

 No continuity indicates open contacts. Replace the relay.
- Check the relay coil.
 Measure the resistance between terminals 2 and
 No resistance indicates an open coil. Replace the relay.

PTCR

The PTCR allows current to flow through the start winding at compressor startup. Current flow heats the ceramic discs in the PTCR. The electrical resistance increases with temperature and stops all except a trickle of current flow through the start winding. The small flow of current keeps the PTCR hot (260°F/127°C) and the start winding out of the circuit.

The PTCR must be cooled before attempting to start the compressor, otherwise the PTCR will heat up too quickly and stop current flow through the start winding before the compressor motor reaches full speed..

A Warning

Disconnect electrical power to the entire ice machine at the building electrical disconnect box before proceeding.


NOTE: If a PTCR is dropped internal damage can occur to the ceramic PTCR discs. The ceramic disc can chip and cause arcing which leads to PTCR failure. Since there is no way to open the PTCR in order to determine if the ceramic disc is chipped or not, it must be discarded when dropped.

PTCR Operation Check

 Visually inspect the PTCR. Check for signs of physical damage.

NOTE: The PTCR case temperature may reach 210°F (100°C) while the compressor is running. This is normal. Do not change a PTCR just because it is hot.

- 2. Wait at least 10 minutes for the PTCR to cool to room temperature.
- 3. Remove the PTCR from the ice machine.
- Measure the resistance of the PTCR as shown. At room temperature the resistance reading must be between 8 & 22 ohms.

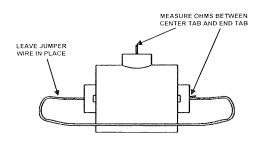

Refrigeration Components

REFRIGERANT CHARGE VERIFICATION

QuietQube remote ice machines require the correct amount of refrigerant (name plate charge) to operate correctly at all ambient conditions.

An ice machine with an overcharge or undercharge of refrigerant may function properly at higher ambient temperatures and fails at lower ambient temperatures. Symptoms of incorrect refrigerant amount are:

- Works during the day and malfunctions at night, and/or fails whenever the outdoor temperature drops.
- A Safety limit is stored in control board memory.

Refrigerant loss and ambient temperature are directly related to each other. As the ambient temperature drops, more refrigerant is stored in the condenser.

When the refrigerant charge and ambient temperature create an undercharge of refrigerant in the freeze cycle, the receiver dip tube will lose it's liquid seal. Without liquid refrigerant to the TXV, the ice machine fails to make a full sheet of ice in 60 minutes and a safety limit #1 results.

When the refrigerant charge and ambient temperature create a marginal undercharge of refrigerant, the ice machine will be able to make a full sheet of ice, but fails in the harvest cycle and a safety limit #2 results.

NOTE: Depending on the amount of refrigerant loss and ambient temperature, the ice machine may harvest for one or two cycles when restarted after an "Automatic Shut-off" (ice machine pumped down and shut off on low pressure control).

When refrigerant charge is suspected, verify by recovering the refrigerant, weighing and comparing to the nameplate amount. Refer to Refrigerant Recovery/Evacuation" page 218 for recovery procedures.

Undercharge Symptoms

 
- Safety limit #1 or Safety limit #2 in control board memory.
- Harvest cycle suction pressure is low.
- Harvest cycle discharge pressure is low.
- Liquid line entering receiver feels warm to hot in the freeze cycle.

Overcharge Symptoms

- · Safety limit #2 in control board memory.
- Harvest cycle suction pressure is low.
- · Harvest cycle discharge pressure is normal.
- Freeze cycle time, suction and discharge pressure are normal and the ice machine will not harvest. The sheet of ice cubes show little or no sign of melting when removed from the evaporator after the harvest cycle has been completed. (If the cubes are melted you have a release problem, clean the ice machine).

SUCTION ACCUMULATOR OPERATION

Liquid refrigerant collects in the suction accumulator during the harvest cycle and is removed during the freeze cycle. The liquid refrigerant is returned to the compressor through a screen and orifice in the suction accumulator J tube. Passing the liquid through the orifice causes a pressure drop; the liquid flashes to a vapor and creates a refrigeration affect. It is normal to see frost on the accumulator, suction line and compressor suction port in the freeze cycle. The suction accumulator empties within the first 5 minutes of the freeze cycle. When the refrigeration affect ends (liquid refrigerant has been removed), the suction line between the accumulator and compressor will increase in temperature. The suction line temperature increases 20 plus degrees within 2 minutes after the liquid has been removed.



The time needed to remove the liquid refrigerant will vary with the ambient temperature and the length of the harvest cycle. Higher ambient temperatures = shorter harvest cycles, faster removal of liquid refrigerant from the accumulator and greater suction line temperature increases.

HEADMASTER CONTROL VALVE

Function

The headmaster control valve maintains the correct discharge pressure and liquid line temperature in the Freeze and Harvest cycles.

Manitowoc QuietQube® systems require headmaster control valves with special settings. Replace defective headmaster control valves only with "original" Manitowoc replacement parts.

Freeze Cycle Operation

During low ambient conditions, it is normal for the head pressure control valve to hunt (head pressure may fluctuate up and down) on CVD condensing units. Hunting varies by model and ambient, but generally settles out within the first 6 minutes of the freeze cycle.

At ambient temperatures of approximately 70°F (21°C) or above, refrigerant flows through the valve from the condenser to the receiver inlet. At temperatures below this (or at higher temperatures if it is raining), the head pressure control starts to modulate (closes the condenser port and opens the bypass port from the compressor discharge line).

In this modulating mode, the valve maintains minimum head pressure by building up liquid in the condenser and bypassing discharge gas directly to the receiver.

Important

Head pressure settings will vary depending on the QuietQube® model being worked on.

Harvest Cycle Operation

During the Harvest cycle, the harvest valve opens and allows refrigerant from the top of the receiver tank to enter the evaporator. The refrigerants change of state (from vapor to liquid) releases the heat necessary for the Harvest cycle.

Opening the harvest valve causes a drop in discharge pressure.

The discharge pressure will drop below the condenser fan cycling control setpoint and the condenser fan motor cycles off (at ambient temperatures above 110°F (43°C) the condenser fan motor remains energized).

The warm discharge gas adds heat to the receiver in the harvest cycle. Without this additional heat the head pressure would continue to drop as liquid refrigerant boils off in the receiver.

Example: A service technician removes refrigerant vapor from a cylinder by boiling off the liquid refrigerant. A refrigeration effect is created as the refrigerant changes state from a liquid to a vapor. The cylinder cools and the refrigerant pressure drops. To maximize flow and maintain pressure the technician places the cylinder in warm water.

A head pressure control valve that will not completely bypass in the harvest cycle will result in longer harvest cycles with lower that normal suction pressure and safety limit #2 trips.

(Refer to the "Cycle Times/24 Hr Ice Production/ Refrigerant Pressure Charts" for the model being worked on, to obtain the correct harvest cycle pressure range).

Diagnosing Air-Cooled Condensing Units FREEZE CYCLE

- Determine the air temperature entering the remote condenser.
- Determine if the head pressure is high or low in relationship to the outside temperature. (Refer to the proper "Operational Pressure Charts page 239.") If the air temperature is below 70°F (21.1°C), the head pressure control will modulate to maintain the correct liquid line temperature and head pressure.
- 3. Determine the temperature of the liquid line entering the receiver by feeling it. This line is normally warm "body temperature."
- Using the information gathered, refer to the list for diagnosis.

NOTE: A headmaster that will not bypass will function properly with condenser air temperatures of approximately 70°F (21.1°C) or above. When the temperature drops below 70°F (21.1°C), the headmaster fails to bypass and the ice machine malfunctions. Rinsing the condenser with cool water during the Freeze cycle will simulate lower ambient conditions.

| Condition | Probable Cause | Corrective Measure |
|---|---------------------------------|----------------------------------|
| Discharge Pressure - High Liquid Line Temperature - Hot | Valve stuck in bypass | Replace valve |
| Discharge Pressure - Low Liquid Line Temperature - Cold | Valve not bypassing | Replace valve |
| Discharge Pressure - Low Liquid Line Temperature - Hot | Ice Machine Low on Charge | Low on Charge Verification |

HARVEST CYCLE

The headmaster control valve diverts the compressor discharge gas to the ice machine receiver in the harvest cycle. All refrigerant flow through the condenser in the harvest cycle stops. Symptoms of a headmaster valve that will not seat 100% closed (completely bypass the condenser) in the harvest cycle are:

- Freeze cycle suction and discharge pressure are normal.
- The control board indicates safety limit #2. The failure seems to be temperature related. Example: The ice machine may function correctly at temperatures above 32°F but fails at temperatures below 32°F.
- Harvest cycle suction pressure is low.
- Harvest cycle discharge pressure is normal or slightly low.

Procedure

- Freeze cycle operation must be normal before diagnosing the headmaster in the harvest cycle. (Refer to Cycle Times/24 hr Ice Production/ Refrigerant Pressure Chart)
- 2. Allow the ice machine to run a normal freeze cycle (do not initiate an early harvest cycle).
- 3. At the start of the harvest cycle feel the compressor discharge line and the liquid line to the ice machine receiver at the headmaster valve. The temperature of both lines will be highest at the beginning of the harvest cycle and then decrease. Compare the lines 30 seconds into the harvest cycle and then refer to Harvest Cycle Headmaster Control Valve Failure List page 212.

Step 3 Details
Grasp Here with Hands to Compare Temperatures

Refrigerant Flow

LIQUID LINE
FROM CONDENSER

HARVEST CYCLE HEADMASTER CONTROL VALVE FAILURE LIST

Temperature of the compressor discharge line and liquid line to the ice machine receiver feel the same 30 seconds into the harvest cycle.

· The headmaster is functioning correctly.

The compressor discharge line is noticeably warmer than the liquid line to the ice machine receiver.

Headmaster valve is not bypassing 100%.
 Replace headmaster valve.

HEADMASTER VALVE WATER-COOLED CONDENSING UNIT - CVD1476

Freeze Cycle

The water regulating valve setting is higher than the head pressure control valve set point. All refrigerant is directed through the condenser and the water regulating valve maintains the correct head pressure.

Harvest Cycle

The headmaster control valve diverts the compressor discharge gas to the ice machine receiver in the harvest cycle. All refrigerant flow through the condenser in the harvest cycle stops. Symptoms of a headmaster valve that will not seat 100% closed in the harvest cycle (completely bypass the condenser) are:

- Freeze cycle suction and discharge pressure are normal.
- The control board indicates safety limit #2.
- Harvest cycle suction pressure is low.
- Harvest cycle discharge pressure is normal or high (water regulating valve attempts to maintain 240 psig).

CVD1476 Headmaster Control Valve Failure List

| Condition | Probable Cause | Corrective Measure |
|---|---|---|
| Discharge Pressure - Low Liquid Line Temperature - Hot | Ice Machine Low on Charge | Low on Charge Verification |
| Freeze Cycle Discharge Pressure - High or Freeze Cycle Discharge Pressure - Low | Water regulating valve maintains freeze cycle discharge pressure | Adjust or replace water regulating valve |
| Discharge Pressure - High Liquid Line Temperature - Hot | Verify water regulating valve is set and/or operating correctly Headmaster valve is stuck in bypass if water regulating valve is OK | Replace headmaster valve |
| Discharge Pressure - normal or high Liquid Line Temperature - Warm Suction Pressure - Low | Headmaster Valve not bypassing | Replace headmaster valve |

WATER REGULATING VALVE CVD1476 FUNCTION

The water regulating valve maintains the freeze cycle discharge pressure. The valve setting for the CVD1486 condensing unit is 240 psig.

CHECK PROCEDURE

- Determine if the head pressure is high or low (refer to "Operational Pressure Charts" beginning on page 239.
- 2. Verify the condenser water meets specifications.
- Adjust valve to increase or decrease discharge pressure (if discharge pressure remains high refer to "Headmaster Control Valve Diagnostics" page 212 before replacing valve).
- Determine the temperature of the liquid line entering the receiver by feeling it. This line is normally warm; "body temperature."
- Using the information gathered, refer to the list for diagnosis.

Problem (Freeze Cycle)

Valve not maintaining discharge pressure.

 Valve incorrectly set, dirty or defective. Adjust valve to 240 psig, clean or replace valve.

Discharge pressure extremely high; Liquid line entering receiver feels hot.

 Water regulating valve incorrectly set or not opening. Verify Head Pressure Control Valve operation before changing water regulating valve.

Discharge pressure low, Liquid line entering receiver feels warm to hot.

 Ice machine low on charge. Refer to "Refrigerant Charge Verification."

FAN CYCLE CONTROL

FUNCTION

Energizes and de-energizes the condenser fan motor. The condenser fan motor typically will be on in the Freeze cycle and off in the Harvest cycle.

The fan cycle control closes on an increase, and opens on a decrease in discharge pressure.

| Specifications | | |
|-------------------------------------|----------------|--|
| Cut-In (Close) | Cut-Out (Open) | |
| First Condenser Fan 250 psig ±5 | 200 psig ±5 | |
| Second Condenser Fan 275 psig ±5 | 225 psig ±5 | |

CHECK PROCEDURE

- 1. Verify fan motor windings are not open or grounded, and fan spins freely.
- 2. Connect manifold gauges to ice machine.
- 3. Hook voltmeter in parallel across the fan cycle control, leaving wires attached.
- Refer to chart below.

| FCC Setpoint: | Reading Should Be: | Fan Should Be: |
|---------------|-----------------------|-------------------|
| Above Cut-In | 0 Volts | Running |
| Below Cut-Out | Line Voltage | Off |

HIGH PRESSURE CUTOUT (HPCO) CONTROL FUNCTION

Stops the ice machine if subjected to excessive highside pressure.

The HPCO control is normally closed, and opens on a rise in discharge pressure.

| Specifications | | |
|-----------------------------------|--|--|
| Cut-Out Cut-In | | |
| 450 psig ±10 Automatic Reset | | |
| (Must be below 300 psig to reset) | | |

CHECK PROCEDURE

- Set ICE/OFF/CLEAN switch to OFF.
- 2. Disconnect power to condensing unit.
- Connect manifold gauges on condensing unit access valves.
- Hook voltmeter in parallel across the HPCO, leaving wires attached.
- 5. Reconnect condensing unit.
- Set ICE/OFF/CLEAN switch to ICE, block condensing unit with cardboard or similar object.
- No air flowing through the condenser will cause the HPCO control to open because of excessive pressure. Watch the pressure gauge and record the cut-out pressure.

A Warning

If discharge pressure exceeds 460 psig and the HPCO control does not cut out, set ICE/OFF/CLEAN switch to OFF to stop ice machine operation.

Replace the HPCO control if it:

- 1. Will not reset (below 300 psig).
- 2. Does not open at the specified cut-out point.

LOW PRESSURE CUTOUT (LPCO) CONTROL FUNCTION

Energizes and de-energizes the contactor coil when suction pressure rises above or falls below setpoint.

The LPCO control is closed at pressures above setpoint and opens at pressures below setpoint.

| | Specifications | | | |
|---------------------------------------|----------------|------------|--|--|
| | Cut-Out Cu | | | |
| Original | 7 psig ±3 | 22 psig ±3 | | |
| Current Production & Replacement Part | 12 psig ±3 | 35 psig ±3 | | |

CHECK PROCEDURE

- Connect manifold gauges at suction and discharge access valves at the condensing unit.
- 2. Set ICE/OFF/CLEAN switch to OFF.
- The liquid line solenoid valve will de-energize and the suction pressure will begin to decrease. The low-pressure control will open at the listed specification.
- 4. Use the manifold gauge set to increase suction pressure. Feed refrigerant from the high side access valve to the low side access valve. Add refrigerant in small increments to allow the low side pressure to be monitored. The low pressure control will close at the listed specification.

Replace the LPCO control if it:

- 1. Will not close at the specified setpoint.
- 2. Does not open at the specified setpoint.

Refrigerant Recovery/Evacuation

Do not purge refrigerant to the atmosphere. Capture refrigerant using recovery equipment. Follow the manufacturer's recommendations.

Important

Manitowoc Ice assumes no responsibility for the use of contaminated refrigerant. Damage resulting from the use of contaminated refrigerant is the sole responsibility of the servicing company.

Important

Replace the liquid line drier before evacuating and recharging. Use only a Manitowoc (OEM) liquid line filter-drier to prevent voiding the warranty.

A Warning

Recovery/evacuation of a QuietQube® remote system requires connections at either three or five points for complete system recovery/evacuation. Check valves are located in the ice machine head section on all models and in the CVD condensing unit on models manufactured in 2010 and beyond. Three point connections are - receiver service valve, suction line and liquid line - Five point requires another connection between the compressor and suction filter access valves to recover and evacuate the entire system.

A Warning

The receiver access valve (located in the ice machine head section) must be accessed during refrigerant recovery to allow complete removal of the refrigerant charge.

CONNECTIONS

Manifold gauge sets must utilize low loss fittings to comply with U.S. Government rules and regulations.

All CVD condensing units are now manufactured with a check valve in the compressor discharge line. The check valve requires an additional connection on the condensing unit during evacuation and recovery procedures. Connection of a manifold gauge set (or a hose with core depressors on both ends) between the suction filter access port and the compressor access valve (located between the compressor and discharge line check valve) is required.

Make these connections:

Ice Machine Head Section - All Models

- Suction side of the compressor through the suction shut-off valve or suction access valve.
- Discharge side of the compressor through the liquid line shut-off valve or high side access valve.
- 3. Receiver access valve, (both receiver service valves on S3070C = fastest recovery time) which evacuates the area between the check valve in the liquid line and the liquid line solenoid valve.

CVD Condensing Unit - Started In 2010


- 4. Compressor discharge access valve
- Suction filter access valve.

A Warning


Recovery/evacuation of a QuietQube® remote system requires connections at either three, five or six points for complete system recovery/evacuation. Check valves are located in the ice machine head section on all models and in the CVD condensing unit on models manufactured in 2010 and beyond. Three point connections are - receiver service valve, suction line and liquid line - Five point requires another connection between the compressor and suction filter access valves to recover and evacuate the entire system.

A Warning

The receiver access valve (located in the ice machine head section) must be accessed during refrigerant recovery to allow complete removal of the refrigerant charge.

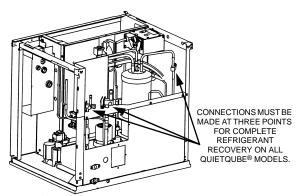

Refrigerant Recovery Connections Ice Machine Head

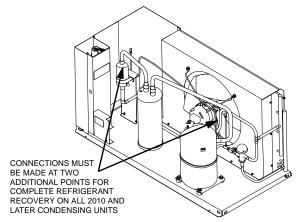

Refrigerant Recovery Connections CVD Condensing Unit

RECOVERY/EVACUATION PROCEDURES

- Place the ICE/OFF/CLEAN toggle switch in the OFF position and disconnect all power to the ice machine and condensing unit.
- Install manifold gauges, charging scale, and recovery unit or two-stage vacuum pump.
- 3. Open the receiver service valve halfway.
- Open high and low side on the manifold gauge set.
- 5. Perform recovery or evacuation:
 - A. Recovery: Operate the recovery unit as directed by the manufacturer's instructions.
 - B. Pressure test the system.
 - C. Evacuation prior to recharging: Evacuate to 500 microns. Then allow the pump to run for an additional hour.
- 6. Refer to Charging Procedures.

CHARGING PROCEDURES

- Verify the ICE/OFF/CLEAN toggle switch is in the OFF position.
- Close the vacuum pump valve and the low side manifold gauge valve.
- Open the refrigerant cylinder and add the proper refrigerant charge (shown on nameplate) into the system high side (receiver service valve and discharge line shut-off valve).
- 4. If the high side does not take the entire charge, close the high side on the manifold gauge set. Start the ice machine and add the remaining charge through valves on back of ice making head, or through valves on suction filter.
- 5. Run the ice machine in the Freeze cycle.
- Close the receiver service valve in the ice machine head section.
- Disconnect the manifold gauge set from the liquid line shut-off valve.
- Open the high and low side valves on the manifold gauge set. Any refrigerant in the lines will be pulled into the low side of the system.
- 9. Allow the pressures to equalize while the ice machine is in the Freeze cycle.
- 10. Disconnect the manifold gauge set from the suction line shut-off valve.
- 11. Install and torque all valve caps

NOTE: Check for refrigerant leaks after all valve caps have been installed.

System Contamination Cleanup

General

This section describes the basic requirements for restoring contaminated systems to reliable service.

Important

Manitowoc Ice assumes no responsibility for the use of contaminated refrigerant. Damage resulting from the use of contaminated refrigerant is the sole responsibility of the servicing company.

DETERMINING SEVERITY OF CONTAMINATION

System contamination is generally caused by either moisture or residue from compressor burnout entering the refrigeration system.

Inspection of the refrigerant usually provides the first indication of system contamination. Obvious moisture or an acrid odor in the refrigerant indicates contamination.

If either condition is found, or if contamination is suspected, use a Total Test Kit from Totaline or a similar diagnostic tool. These devices sample refrigerant, eliminating the need to take an oil sample. Follow the manufacturer's directions.

If a refrigerant test kit indicates harmful levels of contamination, or if a test kit is not available, inspect the compressor oil.

- 1. Remove the refrigerant charge from the ice machine.
- 2. Remove the compressor from the system.
- 3. Check the odor and appearance of the oil.
- 4. Inspect open suction and discharge lines at the compressor for burnout deposits.
- If no signs of contamination are present, perform an acid oil test to determine the type of cleanup required.

NOTE: Manitowoc Service procedures require reuse of the refrigerant if the quality has not been compromised.

| Contamination (| Cleanup Chart |
|---|--|
| Symptoms/Findings | Required Cleanup Procedure |
| No symptoms or suspicion of contamination | Normal evacuation/recharging procedure |
| Moisture/Air Contamination symptoms Refrigeration system open to atmosphere for longer than 15 minutes Refrigeration test kit and/or acid oil test shows contamination No burnout deposits in open compressor lines | Mild contamination cleanup procedure |
| Mild Compressor Burnout symptoms Oil appears clean but smells acrid Refrigeration test kit or acid oil test shows harmful acid content No burnout deposits in open compressor lines | Severe contamination cleanup procedure |
| Severe Compressor Burnout symptoms Oil is discolored, acidic, and smells acrid Burnout deposits found in the compressor, lines, and other components | Severe contamination cleanup procedure |

CLEANUP PROCEDURE

Mild System Contamination

- 1. Replace any failed components.
- 2. If the compressor is good, change the oil.
- 3. Replace the liquid line drier and suction filter.

NOTE: If the contamination is from moisture, use heat lamps during evacuation. Position them at the compressor, condenser and evaporator prior to evacuation. Do not position heat lamps too close to plastic components, or they may melt or warp.

Important

Dry nitrogen is recommended for this procedure. This will prevent CFC release.

- 4. Follow the normal evacuation procedure, except replace the evacuation step with the following:
 - Pull vacuum to 1000 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - B. Pull vacuum to 500 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - C. Change the vacuum pump oil.
 - Pull vacuum to 250 microns. Run the vacuum pump for 1/2 hour on self-contained models, 1 hour on remotes.

NOTE: You may perform a pressure test as a preliminary leak check. You should use an electronic leak detector after system charging to be sure there are no leaks.

- 5. Charge the system with the proper refrigerant to the nameplate charge.
- 6. Operate the ice machine.

Severe System Contamination

- 1. Remove the refrigerant charge.
- Remove the compressor.
- Cut copper tubing at the outlet of the harvest valve. If burnout deposits are found inside the tubing, replace the harvest valve, TXV and head pressure control valve.
- 4. Wipe away any burnout deposits from suction and discharge lines at compressor.
- 5. Sweep through the open system with dry nitrogen.

Important

Refrigerant sweeps are not recommended, as they release CFCs into the atmosphere.

- Install a new compressor and new start components.
- 7. Replace existing suction line filter.
- 8. Install a suction line filter-drier.
- 9. Install a new liquid line drier.
- 10. Follow the normal evacuation procedure, except replace the evacuation step with the following:
 - Pull vacuum to 1000 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - B. Change the vacuum pump oil.
 - C. Pull vacuum to 500 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - D. Change the vacuum pump oil.
 - E. Pull vacuum to 250 microns. Run the vacuum pump for 1 hour additional.

- 11. Charge the system with the proper refrigerant to the nameplate charge.
- Operate the ice machine for one hour. Then, check the pressure drop across the suction line filter-drier.
 - A. If the pressure drop is less than 2 psig, the filter-drier should be adequate for complete cleanup.
 - B. If the pressure drop exceeds 2 psig, change the suction line filter-drier and the liquid line drier. Repeat until the pressure drop is acceptable.
- 13. Operate the ice machine for 48-72 hours. Then remove the suction line drier, replace with suction filter and change the liquid line drier.
- 14. Follow normal evacuation procedures.

Replacing Pressure Controls Without Removing Refrigerant Charge

This procedure reduces repair time and cost. Use it when any of the following components require replacement, and the refrigeration system is operational and leak-free.

- Fan cycle control
- High pressure cut-out control
- Low pressure cut-out control
- High side condensing unit access valve
- Water regulating valve

Important

This is a required in-warranty repair procedure.


- 1. Disconnect power to the ice machine.
- Follow all manufacturer's instructions supplied with the pinch-off tool. Position the pinch-off tool around the tubing as far from the pressure control as feasible. (See the figure on next page.) Clamp down on the tubing until the pinch-off is complete.

🕰 Warning

Do not unsolder a defective component. Cut it out of the system. Do not remove the pinch-off tool until the new component is securely in place.

- Cut the tubing of the defective component with a small tubing cutter.
- Solder the replacement component in place. Allow the solder joint to cool.
- 5. Remove the pinch-off tool.
- Re-round the tubing. Position the flattened tubing in the proper hole in the pinch-off tool. Tighten the wing nuts until the block is tight and the tubing is rounded.

NOTE: The pressure controls will operate normally once the tubing is re-rounded. Tubing may not reround 100%.

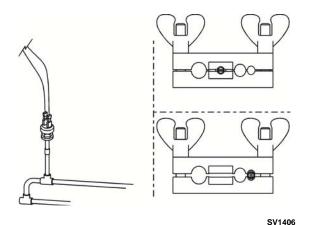

USING PINCH-OFF TOOL

Refrigerant Reuse Policy

Manitowoc recognizes and supports the need for proper handling, reuse, and disposal of CFC and HCFC refrigerants. Manitowoc service procedures require recapturing refrigerants, not venting them to the atmosphere.

It is not necessary, in or out of warranty, to reduce or compromise the quality and reliability of your customers' products to achieve this.

Important

Manitowoc Ice assumes no responsibility for use of contaminated refrigerant. Damage resulting from the use of contaminated, recovered, or recycled refrigerant is the sole responsibility of the servicing company.

Manitowoc approves the use of:

1. New Refrigerant

Must be of original nameplate type.

2. Reclaimed Refrigerant

- Must be of original nameplate type.
- Must meet ARI Standard 700 (latest edition) specifications.

3. Recovered or Recycled Refrigerant

- Must be recovered or recycled in accordance with current local, state and federal laws.
- Must be recovered from and reused in the same Manitowoc product. Reuse of recovered or recycled refrigerant from other products is not approved.
- Recycling equipment must be certified to ARI Standard 740 (latest edition) and be maintained to consistently meet this standard.

- Recovered refrigerant must come from a "contaminant-free" system. To decide whether the system is contaminant-free, consider:
- -Types) of previous failure(s)
- -Whether the system was cleaned, evacuated and recharged properly following failure(s)
- –Whether the system has been contaminated by this failure
- Compressor motor burnouts and improper past service prevent refrigerant reuse.
- Refer to "System Contamination Cleanup" page 223 to test for contamination.
 - 4. "Substitute" or "Alternative" Refrigerant
- Must use only Manitowoc-approved alternative refrigerants.
- Must follow Manitowoc-published conversion procedures.

Component Specifications

MAIN FUSE

The main control board fuse is 250 Volt, 7 amp.

BIN SWITCH

The bin switch is a magnetically operated reed switch. The magnet is attached to the lower right corner of the water curtain. The switch is attached to the right bulkhead wall.

The bin switch is connected to a varying D.C. voltage circuit. (Voltage does not remain constant.)

NOTE: Because of a wide variation in D.C. voltage, it is not recommended that a voltmeter be used to check bin switch operation.

HARVEST ASSIST AIR PUMP

115 Volt or 230 Volt - matches the ice machine voltage.

ICE/OFF/CLEAN TOGGLE SWITCH

S Model Ice Machines

Single-pole, double-throw switch. The switch is connected into a varying low D.C. voltage circuit.

IB Model Ice Machines

Double-pole, double-throw switch. The switch is connected into a varying low D.C. voltage circuit.

ELECTRONIC BIN THERMOSTAT CONTROL

Setpoint Range: -30 to 212°F (-34 - 100°C)

WATER REGULATING VALVE

The valve setting for the CVD1486 condensing unit is 240 psig.

FAN CYCLE CONTROL

| Specifications | | |
|-------------------------------------|----------------|--|
| Cut-In (Close) | Cut-Out (Open) | |
| First Condenser Fan 250 psig ±5 | 200 psig ±5 | |
| Second Condenser Fan 275 psig ±5 | 225 psig ±5 | |

HIGH PRESSURE CUTOUT (HPCO) CONTROL

| Specifications | | |
|--|-----------------|--|
| Cut-Out | Cut-In | |
| 450 psig ±10 (3103 kPa ±69) 31 bar ±.69 | Automatic Reset | |
| (Must be below 300 psig {2068 kPa 20.68 bar} to reset.) | | |

LOW PRESSURE CUTOUT (LPCO) CONTROL

| | Specifications | | |
|---------------------------------------|----------------|------------|--|
| | Cut-Out | Cut-In | |
| Original | 7 psig ±3 | 22 psig ±3 | |
| Current Production & Replacement Part | 12 psig ±3 | 35 psig ±3 | |

FILTER-DRIERS

Liquid Line Filter-Drier

The filter-driers used on Manitowoc ice machines are manufactured to Manitowoc specifications.

The difference between a Manitowoc drier and an offthe-shelf drier is in filtration. A Manitowoc drier has dirt-retaining filtration, with filters on both the inlet and outlet ends. This is very important because ice machines have a back-flushing action that takes place during every Harvest cycle.

A Manitowoc filter-drier has a very high moisture removal capability and a good acid removal capacity.

Listed below is the recommended OEM field replacement drier:

| Liquid Line Driers | | | |
|--|---------------------------|---------|--|
| Model | End Connection Size | | |
| IB0600C IB0680C IB0800C IB1000C | DML-052S | 1/4 in. | |
| \$0600C \$0850C \$1000C \$1200C \$1470C \$1870C \$2070C \$2170C | DML-053S | 3/8 in. | |
| S3300W | DML-084S | 1/2" | |

Important

The liquid line drier is covered as a warranty part. The liquid line drier must be replaced any time the system is opened for repair.

Suction Line Filter

The suction filter traps particulate only and does not contain a desiccant. The filter needs replacement when:

- 1. The pressure drop across the drier exceeds 2 psig.
- 2. The total system refrigerant charge has escaped and the refrigeration system has been exposed to the atmosphere.
- 3. A compressor is replaced.
- 4. Refrigeration system contains contaminants.

Listed below is the recommended OEM field replacement filter:

| | Suction Line Filter | | | |
|--|---------------------|----------------|-----------|--|
| Model | Drier Size | Part Number | | |
| CVD0675 CVD0685 CVD0885 | ASF35S5 | 5/8 in. | 82-5053-9 | |
| CVD1075 CVD1085 CVD1185 CVD1285 CVD1485 CVD1486 | ASF45S6 | 3/4 in. | 82-5054-9 | |
| CVD2075 CVD2085 CVD3085 | ASF45S7 | 7/8 in. | 82-5055-9 | |

TOTAL SYSTEM REFRIGERANT CHARGE

| Model | Condensing Unit | Refrigerant Charge | Line Set Length |
|----------------------------------|--|-----------------------|-----------------------|
| S0600C/S0680C IB0600C/IB0680C | CVD0675/ CVD0685 | 11 lbs. 5 kg. | 0-100 ft. 0-30 M |
| S0850C | CVD0885 | 11 lbs. 5 kg. | 0-50 ft. 0-15 M |
| 50850C | CVD0865 | 12 lbs. 5.44 kg | 51-100 ft. 15-30 M |
| IB0800C | CVD885 | 12 lbs. 192 oz. | 0-100 ft. 0-30 M |
| S1000C | CVD1085 | 11 lbs. 5 kg | 0-50 ft. 0-15 M |
| S1000C | CVD1085 | 12 lbs 5.44 kg | 51-100 ft. 15-30 M |
| IB1000C | CVD1185 CVD1285 CVD1085 CVD1075 | 12 lbs. 192 oz. | 0-100 ft. 0-30 M |
| S1200C | CVD1285 | 11 lbs. 5 kg | 0-50 ft. 0-15 M |
| 31200C | CVD1265 | 12 lbs 5.44 kg | 51-100 ft. 15-30 M |
| S1470C | CVD1485 | 12.75 lbs 5.44 kg | 0-100 ft. 0-30 M |
| 314700 | CVD1486 | 12.75 lbs 5.44 kg | 0-100 ft. 0-30 M |
| S1870C | CVD1885 | 15.0 lbs 6.8 kg | 0-100 ft. 0-30 M |
| S2070C | CVD2075 | 15.0 lbs 6.8 kg | 0-50 ft. 0-15 M |
| 320700 | CVD2075 | 21.0 lbs 8.0 kg | 51-100 ft. 15-30 M |
| S2170C | CVD2085 | 18.0 lbs 8.2 kg | 0-50 ft. 0-15 M |
| 321700 | CVD2003 | 22.0 lbs 10.0 kg | 51-100 ft. 15-30 M |
| S3070C | CVD3085 | 20.0 lbs 9.1 kg | 0-50 ft. 0-15 M |
| 330700 | C V D 3003 | 23.0 lbs 10.4 kg | 51-100 ft. 15-30 M |

NOTE: All ice machines on this list are charged using R-404A refrigerant. This information is for reference only. Refer to the ice machine serial number tag to verify the system charge. Serial plate information overrides information listed on this page.

This Page Intentionally Left Blank

Charts

Cycle Times/24-Hour Ice Production/ Refrigerant Pressure

These charts are used as guidelines to verify correct ice machine operation.

Accurate collection of data is essential to obtain the correct diagnosis.

- Ice production checks that are within 10% of the chart are considered normal. This is due to variances in water and air temperature. Actual temperatures will seldom match the chart exactly.
- Zero out manifold gauge set before obtaining pressure readings to avoid misdiagnosis.
- All pressure readings are taken at the ice machine head section. Connect Manifold gauge set at the suction and liquid line shut-off valves to obtain pressure readings Pressures taken at the condensing unit will vary with line set length, ambient, exposed line set etc. and will not match the published pressures. Do not use the receiver service valve to obtain high side pressures.
- Discharge and suction pressure are highest at the beginning of the cycle. Suction pressure will drop throughout the cycle. Verify the pressures are within the range indicated.
- During low ambient conditions, it is normal for the head pressure control valve to hunt (fluctuate up and down) on CVD condensing units. Hunting varies by model and ambient temperature, but generally settles out within the first 6 minutes of the freeze cycle.

S0600C/CVD0675 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|----------|-------------|-----------|-----------------|
| Air Temp. | | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 7.6-9.0 | 8.4-9.9 | 9.1-10.7 | |
| 80/27 | 7.8-9.2 | 8.6-10.1 | 9.3-10.9 | |
| 90/32 | 7.9-9.4 | 8.8-10.3 | 9.7-11.4 | .75-2.5 |
| 100/38 | 8.6-10.1 | 9.4-11.2 | 10.2-11.9 | |
| 110/43 | 9.5-10.9 | 10.6-12.5 | 11.4-13.4 | |
| ¹ Times in minu | tes | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|---|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 650 | 600 | 560 | |
| 80/27 | 640 | 590 | 550 | |
| 90/32 | 630 | 580 | 530 | |
| 100/38 | 590 | 540 | 510 | |
| ¹ Based on average ice slab weight of 4.1-4.75 lb. | | | | |

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 44-26 | 180-210 | 65-85 |
| 70/21 | 235-255 | 50-28 | 185-210 | 65-90 |
| 80/27 | 245-275 | 50-28 | 190-210 | 75-100 |
| 90/32 | 250-290 | 52-30 | 195-215 | 75-105 |
| 100/38 | 270-320 | 52-31 | 210-240 | 80-110 |
| 110/43 | 300-360 | 60-32 | 215-260 | 85-115 |

SD0682C/CVD0685 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|----------------------------------|-----------|-----------|-----------------|
| Air Temp. Freeze Time | | | | |
| Entering Condenser | Entering Water Temperature °F/°C | | | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 |
| -20 to 70/ -29 to 21 | 8.7-10.0 | 9.5-11.0 | 10.9-12.5 | |
| 90/32 | 9.1-10.5 | 10.0-11.5 | 11.0-12.6 | .75-2.5 |
| 100/38 | 9.7-11.2 | 10.8-12.4 | 11.9-13.6 | |
| 110/43 | 10.7-12.2 | 11.9-13.6 | 13.2-15.1 | |
| 1Times in minu | toc | | | |

24-HOUR ICE PRODUCTION

| Air Temp. Entering Condenser °F/°C | Water Temperature °F/°C | | | |
|---|-------------------------|-------|-------|--|
| | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 650 | 600 | 535 | |
| 90/32 | 625 | 575 | 530 | |
| 100/38 | 590 | 540 | 495 | |
| 110/43 | 545 | 495 | 450 | |

¹Based on average ice slab weight of 4.6-5.2 lb.

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 44-26 | 180-210 | 65-85 |
| 70/21 | 235-255 | 50-28 | 185-210 | 65-90 |
| 80/27 | 245-275 | 50-28 | 190-210 | 75-100 |
| 90/32 | 250-290 | 52-30 | 195-215 | 75-105 |
| 100/38 | 270-320 | 52-31 | 210-240 | 80-110 |
| 110/43 | 300-360 | 60-32 | 215-260 | 85-115 |

SY0684C/CVD0685 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 8.2-9.5 | 9.0-10.4 | 9.7-11.2 | |
| 90/32 | 8.9-10.2 | 9.7-11.2 | 10.5-12.1 | .75-2.5 |
| 100/38 | 9.5-11.0 | 10.5-12.1 | 11.5-13.2 | |
| 110/43 | 10.5-12.1 | 11.7-13.5 | 12.9-14.8 | |
| ¹ Times in minu | tes. | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|---------------------------------|-------------------------|---------------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 680 | 630 | 590 | |
| 90/32 | 640 | 590 | 550 | |
| 100/38 | 600 | 550 | 510 | |
| 110/43 | 550 | 500 | 460 | |
| ¹ Based on average i | ce slab weight c | f 4.6-5.2 lb. | | |

| Air Temp. | Freeze Cycle | | Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 44-26 | 180-210 | 65-85 |
| 70/21 | 235-255 | 50-28 | 185-210 | 65-90 |
| 80/27 | 245-275 | 50-28 | 190-210 | 75-100 |
| 90/32 | 250-290 | 52-30 | 195-215 | 75-105 |
| 100/38 | 270-320 | 52-31 | 210-240 | 80-110 |
| 110/43 | 300-360 | 60-32 | 215-260 | 85-115 |

IB0600C/CVD675 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|----------|--------------|-----------|-----------------|
| Air Temp. | | Freeze Time |) | |
| Entering Condenser | Wate | r Temperatur | e °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 |
| -20 to 70/ -29 to 21 | 7.8-9.3 | 8.8-10.4 | 9.5-11.2 | |
| 80/27 | 8.0-9.4 | 8.9-10.5 | 9.7-11.4 | .75-2.5 |
| 90/32 | 8.6-10.2 | 9.8-11.5 | 10.6-12.5 | |
| 100/38 | 9.7-11.4 | 11.0-12.9 | 12.0-14.0 | |
| ¹ Times in minu | tes. | · | · | <u> </u> |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|---|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 635 | 575 | 540 | |
| 80/27 | 625 | 570 | 530 | |
| 90/32 | 585 | 525 | 490 | |
| 100/38 | 530 | 475 | 440 | |
| ¹ Based on average ice slab weight of 4.1-4.75 lb. | | | | |

| Air Temp. | Freeze Cycle | | Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 215-260 | 46-26 | 140-185 | 70-95 |
| 70/21 | 220-270 | 51-26 | 150-190 | 70-100 |
| 80/27 | 225-285 | 56-27 | 155-195 | 80-105 |
| 90/32 | 235-295 | 59-28 | 165-200 | 85-105 |
| 100/38 | 260-340 | 60-30 | 180-210 | 85-112 |
| 110/43 | 300-385 | 65-34 | 195-230 | 90-120 |

IB0682DC/CVD685 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 9.2-10.6 | 10.1-11.6 | 11.1-12.8 | |
| 90/32 | 9.5-11.0 | 10.5-12.1 | 11.6-13.3 | .75-2.5 |
| 100/38 | 10.2-11.8 | 11.4-13.0 | 12.6-14.4 | |
| 110/43 | 11.2-12.9 | 12.6-14.4 | 14.1-16.1 | |
| ¹ Times in minu | ites. | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 620 | 570 | 525 | |
| 90/32 | 600 | 550 | 505 | |
| 100/38 | 565 | 515 | 470 | |
| 110/43 | 520 | 470 | 425 | |

| Air Temp. | Freeze Cycle | | Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 215-260 | 46-26 | 140-185 | 70-95 |
| 70/21 | 220-270 | 51-26 | 150-190 | 70-100 |
| 80/27 | 225-285 | 56-27 | 155-195 | 80-105 |
| 90/32 | 235-295 | 59-28 | 165-200 | 85-105 |
| 100/38 | 260-340 | 60-30 | 180-210 | 85-112 |
| 110/43 | 300-385 | 65-34 | 195-230 | 90-120 |

IB0684YC/CVD685 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 |
| -20 to 70/ -29 to 21 | 9.2-10.6 | 10.1-11.6 | 11.1-12.8 | |
| 90/32 | 9.5-11.0 | 10.5-12.1 | 11.6-13.3 | .75-2.5 |
| 100/38 | 10.2-11.8 | 11.4-13.0 | 12.6-14.4 | |
| 110/43 | 11.2-12.9 | 12.6-14.4 | 14.1-16.1 | |
| ¹ Times in minu | tes. | · | | · |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 620 | 570 | 525 | | |
| 90/32 | 600 | 550 | 505 | | |
| 100/38 | 565 | 515 | 470 | | |
| 110/43 | 520 | 470 | 425 | | |

¹Based on average ice slab weight of 4.6-5.2 lb.

| Air Temp. | | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 215-260 | 46-26 | 140-185 | 70-95 |
| 70/21 | 220-270 | 51-26 | 150-190 | 70-100 |
| 80/27 | 225-285 | 56-27 | 155-195 | 80-105 |
| 90/32 | 235-295 | 59-28 | 165-200 | 85-105 |
| 100/38 | 260-340 | 60-30 | 180-210 | 85-112 |
| 110/43 | 300-385 | 65-34 | 195-230 | 90-120 |

SD0872C/SY0874C/CVD0885 SERIES REMOTE AIR COOLED MACHINES BEFORE SERIAL NUMBER 110682385

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-------------|-------------|-----------|-----------------|
| Air Temp. | Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 9.3-10.7 | 10.2-11.7 | 10.9-12.5 | |
| 80/27 | 9.4-10.8 | 10.3-11.9 | 11.0-12.7 | |
| 90/32 | 9.5-11.0 | 10.5-12.1 | 11.2-12.9 | .75-2.5 |
| 100/38 | 10.0-11.5 | 11.0-12.7 | 13.6-15.5 | |
| 110/43 | 11.2-12.9 | 12.5-14.4 | 13.6-15.5 | |
| ¹ Times in minu | tes. | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | | |
|--|-------|-------------------------|-------|--|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | | |
| -20 to 70/ -29 to 21 | 770 | 710 | 670 | | | |
| 80/27 | 760 | 700 | 660 | | | |
| 90/32 | 750 | 690 | 650 | | | |
| 100/38 | 720 | 660 | 620 | | | |
| ¹ Based on average ice slab weight of 5.75-6.50 lb. | | | | | | |

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 44-29 | 180-200 | 70-95 |
| 70/21 | 225-270 | 44-29 | 190-220 | 75-95 |
| 80/27 | 255-275 | 50-29 | 195-225 | 80-100 |
| 90/32 | 260-300 | 52-29 | 200-225 | 85-105 |
| 100/38 | 265-335 | 60-30 | 210-230 | 90-110 |
| 110/43 | 300-380 | 64-32 | 225-260 | 100-120 |

SD0872C/CVD0885 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110682385

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-------------------------|-----------|---------|--|
| Air Temp. | | Freeze Time | | Harvest | |
| Entering Condenser | Water | Water Temperature °F/°C | | | |
| °F/°C | 50/10 | 70/21 | 90/32 | Time | |
| -20 to 70/ -29 to 21 | 8.7-10.0 | 9.6-11.1 | 10.7-12.3 | | |
| 90/32 | 10.0-11.5 | 10.2-11.8 | 12.0-13.7 | .75-2.5 | |
| 100/38 | 10.9-12.5 | 11.7-13.5 | 12.8-14.6 | | |
| 110/43 | 11.9-13.6 | 12.7-14.5 | 13.6-15.5 | | |
| 1Timos in minu | toc | | | | |

¹Times in minutes.

24-HOUR ICE PRODUCTION

| Air Temp. Entering Condenser °F/°C | Wate | Water Temperature °F/°C | | | |
|---|-------|-------------------------|-------|--|--|
| | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 815 | 745 | 680 | | |
| 90/32 | 720 | 705 | 615 | | |
| 100/38 | 670 | 625 | 580 | | |
| 110/43 | 620 | 585 | 550 | | |

¹Based on average ice slab weight of 5.75-6.50 lb.

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 50-30 | 170-200 | 65-75 |
| 70/21 | 250-290 | 60-30 | 180-210 | 75-95 |
| 80/27 | 260-300 | 60-31 | 190-220 | 75-95 |
| 90/32 | 270-310 | 60-33 | 200-230 | 80-100 |
| 100/38 | 300-380 | 80-34 | 210-250 | 90-110 |
| 110/43 | 310-390 | 80-35 | 220-260 | 105-130 |

SY0874C/CVD0885 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110682385

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 8.7-10.0 | 9.6-11.1 | 10.7-12.3 | |
| 90/32 | 10.0-11.5 | 10.2-11.8 | 12.0-13.7 | .75-2.5 |
| 100/38 | 10.9-12.5 | 11.7-13.5 | 12.8-14.6 | |
| 110/43 | 11.9-13.6 | 12.7-14.5 | 13.6-15.5 | |
| ¹ Times in minu | tes. | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 815 | 745 | 680 | |
| 90/32 | 720 | 705 | 615 | |
| 100/38 | 670 | 625 | 580 | |
| 110/43 | 620 | 585 | 550 | |

¹Based on average ice slab weight of 5.75-6.50 lb.

| Air Temp. | | | Harvest Cycle | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 50-30 | 170-200 | 65-75 |
| 70/21 | 250-290 | 60-30 | 180-210 | 75-95 |
| 80/27 | 260-300 | 60-31 | 190-220 | 75-95 |
| 90/32 | 270-310 | 60-33 | 200-230 | 80-100 |
| 100/38 | 300-380 | 80-34 | 210-250 | 90-110 |
| 110/43 | 310-390 | 80-35 | 220-260 | 105-130 |

IB0822DC/IB0824YC/CVD885 SERIES REMOTE AIR COOLED MACHINES BEFORE SERIAL NUMBER 110682385

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------------------|-----------|---------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Water Temperature °F/°C | | |
| °F/°C | 50/10 | 70/21 | 90/32 | Time |
| -20 to 70/ -29 to 21 | 9.4-10.8 | 10.5-12.1 | 11.4-13.1 | |
| 80/27 | 9.5-11.0 | 10.7-12.3 | 11.4-13.1 | .75-2.5 |
| 90/32 | 10.3-11.9 | 11.2-12.9 | 12.1-13.8 | |
| 100/38 | 11.2-12.9 | 12.3-14.1 | 13.3-15.2 | |
| ¹ Times in minu | tes. | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 760 | 690 | 640 | |
| 80/27 | 750 | 680 | 640 | |
| 90/32 | 700 | 650 | 610 | |
| 100/38 | 650 | 600 | 560 | |
| ¹ Based on average ice slab weight of 5.75-6.50 lb. | | | | |

| Air Temp. | Freeze Cycle | | Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 215-260 | 46-22 | 140-185 | 70-95 |
| 70/21 | 220-270 | 40-23 | 150-190 | 70-100 |
| 80/27 | 225-285 | 47-24 | 155-195 | 80-95 |
| 90/32 | 235-295 | 52-25 | 165-200 | 85-100 |
| 100/38 | 260-340 | 56-26 | 180-210 | 85-112 |
| 110/43 | 300-385 | 60-28 | 195-230 | 90-115 |

IB0822DC/CVD885 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110682385

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|--------------------------------|-------------------------|-----------|---------|--|
| Air Temp. | | | | | |
| Entering Condenser | Water | Water Temperature °F/°C | | | |
| °F/°C | 50/10 | Time | | | |
| -20 to 70/ -29 to 21 | 10.1-11.6 | 11.0-12.6 | 12.0-13.7 | | |
| 80/27 | 11.3-13.0 | 11.6-13.4 | 13.3-15.2 | .75-2.5 | |
| 90/32 | 12.2-14.0 | 13.0-14.9 | 14.1-16.2 | | |
| 100/38 | 13.0-14.9 | 14.0-16.0 | 14.9-17.0 | | |
| ¹ Times in minu | ¹ Times in minutes. | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 715 | 665 | 615 | |
| 90/32 | 645 | 630 | 560 | |
| 100/38 | 605 | 570 | 530 | |
| 110/43 | 570 | 535 | 505 | |
| ¹ Based on average ice slab weight of 5.75-6.50 lb. | | | | |

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 230-260 | 45-25 | 180-205 | 60-80 |
| 70/21 | 250-275 | 55-30 | 180-205 | 75-105 |
| 80/27 | 260-290 | 60-31 | 185-215 | 80-110 |
| 90/32 | 265-300 | 60-32 | 190-220 | 80-110 |
| 100/38 | 300-370 | 70-34 | 200-250 | 90-115 |
| 110/43 | 310-385 | 75-35 | 230-260 | 95-115 |

IB0824YC/CVD885 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110682385

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-------------|-----------|-----------------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time | |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 | |
| -20 to 70/ -29 to 21 | 8.9-10.3 | 9.8-11.2 | 10.9-12.5 | | |
| 80/27 | 10.3-11.9 | 10.5-12.1 | 12.3-14.1 | .75-2.5 | |
| 90/32 | 11.1-12.8 | 12.1-13.8 | 13.0-14.9 | | |
| 100/38 | 12.2-14.0 | 13.0-14.9 | 14.0-16.0 | | |
| 1Times in minutes | | | | | |

¹Times in minutes.

24-HOUR ICE PRODUCTION

| Water Temperature °F/°C | | | |
|-------------------------|----------------------------|---|--|
| 50/10 | 70/21 | 90/32 | |
| 795 | 735 | 670 | |
| 700 | 690 | 600 | |
| 655 | 610 | 570 | |
| 605 | 570 | 535 | |
| | 50/10 795 700 655 | 50/10 70/21 795 735 700 690 655 610 | |

¹Based on average ice slab weight of 5.75-6.50 lb.

| Air Temp. | np. Freeze Cyc | | cle Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 230-260 | 45-25 | 180-205 | 60-80 |
| 70/21 | 250-275 | 55-30 | 180-205 | 75-105 |
| 80/27 | 260-290 | 60-31 | 185-215 | 80-110 |
| 90/32 | 265-300 | 60-32 | 190-220 | 80-110 |
| 100/38 | 300-370 | 70-34 | 200-250 | 90-115 |
| 110/43 | 310-385 | 75-35 | 230-260 | 95-115 |

SD1072C/SY1074C/CVD1085 SERIES REMOTE AIR COOLED MACHINES BEFORE SERIAL NUMBER 110697654

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|----------|-------------|-----------|-----------------|--|
| Air Temp. | | | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time | |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 | |
| -20 to 70/ -29 to 21 | 7.0-8.1 | 7.7-8.1 | 8.0-9.3 | | |
| 80/27 | 7.2-8.4 | 7.9-9.1 | 8.7-10.1 | | |
| 90/32 | 7.5-8.7 | 8.2-9.5 | 9.1-10.5 | .75-2.5 | |
| 100/38 | 8.4-9.6 | 9.3-10.7 | 10.3-11.9 | | |
| 110/43 | 9.4-10.8 | 10.5-12.1 | 11.9-13.6 | | |
| ¹ Times in minutes. | | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. Entering Condenser °F/°C | Water Temperature °F/°C | | | |
|---|-------------------------|-------|-------|--|
| | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 970 | 900 | 870 | |
| 80/27 | 950 | 880 | 810 | |
| 90/32 | 920 | 850 | 780 | |
| 100/38 | 840 | 770 | 700 | |

¹Based on average ice slab weight of 5.75-6.5 lb.

| Air Temp. | Freeze Cycle | | Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 38-25 | 175-235 | 70-85 |
| 70/21 | 230-255 | 38-25 | 185-235 | 70-85 |
| 80/27 | 235-260 | 44-27 | 190-240 | 70-90 |
| 90/32 | 240-290 | 52-28 | 200-250 | 85-100 |
| 100/38 | 275-345 | 58-29 | 225-260 | 90-110 |
| 110/43 | 310-380 | 62-31 | 240-290 | 100-115 |

SD1072C/CVD1085 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110697654

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|----------|-----------------|-----------|---------|--|
| Air Temp. | | | | | |
| Entering Condenser | Water | Harvest Time | | | |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 | |
| -20 to 70/ -29 to 21 | 7.5-8.7 | 8.1-9.3 | 8.8-10.1 | | |
| 90/32 | 8.5-9.8 | 8.9-10.2 | 10.1-11.6 | .75-2.5 | |
| 100/38 | 9.2-10.6 | 10.0-11.5 | 10.9-12.5 | | |
| 110/43 | 9.9-11.4 | 10.8-12.4 | 11.7-13.5 | | |
| 1Times in minutes | | | | | |

¹Times in minutes.

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 920 | 865 | 805 | | |
| 80/27 | 825 | 800 | 715 | | |
| 90/32 | 775 | 720 | 670 | | |
| 100/38 | 725 | 675 | 625 | | |

¹Based on average ice slab weight of 5.75-6.5 lb.

OPERATING PRESSURES

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 40-30 | 170-210 | 70-85 |
| 70/21 | 230-255 | 50-30 | 185-220 | 70-90 |
| 80/27 | 235-260 | 50-30 | 190-225 | 70-95 |
| 90/32 | 240-290 | 55-31 | 200-240 | 85-105 |
| 100/38 | 275-345 | 60-32 | 220-260 | 90-115 |
| 110/43 | 310-380 | 65-32 | 240-280 | 100-120 |

SY1074C/CVD1085 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110697654

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|----------|-------------------------|-----------|---------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Water Temperature °F/°C | | | |
| °F/°C | 50/10 | 50/10 70/21 90/32 | | | |
| -20 to 70/ -29 to 21 | 6.9-8.1 | 7.5-8.7 | 8.4-9.7 | | |
| 90/32 | 8.0-9.2 | 8.2-9.5 | 9.5-11.0 | .75-2.5 | |
| 100/38 | 8.7-10.0 | 9.4-10.8 | 10.2-11.8 | | |
| 110/43 | 9.4-10.8 | 10.2-11.7 | 11.0-12.6 | | |
| ¹ Times in minutes. | | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | | |
|---|-------------------------|-------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 990 | 915 | 835 | | |
| 80/27 | 875 | 850 | 750 | | |
| 90/32 | 810 | 760 | 705 | | |
| 100/38 | 760 | 710 | 665 | | |
| ¹ Based on average ice slab weight of 5.75-6.5 lb. | | | | | |

OPERATING PRESSURES

| Air Temp. | Freeze Cycle | | Harvest Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 40-30 | 170-210 | 70-85 |
| 70/21 | 230-255 | 50-30 | 185-220 | 70-90 |
| 80/27 | 235-260 | 50-30 | 190-225 | 70-95 |
| 90/32 | 240-290 | 55-31 | 200-240 | 85-105 |
| 100/38 | 275-345 | 60-32 | 220-260 | 90-115 |
| 110/43 | 310-380 | 65-32 | 240-280 | 100-120 |

IB1022DC/IB1024YC/CVD1075/CVD1085/CVD1285 SERIES REMOTE AIR COOLED MACHINES BEFORE SERIAL NUMBER 110697294

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 9.9-10.6 | 10.8-11.6 | 11.8-12.6 | |
| 80/27 | 10.1-10.9 | 10.9-11.7 | 12.1-13.0 | .75-2.5 |
| 90/32 | 10.6-11.4 | 11.5-12.3 | 12.8-13.7 | |
| 100/38 | 11.6-12.5 | 12.6-13.5 | 14.0-15.0 | |
| ¹ Times in minu | tes. | • | • | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 980 | 910 | 840 | |
| 80/27 | 960 | 900 | 820 | |
| 90/32 | 920 | 860 | 780 | |
| 100/38 | 850 | 790 | 720 | |
| ¹ Based on average ice slab weight of 7.75-8.25 lb. | | | | |

OPERATING PRESSURES

| Air Temp. | Freeze | Cycle | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 215-260 | 40-22 | 140-185 | 70-95 |
| 70/21 | 220-270 | 42-24 | 150-190 | 80-95 |
| 80/27 | 225-275 | 48-24 | 155-195 | 85-95 |
| 90/32 | 235-275 | 52-25 | 165-195 | 85-100 |
| 100/38 | 260-325 | 55-25 | 180-205 | 85-112 |
| 110/43 | 300-360 | 60-27 | 195-225 | 95-118 |

IB1022DC/CVD1185 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110697294

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-------------------------|-----------|---------|--|
| Air Temp. | | | | | |
| Entering Condenser | Water | Water Temperature °F/°C | | | |
| °F/°C | 50/10 | 70/21 | 90/32 | Time | |
| -20 to 70/ -29 to 21 | 9.5-11.0 | 10.4-12.0 | 11.3-13.0 | | |
| 90/32 | 10.3-11.9 | 10.6-12.3 | 12.2-14.0 | .75-2.5 | |
| 100/38 | 10.8-12.4 | 11.7-13.4 | 12.7-14.6 | | |
| 110/43 | 11.2-12.9 | 12.2-14.0 | 13.3-15.3 | | |
| ¹ Times in minutes | | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 980 | 910 | 845 | |
| 90/32 | 915 | 890 | 790 | |
| 100/38 | 880 | 820 | 760 | |
| 110/43 | 850 | 790 | 730 | |

¹Based on average ice slab weight of 7.5-8.5 lb.

OPERATING PRESSURES

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 40-25 | 140-170 | 65-75 |
| 70/21 | 220-270 | 40-25 | 150-185 | 65-85 |
| 80/27 | 225-275 | 50-26 | 160-190 | 70-90 |
| 90/32 | 235-275 | 60-27 | 175-195 | 75-95 |
| 100/38 | 260-325 | 65-30 | 190-220 | 80-100 |
| 110/43 | 300-360 | 70-33 | 200-230 | 90-105 |

IB1024YC/CVD1185 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110697294

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 9.3-10.7 | 10.2-11.8 | 11.3-13.0 | |
| 90/32 | 10.5-12.1 | 10.6-12.3 | 12.5-14.4 | .75-2.5 |
| 100/38 | 11.3-13.0 | 12.2-14.0 | 13.2-15.2 | |
| 110/43 | 12.0-13.8 | 13.0-14.9 | 13.6-15.6 | |
| ¹ Times in minu | tes. | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 1000 | 920 | 845 | | |
| 90/32 | 900 | 890 | 770 | | |
| 100/38 | 845 | 790 | 735 | | |
| 110/43 | 800 | 745 | 715 | | |

¹Based on average ice slab weight of 7.5-8.5 lb.

OPERATING PRESSURES

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 40-25 | 140-170 | 65-75 |
| 70/21 | 220-270 | 40-25 | 150-185 | 65-85 |
| 80/27 | 225-275 | 50-26 | 160-190 | 70-90 |
| 90/32 | 235-275 | 60-27 | 175-195 | 75-95 |
| 100/38 | 260-325 | 65-30 | 190-220 | 80-100 |
| 110/43 | 300-360 | 70-33 | 200-230 | 90-105 |

SD1272C/SY1274C/CVD1285 SERIES REMOTE AIR COOLED MACHINES BEFORE SERIAL NUMBER 110706336

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| -20 to 70/ -29 to 21 | 8.0-8.9 | 9.0-10.0 | 9.9-11.0 | |
| 80/27 | 8.3-9.3 | 9.2-10.3 | 10.0-11.1 | |
| 90/32 | 8.6-9.6 | 9.3-10.4 | 10.4-11.6 | .75-2.5 |
| 100/38 | 10.0-11.1 | 9.8-10.9 | 10.5-11.7 | |
| 110/43 | 10.2-11.4 | 10.8-12.0 | 12.0-13.4 | |
| ¹ Times in minutes. | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 1140 | 1030 | 950 | |
| 80/27 | 1100 | 1010 | 940 | |
| 90/32 | 1070 | 1000 | 910 | |
| 100/38 | 1010 | 960 | 900 | |

¹Based on average ice slab weight of 7.5-8.25 lb.

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 200-250 | 38-25 | 160-175 | 70-85 |
| 70/21 | 245-265 | 38-26 | 165-180 | 70-90 |
| 80/27 | 245-275 | 40-27 | 165-180 | 75-95 |
| 90/32 | 260-285 | 41-28 | 170-190 | 85-100 |
| 100/38 | 265-345 | 42-28 | 180-200 | 90-100 |
| 110/43 | 300-360 | 43-28 | 190-210 | 100-115 |

SD1272C/CVD1285 SERIES REMOTE AIR COOLED MACHINES AFTER SERIAL NUMBER 110706336

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-------------------|-----------------|-----------|---------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Harvest Time | | | |
| °F/°C | 50/10 | 90/32 | 10 | | |
| -20 to 70/ -29 to 21 | 8.4-9.3 | 9.1-10.1 | 10.0-11.1 | | |
| 90/32 | 9.3-10.4 | 9.6-10.7 | 11.0-12.2 | .75-2.5 | |
| 100/38 | 9.8-10.9 | 10.6-11.8 | 11.6-12.9 | | |
| 110/43 | 10.4-11.6 | 11.3-12.6 | 12.3-13.6 | | |
| 1Timos in minu | 1Timos in minutos | | | | |

¹Times in minutes.

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 1095 | 1020 | 940 | | |
| 90/32 | 1000 | 975 | 865 | | |
| 100/38 | 955 | 890 | 825 | | |
| 110/43 | 905 | 845 | 785 | | |

¹Based on average ice slab weight of 7.5-8.25 lb.

| Air Temp. | Air Temp. Freeze Cycle | | Harvest Cycle | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 190-250 | 40-22 | 160-175 | 65-80 |
| 70/21 | 230-250 | 45-23 | 165-190 | 70-90 |
| 80/27 | 245-275 | 45-26 | 165-190 | 70-95 |
| 90/32 | 245-282 | 50-28 | 180-200 | 70-95 |
| 100/38 | 265-345 | 52-28 | 180-200 | 90-100 |
| 110/43 | 300-360 | 55-28 | 200-220 | 85-110 |

SY1274C/CVD1285 SERIES REMOTE AIR COOLED **MACHINES AFTER SERIAL NUMBER 110706336**

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|--------------------------------|-------------|-----------|-----------------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time | |
| °F/°C | 50/10 | 70/21 | 90/32 | 110 | |
| -20 to 70/ -29 to 21 | 8.3-9.3 | 9.1-10.1 | 9.9-11.1 | | |
| 90/32 | 9.1-10.2 | 9.3-10.4 | 10.8-12.0 | .75-2.5 | |
| 100/38 | 9.6-10.6 | 10.4-11.6 | 11.3-12.6 | | |
| 110/43 | 10.1-11.3 | 10.9-12.2 | 11.8-13.2 | | |
| ¹ Times in minu | ¹ Times in minutes. | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 1100 | 1020 | 945 | |
| 90/32 | 1015 | 1000 | 880 | |
| 100/38 | 970 | 910 | 845 | |
| 110/43 | 930 | 870 | 810 | |

¹Based on average ice slab weight of 7.5-8.25 lb.

| Air Temp. | Freeze | Cycle | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 50/ -29 to 10 | 190-250 | 40-22 | 160-175 | 65-80 |
| 70/21 | 230-250 | 45-23 | 165-190 | 70-90 |
| 80/27 | 245-275 | 45-26 | 165-190 | 70-95 |
| 90/32 | 245-282 | 50-28 | 180-200 | 70-95 |
| 100/38 | 265-345 | 52-28 | 180-200 | 90-100 |
| 110/43 | 300-360 | 55-28 | 200-220 | 85-110 |

S1470C/CVD1485 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-------------|-----------|-----------------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 |] |
| -20 to 70/ -29 to 21 | 10.8-12.9 | 11.8-14.0 | 12.9-15.3 | |
| 90/32 | 12.3-14.6 | 12.5-14.8 | 14.6-17.3 | .75-2.5 |
| 100/38 | 13.3-15.7 | 14.4-17.0 | 15.6-18.5 | |
| 110/43 | 14.2-16.8 | 15.4-18.3 | 16.7-19.7 | |
| 1Times in minutes | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 1400 | 1300 | 1200 | | |
| 90/32 | 1250 | 1235 | 1075 | | |
| 100/38 | 1170 | 1090 | 1010 | | |
| 110/43 | 1100 | 1020 | 950 | | |

Based on average ice weight of one Harvest cycle 12.0-14.0 lb. (6.0-7.0 lb. per evaporator).

| Air Temp. | Freeze | Cycle | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 235-250 | 60-36 | 140-165 | 70-95 |
| 80/27 | 235-250 | 60-38 | 150-170 | 70-95 |
| 90/32 | 240-275 | 60-38 | 160-180 | 85-95 |
| 100/38 | 285-300 | 65-39 | 170-190 | 90-110 |
| 110/43 | 300-350 | 70-40 | 180-200 | 95-115 |
| 120/49 | 350-410 | 80-40 | 190-215 | 100-125 |
| 130/54 | 380-435 | 85-40 | 195-225 | 105-130 |

S1470C/CVD1486 REMOTE WATER COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------------------|-------------|-----------|-----------------|
| Air Temp. | Air Temp. Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 |
| 35 to 70/ 2 to 21 | 11.3-13.4 | 12.5-14.8 | 13.9-16.5 | |
| 80/27 | 11.3-13.4 | 12.5-14.8 | 14.0-16.6 | .75-2.5 |
| 90/32 | 11.3-13.4 | 12.5-14.9 | 14.1-16.7 | |
| 100/38 | 11.3-13.4 | 12.5-14.9 | 14.1-16.7 | |
| ¹ Times in minutes. | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|----------------------------------|-------------------------|-------|-------|--|
| Around the Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| 35 to 70/ 2 to 21 | 1350 | 1235 | 1120 | |
| 80/27 | 1350 | 1235 | 1115 | |
| 90/32 | 1350 | 1230 | 1110 | |
| 100/38 | 1350 | 1230 | 1110 | |

Based on average ice weight of one Harvest cycle 12.0-14.0 lb. (6.0-7.0 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| 35 to 70/ 2 to 21 | 235-250 | 60-36 | 200-225 | 70-95 |
| 80/27 | 235-255 | 60-38 | 200-225 | 75-95 |
| 90/32 | 240-260 | 60-38 | 205-230 | 80-95 |
| 100/38 | 245-265 | 65-40 | 205-230 | 80-95 |
| 110/43 | 245-265 | 70-40 | 210-235 | 80-100 |

CONDENSER WATER CONSUMPTION

| Condenser | 90/32 Air Temperature Around Ice Machine | | | | |
|--------------|--|------|------|--|--|
| Water | Water Temp. °F/°C 50/10 70/21 90/32 | | | | |
| Consumption | | | | | |
| Gal/24 Hours | 950 | 1700 | 6000 | | |

SD1872C/CVD1885 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-------------|-------------|-----------|-----------------|
| Air Temp. | Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 |
| -20 to 70/ -29 to 21 | 11.1-13.1 | 12.0-13.1 | 13.1-14.3 | |
| 90/32 | 12.8-13.9 | 13.4-14.6 | 15.0-16.4 | .75-2.5 |
| 100/38 | 13.8-15.0 | 14.9-16.2 | 16.2-17.6 | |
| 110/43 | 14.9-16.2 | 16.2-17.6 | 17.6-19.1 | |
| ¹ Times in minu | tes | - | | _ |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 1770 | 1650 | 1530 | | |
| 90/32 | 1565 | 1500 | 1350 | | |
| 100/38 | 1460 | 1360 | 1260 | | |
| 110/43 | 1360 | 1260 | 1170 | | |

Based on average ice weight of one Harvest cycle 15.5-16.75 lb. (7.75-8.38 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. | Freeze | Cycle | Harvest | est Cycle | |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|--|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig | |
| -20 to 70/ -29 to 21 | 215-250 | 60-30 | 140-155 | 65-90 | |
| 80/27 | 215-260 | 60-33 | 140-155 | 65-90 | |
| 90/32 | 240-280 | 60-34 | 145-165 | 65-95 | |
| 100/38 | 250-295 | 60-35 | 150-170 | 65-95 | |
| 110/43 | 290-365 | 60-36 | 160-190 | 75-100 | |
| 120/49 | 300-380 | 60-37 | 170-200 | 80-110 | |

SY1874C/CVD1885 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-------------------------|-----------|---------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Water Temperature °F/°C | | | |
| °F/°C | 50/10 | 70/21 | 90/32 | Time | |
| -20 to 70/ -29 to 21 | 10.7-11.7 | 11.7-12.8 | 12.8-14.0 | | |
| 90/32 | 12.2-13.3 | 12.9-14.1 | 14.7-16.0 | .75-2.5 | |
| 100/38 | 13.1-14.3 | 14.4-15.7 | 15.9-17.3 | | |
| 110/43 | 14.2-15.5 | 15.6-17.0 | 17.2-18.7 | | |
| ¹ Times in minutes. | | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 1825 | 1690 | 1560 | | |
| 90/32 | 1625 | 1550 | 1375 | | |
| 100/38 | 1525 | 1405 | 1285 | | |
| 110/43 | 1420 | 1305 | 1195 | | |

Based on average ice weight of one Harvest cycle 15.5-16.75 lb. (7.75-8.38 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 215-250 | 60-30 | 140-155 | 65-90 |
| 80/27 | 215-260 | 60-33 | 140-155 | 65-90 |
| 90/32 | 240-280 | 60-34 | 145-165 | 65-95 |
| 100/38 | 250-295 | 60-35 | 150-170 | 65-95 |
| 110/43 | 290-365 | 60-36 | 160-190 | 75-100 |
| 120/49 | 300-380 | 60-37 | 170-200 | 80-110 |

SD2072C/CVD2075 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | |
|---|-----------|-----------------|-----------|---------|
| Air Temp. | | Freeze Time | | |
| Entering Condenser | Water | Harvest Time | | |
| °F/°C | 50/10 | 70/21 | 90/32 | 10 |
| -20 to 70/ -29 to 21 | 9.2-10.1 | 10.2-11.2 | 11.4-12.4 | |
| 90/32 | 10.1-11.0 | 10.6-11.5 | 12.4-13.5 | .75-2.5 |
| 100/38 | 10.6-11.6 | 11.6-12.7 | 12.9-14.1 | |
| 110/43 | 11.1-12.1 | 12.2-13.3 | 13.5-14.7 | |
| 1Times in minu | toc | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 2080 | 1905 | 1735 | | |
| 90/32 | 1925 | 1850 | 1610 | | |
| 100/38 | 1845 | 1700 | 1545 | | |
| 110/43 | 1770 | 1625 | 1485 | | |

Based on average ice weight of one Harvest cycle 15.5-16.75 lb. (7.75-8.38 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 205-245 | 30-16 | 130-175 | 45-60 |
| 80/27 | 230-250 | 30-18 | 185-200 | 50-65 |
| 90/32 | 230-275 | 35-18 | 185-200 | 50-65 |
| 100/38 | 240-290 | 35-19 | 190-210 | 50-70 |
| 110/43 | 310-380 | 38-20 | 200-240 | 60-80 |
| 120/49 | 320-390 | 40-22 | 225-240 | 70-80 |

SY2074C/CVD2075 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|--------------------------------|-------------|-----------|-----------------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time | |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 | |
| -20 to 70/ -29 to 21 | 8.8-9.6 | 9.7-10.6 | 10.8-11.8 | | |
| 90/32 | 9.7-10.7 | 10.0-10.9 | 11.7-12.8 | .75-2.5 | |
| 100/38 | 10.3-11.3 | 11.2-12.2 | 12.2-13.3 | | |
| 110/43 | 10.9-11.9 | 11.8-12.9 | 12.8-14.0 | | |
| ¹ Times in minu | ¹ Times in minutes. | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | |
|--------------------------------|-------|-------------------------|-------|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | |
| -20 to 70/ -29 to 21 | 2170 | 1995 | 1810 | | |
| 90/32 | 1985 | 1945 | 1690 | | |
| 100/38 | 1890 | 1760 | 1625 | | |
| 110/43 | 1800 | 1680 | 1560 | | |

Based on average ice weight of one Harvest cycle 15.5-16.75 lb. (7.75-8.38 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. | Freeze Cycle | | Harvest | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 205-245 | 30-16 | 130-175 | 45-60 |
| 80/27 | 230-250 | 30-18 | 185-200 | 50-65 |
| 90/32 | 230-275 | 35-18 | 185-200 | 50-65 |
| 100/38 | 240-290 | 35-19 | 190-210 | 50-70 |
| 110/43 | 310-380 | 38-20 | 200-240 | 60-80 |
| 120/49 | 320-390 | 40-22 | 225-240 | 70-80 |

SD2172C/CVD2085 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-------------------------|-----------|---------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Water Temperature °F/°C | | | |
| °F/°C | 50/10 | 70/21 | 90/32 | Time | |
| -20 to 70/ -29 to 21 | 10.2-11.2 | 11.2-12.2 | 12.3-13.4 | | |
| 90/32 | 11.6-12.6 | 11.8-12.9 | 13.8-15.0 | .75-2.5 | |
| 100/38 | 12.4-13.5 | 13.4-14.6 | 14.6-15.9 | | |
| 110/43 | 13.3-14.5 | 14.4-15.7 | 15.6-17.0 | | |
| 1Times in minu | toc | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 1905 | 1706 | 1615 | |
| 90/32 | 1705 | 1675 | 1460 | |
| 100/38 | 1605 | 1495 | 1385 | |
| 110/43 | 1505 | 1405 | 1305 | |

Based on average ice weight of one Harvest cycle 15.5-16.75 lb. (7.75-8.38 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. | Freeze | Freeze Cycle | | Cycle |
|--------------------------------|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| Entering Condenser °F/°C | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 230-250 | 40-20 | 150-170 | 60-80 |
| 80/27 | 255-230 | 40-21 | 155-170 | 60-80 |
| 90/32 | 260-235 | 40-21 | 160-180 | 65-80 |
| 100/38 | 325-260 | 40-21 | 165-185 | 75-85 |
| 110/43 | 380-320 | 46-23 | 180-205 | 90-100 |
| 120/49 | 390-330 | 48-24 | 190-210 | 95-110 |

SY2174C/CVD2085 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-------------|-----------|-----------------|--|
| Air Temp. | | Freeze Time | | | |
| Entering Condenser | Water | Temperature | °F/°C | Harvest Time | |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 | |
| -20 to 70/ -29 to 21 | 9.7-10.6 | 10.6-11.5 | 11.5-12.6 | | |
| 90/32 | 11.0-12.1 | 11.2-12.2 | 13.0-14.2 | .75-2.5 | |
| 100/38 | 11.8-12.9 | 12.8-14.0 | 14.0-15.3 | | |
| 110/43 | 12.8-13.9 | 13.8-15.0 | 15.0-16.4 | | |
| ¹ Times in minutes. | | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Wate | Water Temperature °F/°C | | | | |
|--------------------------------|-------|-------------------------|-------|--|--|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | | | |
| -20 to 70/ -29 to 21 | 1990 | 1850 | 1715 | | | |
| 90/32 | 1780 | 1755 | 1535 | | | |
| 100/38 | 1675 | 1560 | 1440 | | | |
| 110/43 | 1565 | 1460 | 1350 | | | |

Based on average ice weight of one Harvest cycle 15.5-16.75 lb. (7.75-8.38 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. Entering Condenser °F/°C | Freeze Cycle | | Harvest Cycle | |
|---|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 230-250 | 40-20 | 150-170 | 60-80 |
| 80/27 | 255-230 | 40-21 | 155-170 | 60-80 |
| 90/32 | 260-235 | 40-21 | 160-180 | 65-80 |
| 100/38 | 325-260 | 40-21 | 165-185 | 75-85 |
| 110/43 | 380-320 | 46-23 | 180-205 | 90-100 |
| 120/49 | 390-330 | 48-24 | 190-210 | 95-110 |

SD3072C/CVD3085 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-----------------|-----------|----------|--|
| Air Temp. Entering Condenser °F/°C | | | | | |
| | Water | Harvest Time | | | |
| | 50/10 | 70/21 | 90/32 | 1 | |
| -20 to 70/ -29 to 21 | 10.9-12.4 | 11.8-13.4 | 12.6-14.3 | | |
| 90/32 | 12.3-14.0 | 13.4-15.4 | 14.5-16.5 | 0.75-2.5 | |
| 100/38 | 13.2-15.0 | 14.5-16.5 | 15.7-17.8 | | |
| 110/43 | 14.5-16.5 | 16.1-18.3 | 17.6-19.9 | | |
| ¹ Times in minu | tes | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. | Water Temperature °F/°C | | | |
|--------------------------------|-------------------------|-------|-------|--|
| Entering Condenser °F/°C | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 2850 | 2650 | 2500 | |
| 90/32 | 2550 | 2350 | 2200 | |
| 100/38 | 2400 | 2200 | 2050 | |
| 110/43 | 2200 | 2000 | 1850 | |

Based on average ice weight of one Harvest cycle 24.5-27.5 lb. (6.38-7.13 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. Entering Condenser °F/°C | Freeze Cycle | | Harvest Cycle | |
|---|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 250-220 | 48-30 | 135-150 | 70-85 |
| 80/27 | 300-240 | 50-30 | 145-170 | 70-90 |
| 90/32 | 320-280 | 55-32 | 165-190 | 80-100 |
| 100/38 | 350-310 | 60-33 | 180-200 | 90-110 |
| 110/43 | 400-350 | 65-35 | 180-210 | 100-115 |

During low ambient conditions, it is normal for the head pressure control valve to hunt (fluctuate up and down) on CVD condensing units. Hunting varies by model and ambient temperature, but generally settles out within the first 6 minutes of the freeze cycle

NOTE: CVD3085 Models - Verify the direction of rotation correct is correct on the 3ph scroll compressor. The ice machine will have high suction pressure, low discharge pressure and will be noticeably loud. Reverse any two incoming power leads to reverse rotation.

SY3074C/CVD3085 SERIES REMOTE AIR COOLED

NOTE: These characteristics may vary depending on operating conditions.

CYCLE TIMES

| Freeze Time + Harvest Time = Cycle Time | | | | | |
|---|-----------|-----------------|-----------|----------|--|
| Air Temp. Entering Condenser | | Harvest Time | | | |
| | Water | | | | |
| °F/°C | 50/10 | 70/21 | 90/32 | 111110 | |
| -20 to 70/ -29 to 21 | 10.6-12.1 | 11.2-12.8 | 12.6-14.3 | | |
| 90/32 | 11.8-13.4 | 13.1-14.9 | 14.8-16.8 | 0.75-2.5 | |
| 100/38 | 12.5-14.2 | 14.0-15.9 | 16.0-18.1 | | |
| 110/43 | 13.4-15.3 | 15.1-17.2 | 17.5-19.8 | | |
| ¹ Times in minutes | | | | | |

24-HOUR ICE PRODUCTION

| Air Temp. Entering Condenser °F/°C | Water Temperature °F/°C | | | |
|---|-------------------------|-------|-------|--|
| | 50/10 | 70/21 | 90/32 | |
| -20 to 70/ -29 to 21 | 2910 | 2770 | 2510 | |
| 90/32 | 2660 | 2420 | 2160 | |
| 100/38 | 2520 | 2280 | 2020 | |
| 110/43 | 2360 | 2120 | 1860 | |

Based on average ice weight of one Harvest cycle 24.5-27.5 lb. (6.38-7.13 lb. per evaporator).

OPERATING PRESSURES

| Air Temp. Entering Condenser °F/°C | Freeze Cycle | | Harvest Cycle | |
|---|-------------------------------|-----------------------------|-------------------------------|-----------------------------|
| | Discharge Pressure psig | Suction Pressure psig | Discharge Pressure psig | Suction Pressure psig |
| -20 to 70/ -29 to 21 | 250-220 | 48-30 | 135-150 | 70-85 |
| 80/27 | 300-240 | 50-30 | 145-170 | 70-90 |
| 90/32 | 320-280 | 55-32 | 165-190 | 80-100 |
| 100/38 | 350-310 | 60-33 | 180-200 | 90-110 |
| 110/43 | 400-350 | 65-35 | 180-210 | 100-115 |

During low ambient conditions, it is normal for the head pressure control valve to hunt (fluctuate up and down) on CVD condensing units. Hunting varies by model and ambient temperature, but generally settles out within the first 6 minutes of the freeze cycle

NOTE: CVD3085 Models - Verify the direction of rotation correct is correct on the 3ph scroll compressor. The ice machine will have high suction pressure, low discharge pressure and will be noticeably loud. Reverse any two incoming power leads to reverse rotation.

Diagrams

Wiring Diagrams

The following pages contain electrical wiring diagrams. Be sure you are referring to the correct diagram for the ice machine you are servicing.



Always disconnect power before working on electrical circuitry.

WIRING DIAGRAM LEGEND

The following symbols are used on all of the wiring diagrams:

* Internal Compressor Overload (Some models have external

compressor overloads)

** Fan Motor Run Capacitor

(Some models do not incorporate fan

motor run capacitor)

() Wire Number Designation

(The number is marked at each end of


the wire)

-->>- Multi-Pin Connection

(Electrical Box Side) ->>-

(Compressor Compartment Side)


S600C/S850C/1000C/S1200C Ice Machine Head Section

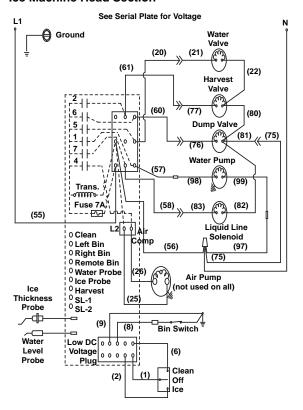


S600C/S680C/S850C/1000C/S1200C

Ice Machine Head Section


Air Pump wired with the Harvest Valve

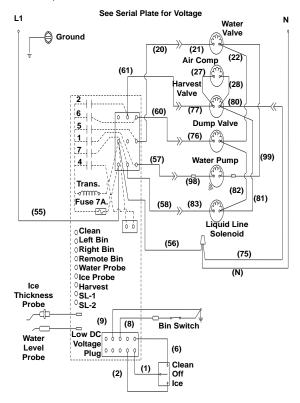


S1470C/S1870C/S2070C/S2170C

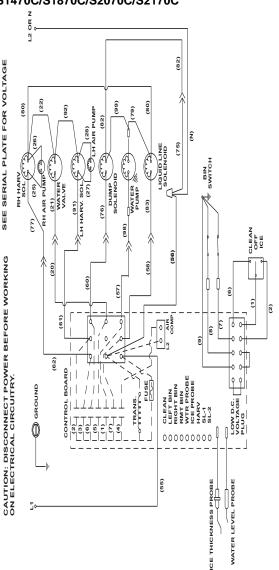

S3070C 115/60/1

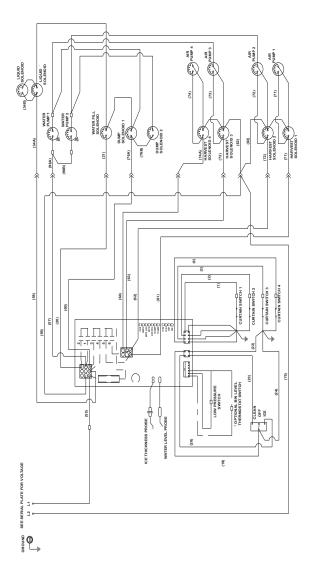


S3070C 230V/50HZ/1PH

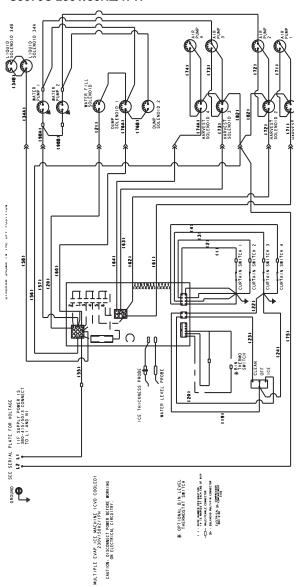


IB0600C/IB0800C/IB1000C WITH S CONTROL BOARD AND ELECTRONIC BIN THERMOSTAT

Ice Machine Head Section

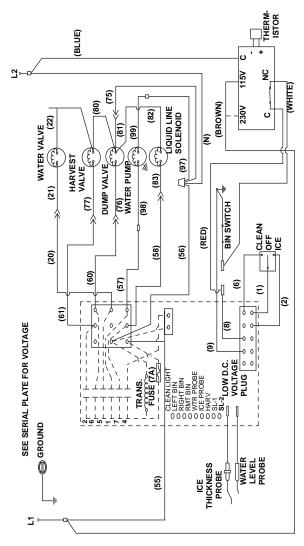


IB0600C/IB0680C/IB0800C/IB1000C WITH AIR ASSIST/S CONTROL BOARD/ ELECTRONIC BIN THERMOSTAT


Ice Machine Head Section

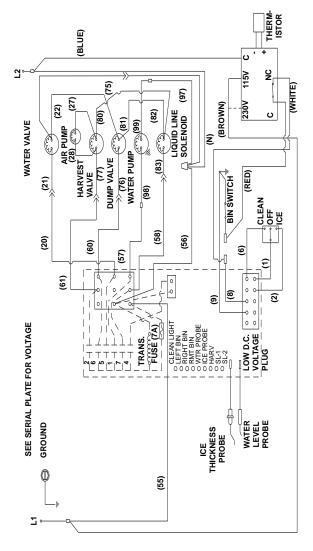


CVD675/CVD685/CVD885/CVD1075/CVD1085/ CVD1185/CVD1285/CVD1485/CVD1486/CVD1885/ CVD2075/CVD3085 -1 PHASE

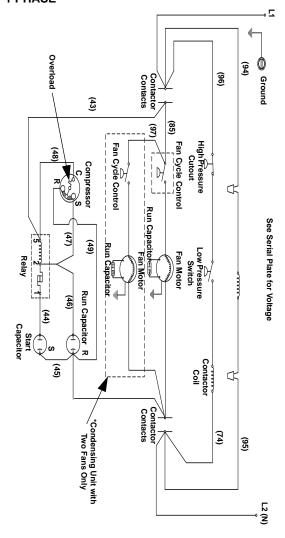


CVD2085 WITHOUT PTCR-1 PHASE

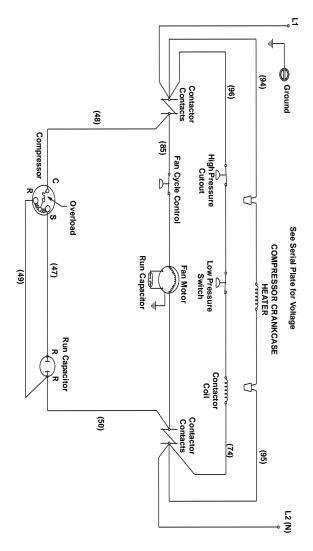


CVD2085 WITH PTCR-1 PHASE

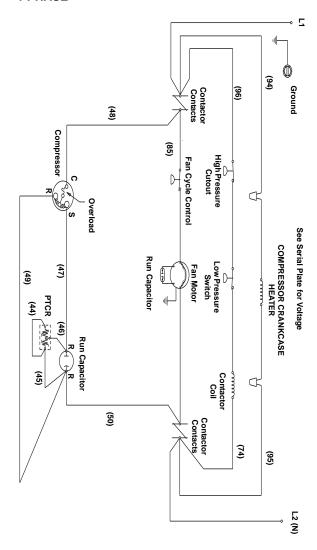

CVD675/CVD685/CVD885/CVD1075/CVD1085/ CVD1185/CVD1285/CVD1485/CVD1486/CVD1885/ CVD2075/CVD2085/CVD3085 - 3 PHASE

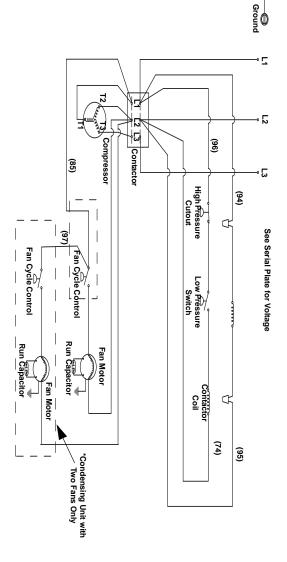


CVD3085 380V/50HZ/3PH

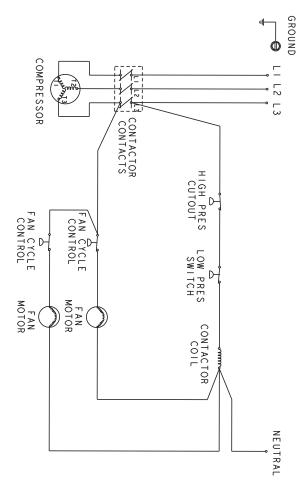


Electronic Control Board

SINGLE AND TWIN EVAPORATOR MODELS Without Test Button

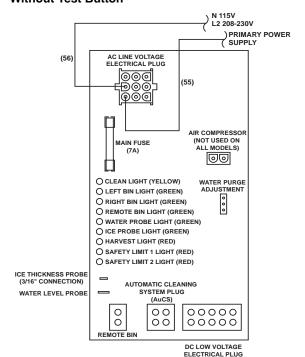


(BIN SWITCH(ES)& TOGGLE SWITCH)

Single and Twin Evaporator With Test Button

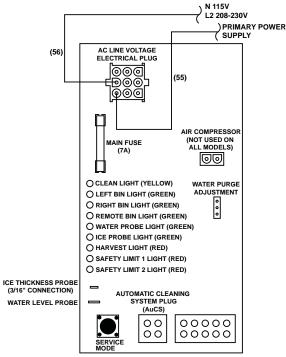

DC LOW VOLTAGE ELECTRICAL PLUG (BIN SWITCH(ES)& TOGGLE SWITCH)

QUAD EVAPORATOR MODELS

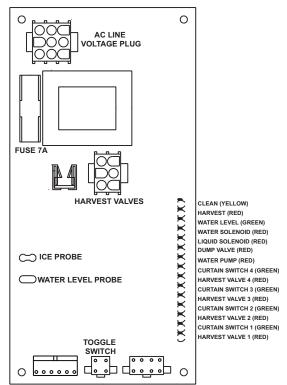


LOW PRESSURE SWITCH CURTAIN SWITCHES &
OPTIONAL BIN THERMOSTAT

Refrigeration Tubing Schematics


S600C/S680C/S850C/S1000C/S1200C

Without Check Valve

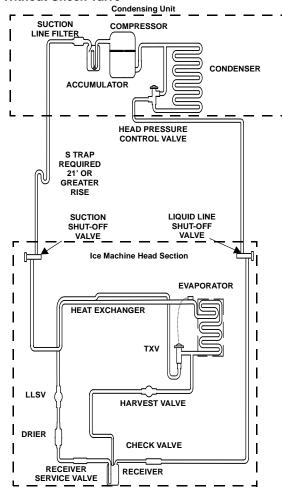


S600C/S680C/S850C/S1000C/S1200C

With Check Valve

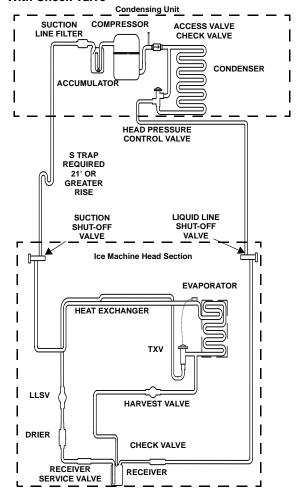


ICE BEVERAGE IB0600C/IB0680C/IB0800C/IB1000C

Without Check Valve

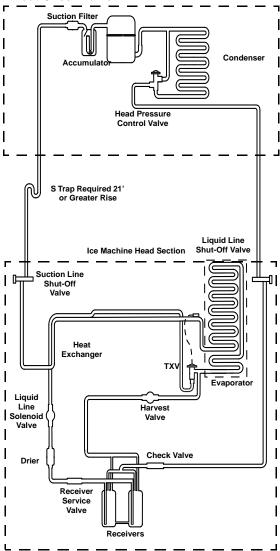


ICE BEVERAGE IB0600C/IB0680C/IB0800C/IB1000C


With Check Valve

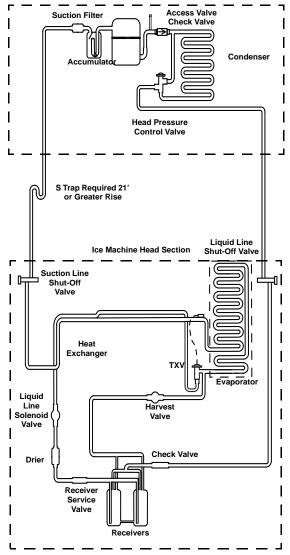


S1470C/S1870C/S2070C/S2170C

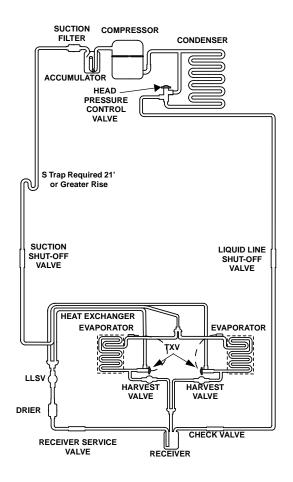


S1470C/S1870C/S2070C/S2170C Without Check Valve

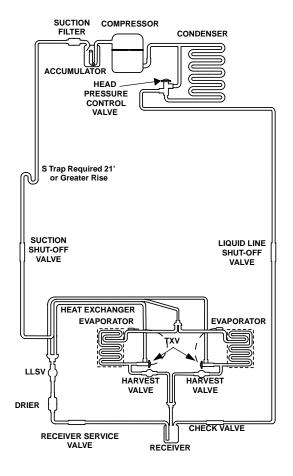


S1476C Water-Cooled Condenser

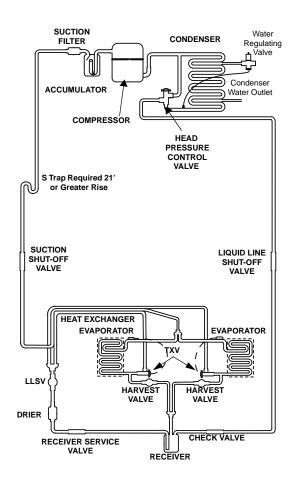

S3070C Without Check Valve

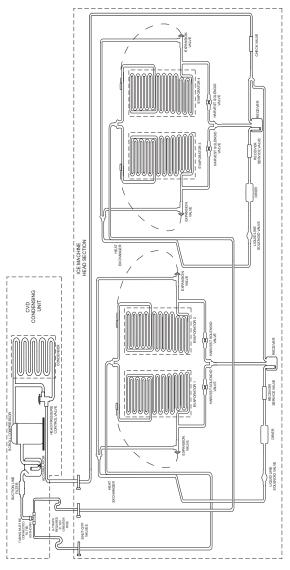

S3070C WITH CHECK VALVE

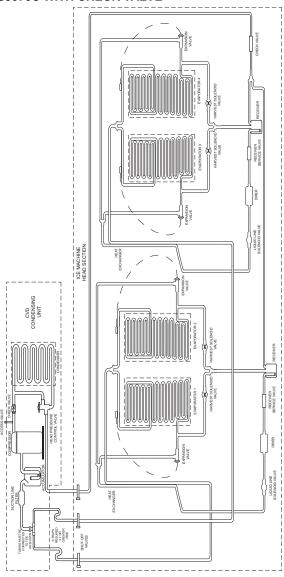

This Page Intentionally Left Blank



Manitowoc Ice 2110 South 26th Street, P.O. Box 1720 Manitowoc, WI 54221-1720, USA Ph: 920-682-0161 Fax: 920-683-7589 Visit us online at: www.manitowocice.com